


R&S[®] SMW-K47/-K87

1xEV-DO Rev. A, Rev. B

User Manual

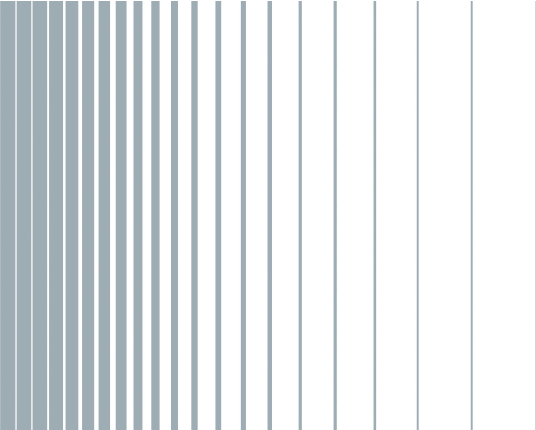

This document describes the following software options:

- R&S®SMW-K47/-K87
1413.3932.xx, 1413.6519.xx

This manual describes firmware version FW 4.70.026.xx and later of the R&S®SMW200A.

Contents

1	Preface	5
1.1	About this Manual	5
1.2	Documentation Overview	5
1.2.1	Getting Started Manual.....	5
1.2.2	User Manuals and Help.....	6
1.2.3	Tutorials.....	6
1.2.4	Service Manual.....	6
1.2.5	Instrument Security Procedures.....	6
1.2.6	Basic Safety Instructions.....	6
1.2.7	Data Sheets and Brochures.....	7
1.2.8	Release Notes and Open Source Acknowledgment (OSA).....	7
1.2.9	Application Notes, Application Cards, White Papers, etc.....	7
2	Welcome to the 1xEV-DO Digital Standard	8
2.1	Accessing the 1xEV-DO Dialog	9
2.2	Scope	9
2.3	Notes on Screenshots	9
3	About the 1xEV-DO Options	10
3.1	Required Options	10
3.2	Modulation System	10
3.3	Traffic Scheduling Process	11
4	1xEV-DO Configuration and Settings	13
4.1	General Settings	13
4.2	Trigger Settings	16
4.3	Marker Settings	20
4.4	Clock Settings	22
4.5	Local and Global Connector Settings	23
4.6	Traffic Channel Settings	24
4.7	Multi-Carrier Configuration Settings	36
4.8	Access Network Settings	38
4.9	Access Terminal Settings	43

4.10	Filter / Clipping / ARB Settings.....	58
4.10.1	Filter Settings.....	59
4.10.2	Clipping Settings.....	60
4.10.3	ARB Settings.....	61
4.10.4	I/Q Setting.....	62
5	Remote-Control Commands.....	64
5.1	Programming Examples.....	65
5.2	General Commands.....	68
5.3	Filter/Clipping/ARB Commands.....	71
5.4	Trigger Commands.....	76
5.5	Marker Commands.....	80
5.6	Clock Commands.....	82
5.7	Access Network Commands.....	82
5.8	Multi-Carrier Configuration Commands.....	87
5.9	Configure Traffic User Commands.....	89
5.10	Configure Access Terminal Commands.....	99
	List of Commands.....	121
	Index.....	125

1 Preface

1.1 About this Manual

This User Manual provides all the information **specific to the digital standard 1xEV-DO Rev. A, Rev. B**. All general instrument functions and settings common to all applications and operating modes are described in the main R&S SMW User Manual.

The main focus in this manual is on the provided settings and the tasks required to generate a signal. The following topics are included:

- **Welcome to the 1xEV-DO options R&S SMW-K47/-K87.**
Introduction to and getting familiar with the option
- **About 1xEV-DO**
Background information on basic terms and principles in the context of the signal generation
- **1xEV-DO Configuration and Settings**
A concise description of all functions and settings available to configure signal generation with their corresponding remote control command
- **Remote Control Commands**
Remote commands required to configure and generate signals in a remote environment, sorted by tasks
(Commands required to set up the instrument or to perform common tasks on the instrument are provided in the main R&S SMW User Manual)
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes
- **List of remote commands**
Alphabetical list of all remote commands described in the manual
- **Index**

1.2 Documentation Overview

This section provides an overview of the R&S SMW user documentation. Unless specified otherwise, you find the documents on the R&S SMW product page at:

www.rohde-schwarz.com/manual/smw200a

1.2.1 Getting Started Manual

Introduces the R&S SMW and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

1.2.2 User Manuals and Help

Separate manuals for the base unit and the software options are provided for download:

- **Base unit manual**
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- **Software option manual**
Contains the description of the specific functions of an option. Basic information on operating the R&S SMW is not included.

The contents of the user manuals are available as help in the R&S SMW. The help offers quick, context-sensitive access to the complete information for the base unit and the software options.

All user manuals are also available for download or for immediate display on the Internet.

1.2.3 Tutorials

The R&S SMW provides interactive examples and demonstrations on operating the instrument in form of tutorials. A set of tutorials is available directly on the instrument.

1.2.4 Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, <https://gloris.rohde-schwarz.com>).

1.2.5 Instrument Security Procedures

Deals with security issues when working with the R&S SMW in secure areas. It is available for download on the Internet.

1.2.6 Basic Safety Instructions

Contains safety instructions, operating conditions and further important information. The printed document is delivered with the instrument.

1.2.7 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S SMW. It also lists the options and their order numbers and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/smw200a

1.2.8 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/smw200a

1.2.9 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/smw200a and www.rohde-schwarz.com/manual/smw200a

2 Welcome to the 1xEV-DO Digital Standard

The R&S SMW-K47/-K87 is a firmware application that adds functionality to generate signals in accordance to the CDMA2000® 1xEV-DO (Evolution-Data Optimized), Rev. A and Rev. B.

CDMA2000® 1xEV-DO is the North American standard for the third mobile radio generation (3G). CDMA2000® 1xEV-DO is a high-speed packet-switched transmission technique with forward peak data rates of 4.9152 Mbps per carrier, designed and optimized for a data-centric broadband network.

The R&S SMW simulates 1xEV-DO signal at the physical layer. In forward link (downlink) mode, the signal is generated in real time. Parameter changes during active signal output take effect immediately without signal interruption. In reverse link (uplink) mode, the signal is precalculated and played from the ARB memory. Parameter changes result in a recalculation of the signal.

The following list gives an overview of the main feature provided by the R&S SMW for generating an 1xEV-DO signal in accordance with 3GPP2 C.S0024-B.v3.0.

- Generation of 1xEV-DO signals with a chip rate of 1.2288 Mcps
- Independent configuration of up to four traffic channels or four access terminals
- Support of physical layer subtypes 0, 1, 2 and 3
- Support of multi-carrier operation with up to 16 simultaneous carriers
- Operating modes "Traffic" and "Access" on the uplink
- Simulation of up to 360 additional MAC users
- Generation of standard compliant forward/downlink and reverse/uplink channel types
- Supports configuration of public data as defined in the standard, such as Long Code Masks for I and Q channel, Preamble Length, DRCLength.
- Filling the data files for data channels from the following standard sources: pattern (all1, all0, user-defined up to 64 bits), PN data or data lists
- Clipping for reducing the crest factor

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S SMW user manual. The latest version is available at:

www.rohde-schwarz.com/manual/SMW200A

Installation

You can find detailed installation instructions in the delivery of the option or in the R&S SMW service manual.

2.1 Accessing the 1xEV-DO Dialog

To open the dialog with 1xEV-DO settings

- ▶ In the block diagram of the R&S SMW, select "Baseband > 1xEV-DO".

A dialog box opens that display the provided general settings.

The signal generation is not started immediately. To start signal generation with the default settings, select "State > On".

2.2 Scope



Tasks (in manual or remote operation) that are also performed in the base unit in the same way are not described here.

In particular, it includes:

- Managing settings and data lists, like storing and loading settings, creating and accessing data lists, or accessing files in a particular directory.
- Information on regular trigger, marker and clock signals and filter settings, if appropriate.
- General instrument configuration, such as checking the system configuration, configuring networks and remote operation
- Using the common status registers

For a description of such tasks, see the R&S SMW user manual.

2.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

3 About the 1xEV-DO Options

This section provides an overview of required options and background information on the CDMA2000® 1xEV-DO standard.

3.1 Required Options

The basic equipment layout for generating 1xEV-DO signals includes the:

- Standard or wideband Baseband Generator (R&S SMW-B10/-B9)
- Baseband main module (R&S SMW-B13) or wideband baseband main module (R&S SMW-B13XT)
- Frequency option (e.g. R&S SMW-B1003)
- Digital standard 1xEV-DO Rev. A (R&S SMW-K47)
- Digital standard 1xEV-DO Rev. B (R&S SMW-K87)

To play back a signal from a waveform file created by the simulation software R&S WinIQSIM2, the corresponding R&S WinIQSIM2 digital standard option must be installed.

For more information, see data sheet.

3.2 Modulation System

The following table gives an overview of parameters of the modulation system 1xEV-DO.

Table 3-1: Parameters of the modulation system 1xEV-DO

Parameter	Value
Chip rate	1.2288 Mcps
Channel types	Forward link: <ul style="list-style-type: none"> • Pilot channel • Forward Traffic Channel (Rev. A) • Reverse Activity • DRCLock • Reverse Power Control • ARQ (Rev. A) • Control Channel Reverse link, access mode: <ul style="list-style-type: none"> • Pilot Channel • Data Channel Reverse link, traffic mode: <ul style="list-style-type: none"> • Pilot Channel • Auxiliary Pilot Channel (Rev. A) • Reverse Rate Indicator • Data Rate Control • Data Source Control (Rev. A) • ACK Channel • Data Channel

Parameter	Value
Generation mode	Forward link: <ul style="list-style-type: none"> • Realtime mode Reverse link: <ul style="list-style-type: none"> • Arbitrary waveform mode • Multicarrier operation Up to 16 concurrent carriers supported Requires option R&S SMW-K87
Data rates	Forward link: <ul style="list-style-type: none"> • 38.4 .. 2457.6 kbps (Rev. 0) • 4.8 .. 3072 kbps (Rev. A) • 4.8 .. 4915 kbps (Rev. B) Requires option R&S SMW-K87 Reverse link: <ul style="list-style-type: none"> • 9.6 .. 153.6 kbps (Rev. 0) • 4.8 .. 1843.2 kbps (Rev. A)
Frame length	26.67 ms (1 frame = 16 slots)
Slot duration	1.67 ms (1 slot = 2048 PN chips)
PN offset	0 .. 511
Channel coding	All channel coding modes defined in the standard (channel encoding, block interleaving, repetition, modulation, orthogonal spreading by Walsh function)
Modulation	BPSK, QPSK, 8PSK, 16QAM, 64QAM Requires option R&S SMW-K87
Multi-code modulation	B4, Q2, Q4, Q4Q2, E4E2
Long Code Mask	Separate Long Code Masks for I and Q channel. The Long Code Generator is reloaded at every PN rollover with 0x24B91BFD3A8.
Walsh covers	Different Walsh functions for the different channels

3.3 Traffic Scheduling Process

In the 1xEV-DO system, the Forward Link is governed by a time division multiple access technique. Access to Forward Link bandwidth by a user channel is governed by a scheduling process. The schedule process determines who gets access to Forward Link slots to carry user data.

The traffic scheduling process in this instrument follows a number of rules to schedule which user's data is sent for each slot.

The rules are listed in order of priority, with the highest priority rules being listed first. In the event that two rules contradict each other, the circumstances invoking the lower priority rule must be altered to resolve the contradiction.

- A channel with "State = Off" is never transmitted.
- The first slot of the control channel packet is always transmitted at its specified offset at the start of the control channel cycle.

- Once the first slot of a multiple slot packet is sent, the remaining slots are always transmitted with the proper interlace (three slots skipped after one slot sent).
- Packets for a user can be transmitted on 1 to 4 interlaces (there are a total of 4 interlaces in the 1xEV-DO system). Packets on the different interlaces are duplicates of the packets sent on the other interlaces for a given user. The interleave factor user interface parameter is used to control the number of interlaces used for each user.
- Immediately after the transmission of the last slot of a multiple slot packet, a lock-out period of three slots is created. No additional packets from the same source can be scheduled before the three slot period expires.
- A control channel packet has priority over all other traffic channels. This excludes transmission of user channels in advance of the control channel packet, if the other channel would require a slot that the control channel packet would require.
- User1 traffic has priority over User2, User3, and User4 traffic.
- User2 traffic has priority over User3 and User4 traffic.
- User3 traffic has priority over User4 traffic.
- If no traffic is scheduled for a slot, an idle slot is transmitted.

4 1xEV-DO Configuration and Settings


Access:

- ▶ Select "Baseband > 1xEV-DO".

The remote commands required to define these settings are described in [Chapter 5, "Remote-Control Commands"](#), on page 64.

4.1 General Settings

The tab provides access to the default and the "Save/Recall" settings. The selected link direction determines the available parameters.

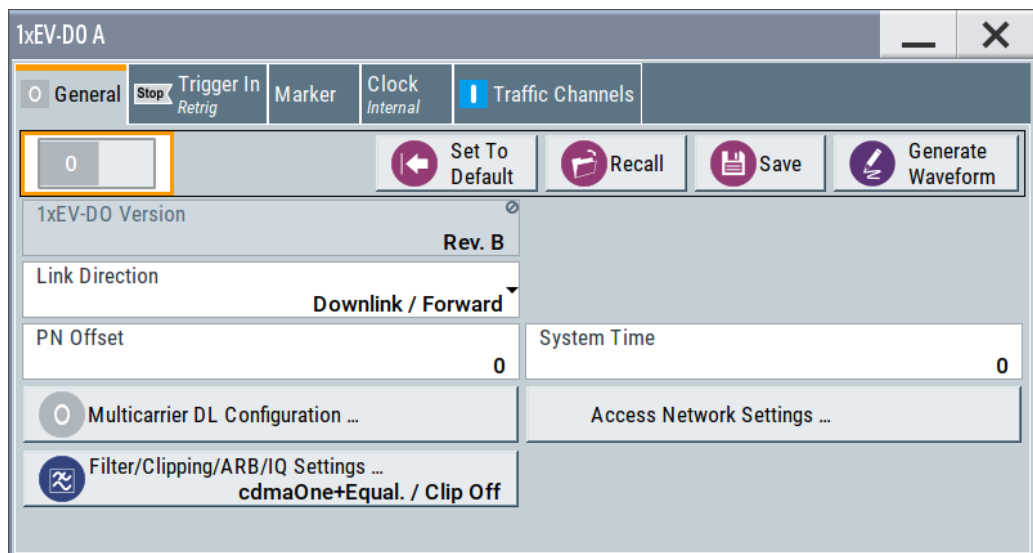

State.....	13
Set To Default.....	14
Save/Recall.....	14
Generate Waveform.....	14
1xEV-DO Version.....	15
Link Direction.....	15
PN Offset.....	15
System Time.....	15
Multicarrier Configuration.....	15
Access Network Settings.....	15
Filter / Clipping / ARB Settings.....	15

State

Activates the standard and deactivates all the other digital standards and digital modulation modes in the same path.

Remote command:

[:SOURce<hw>] :BB:EVDO:STATe on page 70

Set To Default

Calls the default settings. The values of the main parameters are listed in the following table.

Parameter	Value
State	Not affected by "Set to default"
Link Direction	Downlink/ Forward
PN Offset	0
System Time	0
Predefined Settings	User Defined
Multicarrier State	off
Filter	CdmaOne + Equalizer
Clipping	Off
Trigger	Auto
Clock	Internal

Remote command:

[:SOURce<hw>] :BB:EVDO:PRESet on page 68

Save/Recall

Accesses the "Save/Recall" dialog, that is the standard instrument function for saving and recalling the complete dialog-related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The filename and the directory, in which the settings are stored, are user-definable; the file extension is however predefined.

See also, chapter "File and Data Management" in the R&S SMW user manual.

Remote command:

[:SOURce<hw>] :BB:EVDO:SETTing:CATalog? on page 69

[:SOURce<hw>] :BB:EVDO:SETTing:LOAD on page 69

[:SOURce<hw>] :BB:EVDO:SETTing:STORe on page 69

[:SOURce<hw>] :BB:EVDO:SETTing:DELeTe on page 69

Generate Waveform

With enabled signal generation, triggers the instrument to store the current settings as an ARB signal in a waveform file. Waveform files can be further processed by the ARB and/or as a multi-carrier or a multi-segment signal.

The filename and the directory it is stored in are user-definable; the predefined file extension for waveform files is *.wv.

Remote command:

[:SOURce<hw>] :BB:EVDO:WAVEform:CREate on page 71

1xEV-DO Version

Displays the current version of the standard.

The default settings and parameters provided are oriented towards the specifications of the version displayed.

Remote command:

[:SOURce<hw>] :BB:EVDO:VERSion? on page 71

Link Direction

Selects the link direction.

The settings of the traffic channels per user and the access terminals are provided in the following menu section in accordance with the selection.

"Downlink/Forward"

The link direction selected is base station to access terminal. The signal corresponds to that of a base station.

"Uplink/Reverse"

The link direction selected is access terminal to base station. The signal corresponds to that of an access terminal.

Remote command:

[:SOURce<hw>] :BB:EVDO:LINK on page 68

PN Offset

Sets the PN Offset of the 1xEV-DO signal.

Remote command:

[:SOURce<hw>] :BB:EVDO:PNOffset on page 68

System Time

Sets the system time value of the 1xEV-DO signal and the base station. The system time is expressed in units of 1.67 ms intervals (80 ms/ 48).

Note: In uplink, the value selected for system time must be multiple of 16.

Remote command:

[:SOURce<hw>] :BB:EVDO:STIME on page 70

Multicarrier Configuration

Provides access to the "Multicarrier Configuration" dialog, see [Chapter 4.7, "Multi-Carrier Configuration Settings"](#), on page 36.

Access Network Settings

In downlink direction, provides access to the "Access Network Settings" dialog, see [Chapter 4.8, "Access Network Settings"](#), on page 38.

Filter / Clipping / ARB Settings

Provides access to the settings dialogs for configuring baseband filtering, clipping and the sequence length of the arbitrary waveform component, see [Chapter 4.10, "Filter / Clipping / ARB Settings"](#), on page 58.

4.2 Trigger Settings

Access:


- ▶ Select "Baseband > 1xEV-DO > Trigger In".

This tab provides access to the settings necessary to select and configure the trigger, like trigger source, mode, trigger delay, trigger suppression, as well as to arm or trigger an internal trigger manually. The current signal generation status is displayed in the header of the tab together with information on the enabled trigger mode. As in the "Marker" and "Clock" tabs, this tab provides also access to the settings of the related connectors.



This section focuses on the available settings.

For information on how these settings affect the signal, refer to section "Basics on ..." in the R&S SMW user manual.

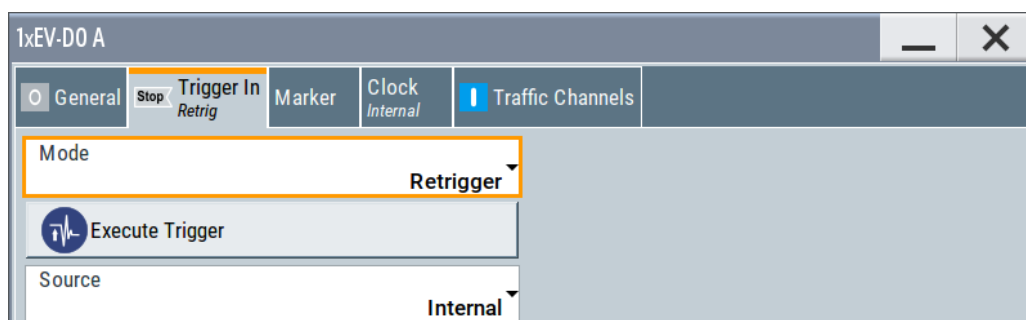

Routing and enabling a trigger

The provided trigger signals are not dedicated to a particular connector. Trigger signals can be mapped to one or more USER x or T/M connectors.

Use the [Local and Global Connector Settings](#) to configure the signal mapping, the polarity, the trigger threshold and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source and the effect of a trigger event. Select the "Trigger In > Mode" and "Trigger In > Source".
- Define the connector where the selected signal is provided. Use the "Global Connectors" settings.

Settings:

Trigger Settings Common to All Basebands	17
Trigger Mode	17
Signal Duration Unit	17
Trigger Signal Duration	18
Running/Stopped	18

Arm.....	18
Execute Trigger.....	18
Trigger Source.....	18
Sync. Output to External Trigger/Sync. Output to Trigger.....	19
External Trigger Inhibit.....	20
Trigger Delay.....	20

Trigger Settings Common to All Basebands

To enable simultaneous signal generation in all basebands, the R&S SMW couples the trigger settings in the available basebands in any instrument's configuration involving signal routing with signal addition. For example, in MIMO configuration, routing and summing of basebands or of streams.

The icon  indicates that common trigger settings are applied.

You can access and configure the common trigger source and trigger mode settings in any of the basebands. An arm or a restart trigger event applies to all basebands, too. You can still apply different delay to each of the triggers individually.

Trigger Mode

Selects trigger mode, i.e. determines the effect of a trigger event on the signal generation.

For more information, refer to chapter "Basics" in the R&S SMW user manual.

- "Auto"
The signal is generated continuously.
- "Retrigger"
The signal is generated continuously. A trigger event (internal or external) causes a restart.
- "Armed Auto"
The signal is generated only when a trigger event occurs. Then the signal is generated continuously.
An "Arm" stops the signal generation. A subsequent trigger event (internal or external) causes a restart.
- "Armed Retrigger"
The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event causes a restart.
An "Arm" stops signal generation. A subsequent trigger event (internal or external) causes a restart.
- "Single"
The signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration".
Every subsequent trigger event (internal or external) causes a restart.

Remote command:

`[:SOURce<hw>] :BB:EVDO [:TRIGger] :SEquence` on page 76

Signal Duration Unit

Defines the unit for describing the length of the signal sequence to be output in the "Single" trigger mode.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:SLUNit` on page 78

Trigger Signal Duration

Enters the length of the signal sequence to be output in the "Single" trigger mode.

Use this parameter to output part of the signal deliberately, an exact sequence of the signal, or a defined number of repetitions of the signal.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:SLENgth` on page 78

Running/Stopped

With enabled modulation, displays the status of signal generation for all trigger modes.

- "Running"
The signal is generated; a trigger was (internally or externally) initiated in triggered mode.
- "Stopped"
The signal is not generated and the instrument waits for a trigger event.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:RMODE?` on page 78

Arm

Stops the signal generation until subsequent trigger event occurs.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:ARM:EXECute` on page 77

Execute Trigger

For internal trigger source, executes trigger manually.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:EXECute` on page 77

Trigger Source

The following sources of the trigger signal are available:

- "Internal"
The trigger event is executed manually by the "Execute Trigger".
- "Internal (Baseband A/B)"
The trigger event is provided by the trigger signal from the other basebands. If common trigger settings are applied, this trigger source is disabled.
- "External Global Trigger"
The trigger event is the active edge of an external trigger signal provided and configured at the USER x connectors.
- "External Local Trigger"
The trigger event is the active edge of an external trigger signal provided and configured at the local T/M/C connector.
With coupled trigger settings, the signal has to be provided at the T/M/C1/2/3 connectors.
- "External Local Clock"
The trigger event is the active edge of an external local clock signal provided and configured at the local T/M/C connector.
With coupled trigger settings, the signal has to be provided at the T/M/C1 connector.
- "Baseband Sync In"

Option: R&S SMW-B9

In master-slave mode, slave instruments are triggered by the active edge of the synchronization signal.

"External Local Clock/Trigger" require R&S SMW-B10.

Remote command:

[:SOURce<hw>] :BB:EVDO:TRIGger:SOURce on page 79


Sync. Output to External Trigger/Sync. Output to Trigger

Enables signal output synchronous to the trigger event.

- "On"

Corresponds to the default state of this parameter.


The signal calculation starts simultaneously with the trigger event. Because of the processing time of the instrument, the first samples are cut off and no signal is output. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

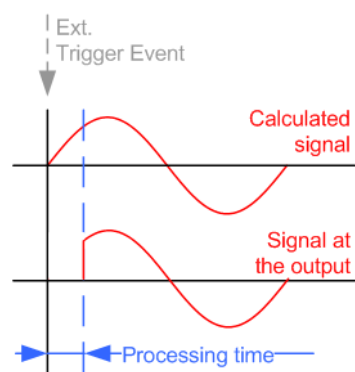

- "Off"

The signal output begins after elapsing of the processing time. Signal output starts with sample 0. The complete signal is output.

This mode is recommended for triggering of short signal sequences. Short sequences are sequences with signal duration comparable with the processing time of the instrument.

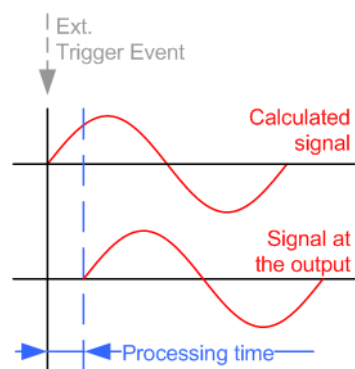

In master-slave mode, this setting ensures that once achieved, synchronization is not lost if the baseband signal sampling rate changes.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger:EXternal:SYNChronize:OUTPut`
on page 77

External Trigger Inhibit

Applies for external trigger signal or trigger signal from the other path.

Sets the duration with that any following trigger event is suppressed. In "Retrigger" mode, for example, a new trigger event does not cause a restart of the signal generation until the specified inhibit duration does not expire.

For more information, see chapter "Basics" in the R&S SMW user manual.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger [:EXternal] :INHibit` on page 79

`[:SOURce<hw>] :BB:EVDO:TRIGger:OBASeband:INHibit` on page 78

Trigger Delay

Delays the trigger event of the signal from:

- The external trigger source
- The other path
- The other basebands (internal trigger), if common trigger settings are used.

Use this setting to:

- Synchronize the instrument with the device under test (DUT) or other external devices
- Postpone the signal generation start in the basebands compared to each other
- Compensate delays and align the signal generation start in multi-instrument setup

For more information, see chapter "Basics on ..." in the R&S SMW user manual.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TRIGger [:EXternal] :DELay` on page 79

`[:SOURce<hw>] :BB:EVDO:TRIGger:OBASeband:DELay` on page 77


4.3 Marker Settings

This tab provides access to the settings necessary to select and configure the marker output signal, like the marker mode or marker delay settings.



This section focuses on the available settings.

For information on how these settings affect the signal, refer to section "Basics on ..." in the R&S SMW user manual.

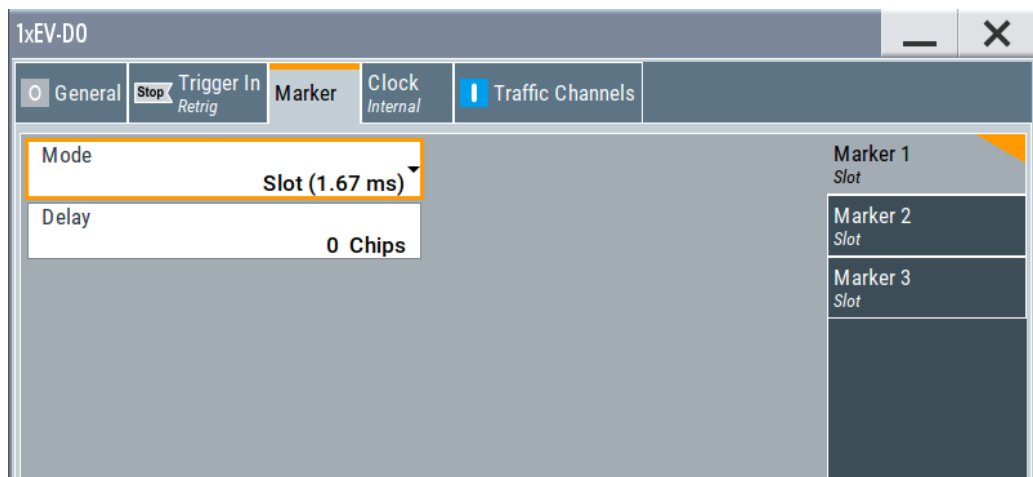

Routing and enabling a marker

The provided marker signals are not dedicated to a particular connector. They can be mapped to one or more USER x or T/M connectors.

To route and enable a marker signal, perform the following *general steps*:

- Define the shape of the generated marker, i.e. select the "Marker > Mode".
- Define the connector where the selected signal is provided.
Use the [Local and Global Connector Settings](#).

[Marker Mode](#)..... 21
[Marker x Delay](#)..... 22

Marker Mode

Marker configuration for up to 3 markers. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode; the settings are self-explanatory.

"Slot (1.67 ms)"

A marker signal is generated at the start of each slot (every 1.67 ms).

"PN Sequence Period (26,67 ms)"

A marker signal is generated every 26.67 ms (PN Sequence Period).

"Even Second Mark (2 s)"

A marker signal is generated every 2 seconds.

 
"Chip Sequence Period (ARB)"

(For reverse link mode)

A marker signal is generated at the beginning of every Arbitrary Waveform sequence (depending on the set sequence length). The marker signal is generated regardless of whether an ARB component is used.

"On/Off Ratio"

A regular marker signal that is defined by an On/Off ratio is generated. A period lasts one ON and OFF cycle.



Remote command:

[:SOURce<hw>] :BB:EVDO:TRIGger:OUTPut<ch>:ONTime on page 80

[:SOURce<hw>] :BB:EVDO:TRIGger:OUTPut<ch>:OFFTime on page 80

"User Period" A marker signal is generated at the beginning of every user-defined period ("Period").

Remote command:

[:SOURce<hw>] :BB:EVDO:TRIGger:OUTPut<ch>:PERiod on page 81

Remote command:

[:SOURce<hw>] :BB:EVDO:TRIGger:OUTPut<ch>:MODE on page 80

Marker x Delay

Delays the marker signal at the marker output relative to the signal generation start.

Variation of the parameter "Marker x Delay" causes signal recalculation.

Remote command:

[:SOURce<hw>] :BB:EVDO:TRIGger:OUTPut<ch>:DELay on page 81


4.4 Clock Settings

This tab provides access to the settings necessary to select and configure the clock signal, like the clock source and clock mode.



This section focuses on the available settings.

For information on how these settings affect the signal, refer to section "Basics on ..." in the R&S SMW user manual.

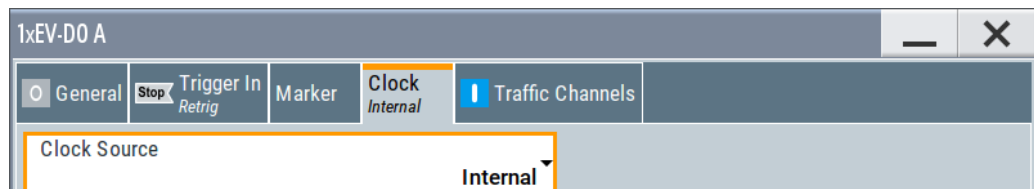



Defining the clock

The provided clock signals are not dedicated to a particular connector. They can be mapped to one or more USER x and T/M/C connectors.

Use the [Local and Global Connector Settings](#) to configure the signal mapping, the polarity, the trigger threshold, and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source, that is select the "Clock > Source".
- Define the connector where the selected signal is provided.
Use the [Local and Global Connector Settings](#).

Clock Source.....	23
Clock Mode.....	23
Measured External Clock.....	23

Clock Source

Selects the clock source.

- "Internal"
The instrument uses its internal clock reference.
- "External Local Clock"
Option: R&S SMW-B10
The instrument expects an external clock reference at the local T/M/C connector.

"External Local Clock" requires R&S SMW-B10.

Remote command:

[:SOURce<hw>] :BB:EVDO:CLOCK:SOURce on page 82

Clock Mode

Option: R&S SMW-B10

Sets the type of externally supplied clock.

Remote command:

[:SOURce<hw>] :BB:EVDO:CLOCK:MODE on page 82

Measured External Clock

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

CLOCK:INPut:FREQuency?

4.5 Local and Global Connector Settings

Each of the "Trigger In", "Marker" and "Clock" dialogs and the "Trigger Marker Clock" dialog provides a quick access to the related connector settings.




See also chapter "Local and Global Connector Settings" in the user manual.

4.6 Traffic Channel Settings

Access:


1. Select "Baseband > 1xEV-DO > Link Direction > Downlink"
2. Select "Traffic Channels".

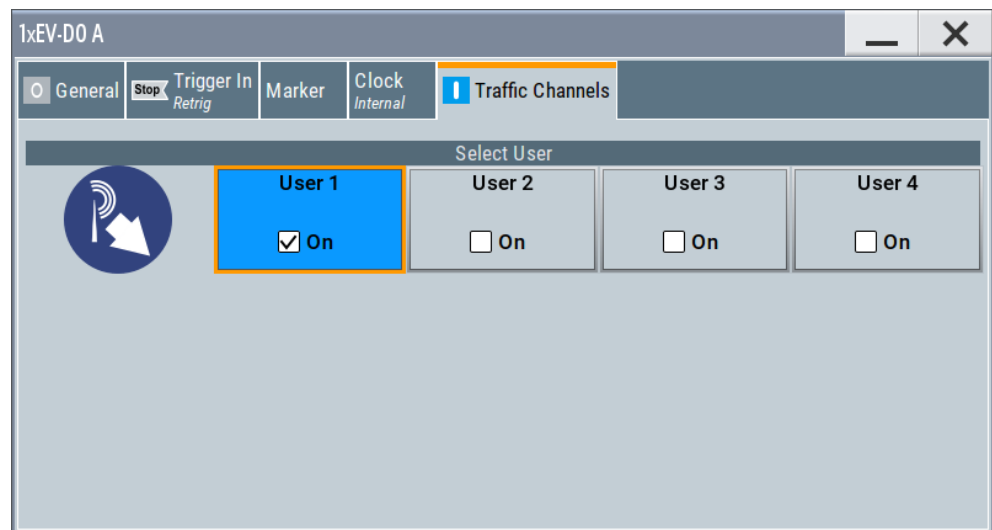

Four "User (1 to 4)" are available.

3. To activate a user, set e.g. "User 1 > On".
4. To access the settings of a user, select the corresponding field, e.g. "User 1".

The corresponding "Configure Traffic User 1 .. 4" dialog opens. The user number is indicated in the panel headline.

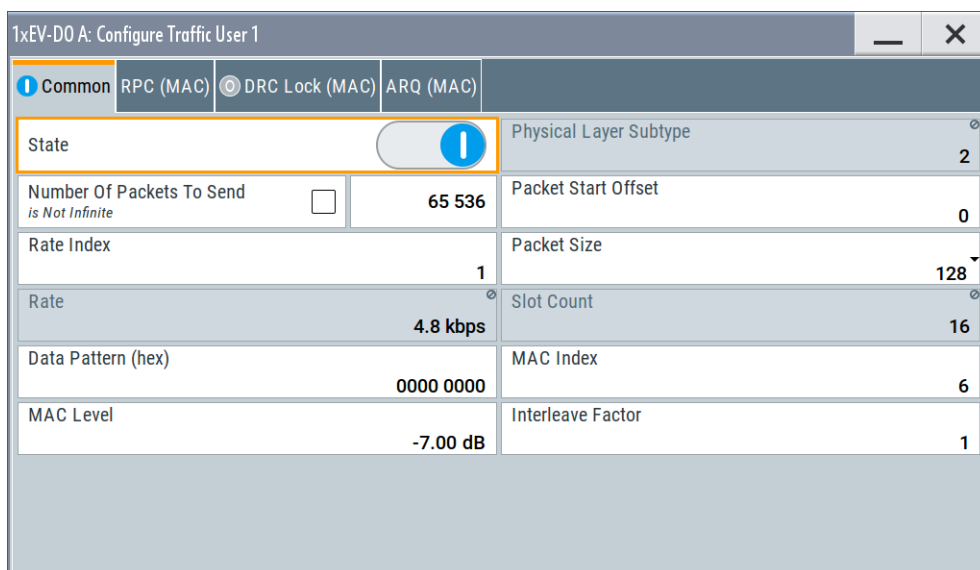

The dialog comprises the settings of the traffic channel and of the forward MAC channel settings, such as Reverse Power Control (RPC) and DRCLock.

- Common.....25
 - State (User)26
 - Physical Layer Subtype (User) 26
 - Number of Packets to Send - Infinite 26
 - Number of Packets to Send - Value 26
 - Packet Start Offset26
 - Rate Index27
 - Packet Size 31
 - Data Rate.....31
 - Slot Count 31
 - Data Pattern (hex)32
 - MAC Index 32
 - MAC Level 32
 - Interleave Factor 32
- RPC (MAC)..... 32
 - RPC Mode 33
 - RPC Range Count 34
 - RPC Pattern34
- DRC Lock (MAC)..... 34
 - DRC Lock State 34
 - DRC Lock Period 35
 - DRC Lock Length35
 - Frame Offset 35
- ARQ (MAC)..... 35
 - H-ARQ Mode 36

Common

Comprises the common traffic channel settings:

State (User) ← Common

Enables or disables the selected user.

If the user is enabled, the proper "MAC Index" is placed within the MAC channel and packets can be sent to the user. If disabled, the "MAC Index" is not present within the MAC channel and packets cannot be sent to the user.

Note: Disabling the state of a user during a transfer aborts all transfers to the user.

Remote command:

`[:SOURce<hw>] :BB:EVDO:USER<st>:STATe` on page 98

Physical Layer Subtype (User) ← Common

Displays the physical layer subtype selected in the menu "Access Network Settings".

Remote command:

`[:SOURce<hw>] :BB:EVDO:ANETwork:SUBType` on page 86

Number of Packets to Send - Infinite ← Common

Enables or disables sending an unlimited number of packets to the selected user.

If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled, the number of packets to be sent to the selected "User" can be specified.

Remote command:

`[:SOURce<hw>] :BB:EVDO:USER<st>:PACKet:INFinite` on page 94

Number of Packets to Send - Value ← Common

Sets the number of packets to send to the selected user.

The number of packets to be sent depends on whether the parameter "Infinite" is enabled or disabled. If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled and a value is specified while packets are being sent, the new count value is used at the end of transmission of the current packet. If a value of zero is specified, the transmission to the user is stopped at the end of the current packet.

Remote command:


`[:SOURce<hw>] :BB:EVDO:USER<st>:PACKet:INFinite` on page 94

`[:SOURce<hw>] :BB:EVDO:USER<st>:PACKet:COUNT` on page 93


Packet Start Offset ← Common

Sets the minimum number of slots between the end of one packet and the beginning of the next.


For single slot packets, a value of zero will cause the next packet to be sent in the immediate next slot (subject to scheduling).

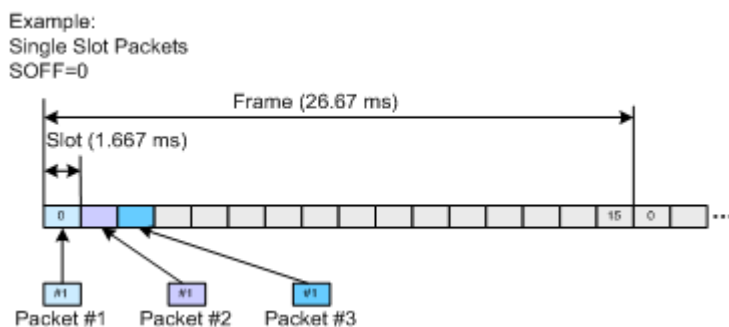

For multiple slot packets, a value of zero will cause the next packet transmission to start three slots after the end of the previous packet. The three slot delay is identical to the interleaving delay between slots for multiple slot packets. The offset value is attached to the end of the preceding packet.

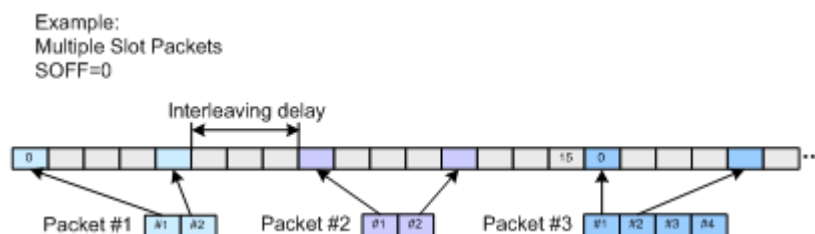

Note: An offset value of zero with a rate change from a single slot packet to multiple slot packets causes the first slot of the multiple slot packets to be transmitted in the slot immediately following the single slot packet.

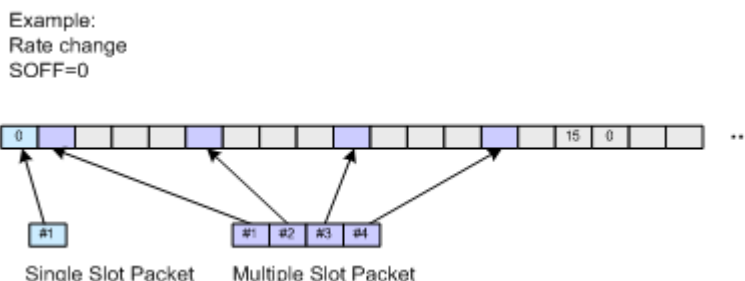

See [Chapter 3.3, "Traffic Scheduling Process"](#), on page 11 for an explanation on how the control and traffic channels are transmitted over time.

Remote command:

`[:SOURce<hw>] :BB:EVDO:USER<st>:PACKet:SOFFset` on page 94

Rate Index ← Common

Sets an index into the table of rates and slot counts.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

For physical layer 0&1, the parameter "Rate Index" alone automatically set the packet size, data rate and the slot count for the packets sent to the selected user. Parameters "Packet Size", "Data Rate" and "Slot Count" are read-only.

Table 4-1: Rate index for Physical Layer subtype 0&1

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
1	0	1024	38.4	16
2	0	1024	76.8	8
3	0	1024	153.6	4
4	0	1024	307.2	2
5	0	2048	307.2	4
6	0	1024	614.4	1
7	0	2048	614.4	2
8	0	3072	921.6	2
9	0	2048	1228.8	1
10	0	4096	1228.8	2
11	0	3072	1843.2	1
12	0	4096	2457.6	1

For physical layer subtype 2, a combination of the parameters "Rate Index" and "Packet Size" sets the data rate and the slot count for the packets sent to the selected user.

Table 4-2: Rate index for Physical Layer subtype 2

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
1	3	128	4.8	16
1	2	256	9.6	16
1	1	512	19.2	16
1	0	1024	38.4	16
2	3	128	9.6	8
2	2	256	19.2	8
2	1	512	38.4	8
2	0	1024	76.8	8
3	3	128	19.2	4
3	2	256	38.4	4
3	1	512	76.8	4
3	0	1024	153.6	4
4	3	128	38.4	2
4	2	256	76.8	2
4	1	512	153.6	2
4	0	1024	307.2	2

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
5	2	512	76.8	4
5	1	1024	153.6	4
5	0	2048	307.2	4
6	3	128	76.8	1
6	2	256	153.6	1
6	1	512	307.2	1
6	0	1024	614.4	1
7	2	512	153.6	2
7	1	1024	307.2	2
7	0	2048	614.4	2
8	1	1024	307.2	2
8	0	3072	921.6	2
9	2	512	307.2	1
9	1	1024	614.4	1
9	0	2048	1228.8	1
10	0	4096	1228.8	2
11	1	1024	614.4	1
11	0	3072	1843.2	1
12	0	4096	2457.6	1
13	0	5120	1536	2
14	0	5120	3072	1

Table 4-3: Rate index for Physical Layer subtype 3 (requires the appropriate Rev. B option)

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
1	3	128	4.8	16
1	2	256	9.6	16
1	1	512	19.2	16
1	0	1024	38.4	16
2	3	128	9.6	8
2	2	256	19.2	8
2	1	512	38.4	8
2	0	1024	76.8	8
3	3	128	19.2	4
3	2	256	38.4	4

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
3	1	512	76.8	4
3	0	1024	153.6	4
4	3	128	38.4	2
4	2	256	76.8	2
4	1	512	153.6	2
4	0	1024	307.2	2
5	2	512	76.8	4
5	1	1024	153.6	4
5	0	2048	307.2	4
6	3	128	76.8	1
6	2	256	153.6	1
6	1	512	307.2	1
6	0	1024	614.4	1
7	2	512	153.6	2
7	1	1024	307.2	2
7	0	2048	614.4	2
8	1	1024	307.2	2
8	0	3072	921.6	2
9	2	512	307.2	1
9	1	1024	614.4	1
9	0	2048	1228.8	1
10	0	4096	1228.8	2
11	1	1024	614.4	1
11	0	3072	1843.2	1
12	0	4096	2457.6	1
13	0	5120	1536	2
14	0	5120	3072	1
15	0	1024	153.6	4
16	0	2048	307.2	4
17	0	3072	460.8	4
18	0	4096	614.4	4
19	0	5120	768	4
20	0	6144	921.6	4

Rate index	Packet size index	Packet size, bits	Data Rate, kbps	Slot count
21	0	6144	1843.2	2
22	0	6144	3686.4	1
23	0	7168	1075.2	4
24	0	7168	2150.4	2
25	0	7168	4300.8	1
26	0	8192	1228.8	4
27	0	8192	2457.6	2
28	0	8192	4915.2	1

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:RATE:INDEX on page 96

Packet Size ← Common

Sets the packet size for the packets sent to the selected user.

For physical layer 0&1, the parameter "Packet Size" is read-only. The value is automatically set depending on the selection for the parameter "Rate Index". (see [Table 4-1](#))

For physical layer subtypes 2 and 3, a combination of the parameter "Packet Size" and the parameter "Rate Index" sets the data rate and the slot count for the packets sent to the selected user, see [Table 4-2](#).

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:PSIZE on page 95

Data Rate ← Common

Displays the data rate of the packets sent to the selected user. This parameter is read-only. The value is set automatically, depending on the selected "Rate Index" and "Packet Size", see [Table 4-1](#) and [Table 4-2](#).

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:RATE? on page 95

Slot Count ← Common

Displays the slot count of the packets sent to the selected user.

This parameter is read-only. The value is set automatically, depending on the selected "Rate Index" and "Packet Size", see [Table 4-1](#) and [Table 4-2](#).

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:SCOUNT? on page 98

Data Pattern (hex) ← Common

Sets the data pattern for the data portion of the packets sent to the user.

The most significant bit (MSB) of this value is the MSB of the packet and the word is repeated to fill all space within the packet. This parameter is in a hexadecimal format.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:DATA:PATtern on page 90

MAC Index ← Common

Sets the MAC index used for the selected user.

MAC indexes have to be different for the different users. However, in case that two users are using the same value for MAC index, the lower priority user is disabled, or be unable to enable.

The values for the MAC indexes for the other users (see parameter [Other Users Count](#)) are assigned from a pool of valid MAC indexes, that exclude the MAC indexes specified for each of the four configurable users.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:MAC:INDEX on page 92

MAC Level ← Common

Sets the power within the MAC channel that is dedicated to the selected user.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:MAC:LEVEL on page 93

Interleave Factor ← Common

Controls the number of interleave slots used for the selected user on the forward link.


Four interleave slots are defined in the 1xEV-DO system. By default, only 1 interleave slot ("Interleave Factor" = 1) for an access terminal is configured and transmission to that access terminal every fourth slot is selected. For an interleave factor > 1, packets on multiple interleave slots are sent, increasing the data throughput to the access terminal.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:IFACTor on page 92

RPC (MAC)

Access: "Baseband > 1xEV-DO > Traffic Channels > User > RPC (MAC)".

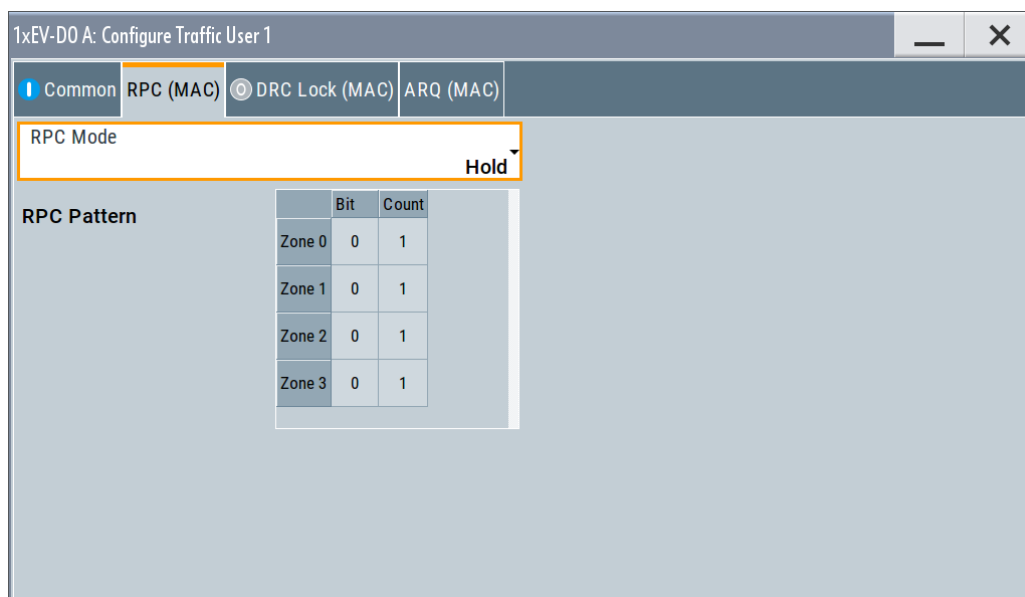

RPC Mode ← RPC (MAC)

Sets the operation mode for the Reverse Power Control (RPC) Channel within the MAC channel for the selected user.

- "Hold" An alternating series of up and down power control bits are transmitted. The intent is to hold the access terminal at a constant power level. This mode always starts with an up bit, and ends with the following down bit. This mode is 2 bits long.
- "All up" A continuous stream of up (0) power control bits are transmitted. The intent is to force the access terminal to the highest transmit power level. This mode is a single bit long.
- "All down" A continuous stream of down (1) power control bits are transmitted. The intent is to force the access terminal to the lowest transmit power level. This mode is a single bit long.
- "Range" A sequence of up power control bits is sent followed by an equal number of down power control bits. The intent is to force the access terminal to ramp its power from one extreme to another. The number of power control bits in each direction is specified by the "RPC Range Count" parameter. (see [RPC Range Count](#)). Each time that the range mode is specified, the sequence is restarted. The range mode starts with the first up bit and ends with the last down bit. The length of the mode is two times the RPC range Count.
- "Pattern" A user-defined sequence of RPC bits is sent. The mode starts with the bit defined in the first (0) zone, and ends with the last bit of the last (3) zone. The length of the pattern is the sum of the Count values for each RPC zone.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:RPC:MODE on page 97

RPC Range Count ← RPC (MAC)

Sets the number of Reverse Power Control (RPC) bits sent in each direction when the "RPC Mode" is set to "Range". The specified value is used immediately.

Note: This parameter is displayed in RPC mode "Range" only.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:RPC:RANGe on page 97

RPC Pattern ← RPC (MAC)

Defines the Reverse Power Control (RPC) pattern in form of table with four zones (zone 0 .. 3).

For each zone, a bit and a count can be defined.

"Bit" Defines the RPC bits sent within the specific zone of the RPC pattern.

"Count" Defines the number of RPC bits sent within the specific zone of the RPC pattern.


Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT on page 97

[:SOURce<hw>] :BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNT on page 98

DRC Lock (MAC)

Access: "Baseband > 1xEV-DO > Traffic Channels > User > DRC Lock (MAC)".

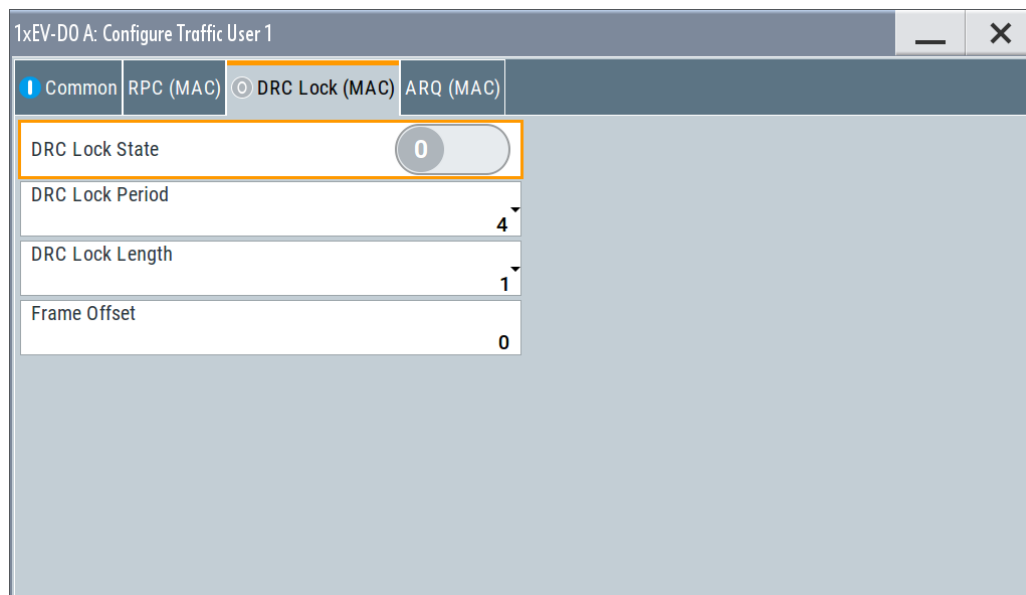

DRC Lock State ← DRC Lock (MAC)

Sets the state of the DRC (Data Rate Control) lock bit for the selected user.


Note: Changes in the DRC lock state are only considered at the interval defined by the parameter DRC lock length.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:DRCLock:STATe on page 91

DRC Lock Period ← DRC Lock (MAC)

Sets the period (measured in slots) of time between successive transmissions of the DRC (Data Rate Control) lock bit for the selected user.

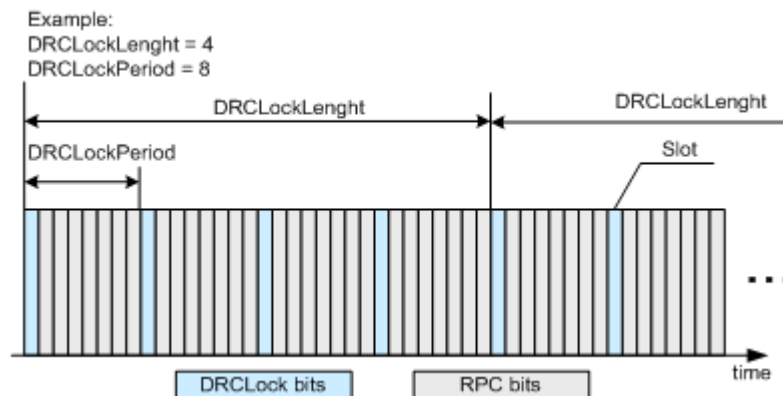

Note: A value of zero disables the DRC lock subchannel and the MAC RPC channel of the selected user is not punctured with the DRC lock subchannel.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:DRCLock:PERiod on page 91

DRC Lock Length ← DRC Lock (MAC)

Sets the number of DRC (Data Rate Control) lock Periods that the state of the DRC lock for the selected user is held constant.

Note: Changes in the DRC lock state are only considered at the interval defined by the parameter "DRC Lock Length".

A value of one allows updating of the DRC lock bit at anytime.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:DRCLock:LENGTh on page 90

Frame Offset ← DRC Lock (MAC)

Sets the reverse link frame offset for the reverse link.


The frame offset is used to position the DRC lock bit within the MAC channel.

Remote command:

[:SOURce<hw>] :BB:EVDO:USER<st>:DRCLock:OFFSet on page 91

ARQ (MAC)

Access: "Baseband > 1xEV-DO > Traffic Channels > User > ARQ (MAC)".

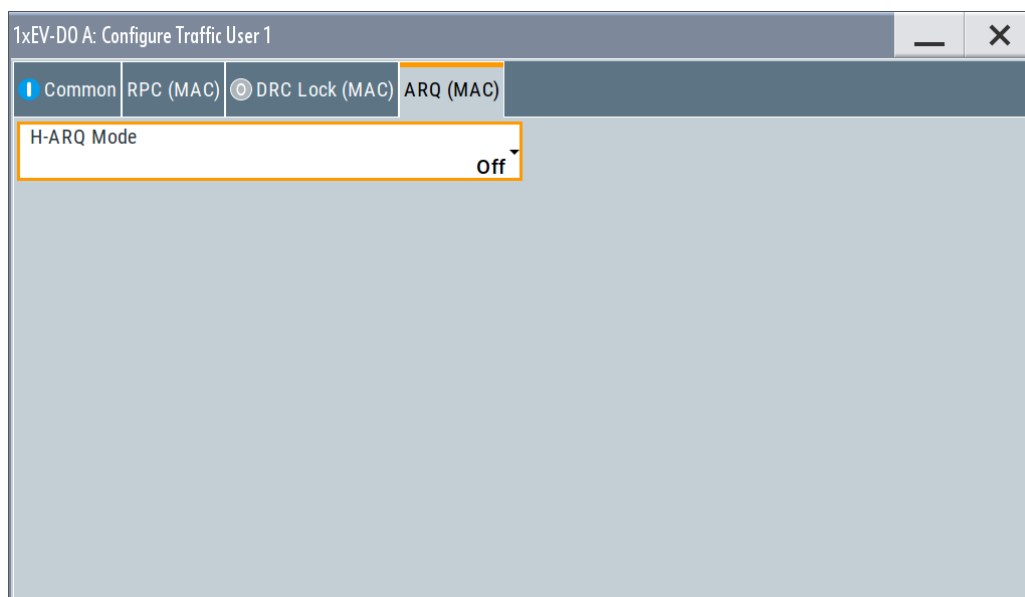**H-ARQ Mode ← ARQ (MAC)**

Enables or disables the H-ARQ Channel.

The H-ARQ channel is used by the access network to transmit positive acknowledgement (ACK) or a negative acknowledgement (NAK) in response to a physical layer packet.

Note: This parameter is enabled for Physical Layer "Subtype 2" only.

"Off" Disables transmission of the H-ARQ channel.

"ACK" The channel is transmitted with all bits set to ACK.

"NAK" The channel is transmitted with all bits set to NAK.

Remote command:


`[:SOURCE<hw>] :BB:EVDO:USER<st>:HARQ:MODE` on page 92

4.7 Multi-Carrier Configuration Settings



Multi-Carrier Configuration requires option R&S SMW-K87

In multi-carrier mode, up to 16 modulated carriers can be generated with one base-band. Each carrier's center frequency is input via its "CDMA Channel Number" or by directly entering the RF "Center Frequency / MHz". The carriers can be activated or deactivated separately.

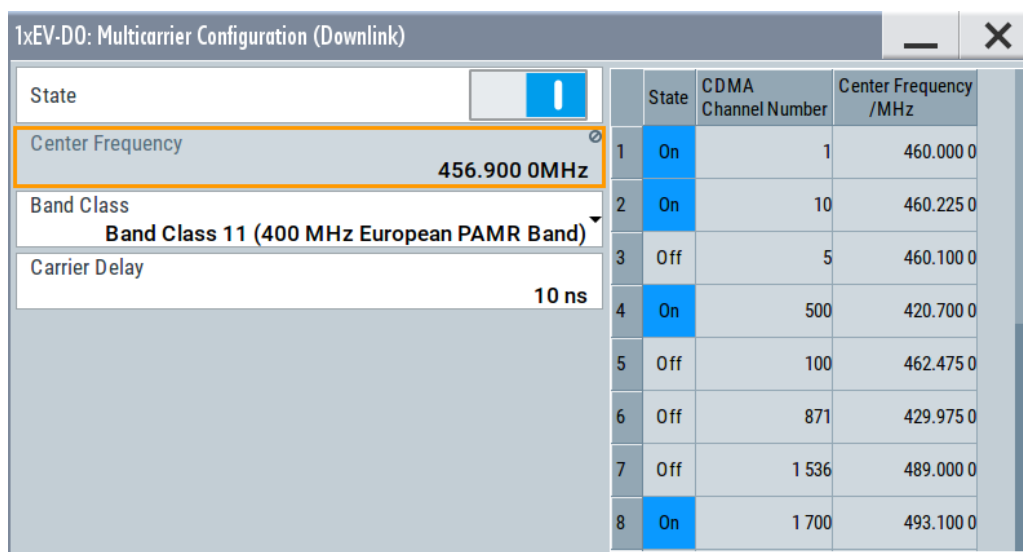

State..... 37
 Center Frequency (band)..... 37
 Band Class..... 37
 Carrier Delay..... 37
 State..... 38
 CDMA Channel Number..... 38
 Center Frequency..... 38

State

Enables or disables multi-carrier operation.

Remote command:

```
[ :SOURce<hw> ] :BB:EVDO:UP:MC:CARRIER<ch>:STATE on page 88  

[ :SOURce<hw> ] :BB:EVDO:DOWN:MC:CARRIER<ch>:STATE on page 88
```

Center Frequency (band)

Shows the center frequency of the band resulting from the set active carriers.

Remote command:

```
[ :SOURce<hw> ] :BB:EVDO:DOWN:MC:CFREQUENCY? on page 87  

[ :SOURce<hw> ] :BB:EVDO:UP:MC:CFREQUENCY? on page 87
```

Band Class

Selects the band class for operation, as defined in 3GPP2 C.S0057-E.

Remote command:

```
[ :SOURce<hw> ] :BB:EVDO:UP:MC:BCLASS on page 87  

[ :SOURce<hw> ] :BB:EVDO:DOWN:MC:BCLASS on page 87
```

Carrier Delay

Applies a delay to each carrier in order to reduce the crest factor of the sum signal.

The delay increases by the given value on each active carrier. Inactive carriers are not accounted.

Example:

"Carrier Delay = 1000 ns"

The first active carrier is delayed by 0 ns, the second by 1000 ns, the third by 2000 ns, etc.

Remote command:

[:SOURce<hw>] :BB:EVDO:UP:MC:CDElay on page 88

[:SOURce<hw>] :BB:EVDO:DOWN:MC:CDElay on page 88

State

Switches the selected carrier on or off.

Remote command:

[:SOURce<hw>] :BB:EVDO:UP:MC:CARRier<ch>:STATe on page 88

[:SOURce<hw>] :BB:EVDO:DOWN:MC:CARRier<ch>:STATe on page 88

CDMA Channel Number

Selects the carrier's channel number.

The selected channel numbers are directly translated into center frequencies, according to the used band class. In some cases, not all channel numbers in the range that is indicated by the tool tip are allowed. In case a non-existing channel is selected, the software selects the next available channel.

Remote command:

[:SOURce<hw>] :BB:EVDO:UP:MC:CARRier<ch>:CHANnel on page 88

[:SOURce<hw>] :BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel on page 88

Center Frequency

Sets the center frequency of the carrier.

In some cases, not all center frequencies in the range that is indicated by the tool tip are defined by the selected band class. In case a non-existing frequency is selected, the software selects the next available frequency.

Remote command:


[:SOURce<hw>] :BB:EVDO:UP:MC:CARRier<ch>:FREQuency on page 89

[:SOURce<hw>] :BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency on page 89

4.8 Access Network Settings

The "Access Network Settings" dialog is available at Downlink only and allows configuration of physical layer subtype, the pilot and control channels and reverse activity bit.

"Access Network Settings" consists of three main sections, "Pilot Channel", "Control Channel" and "Reverse Activity Bit (MAC)".

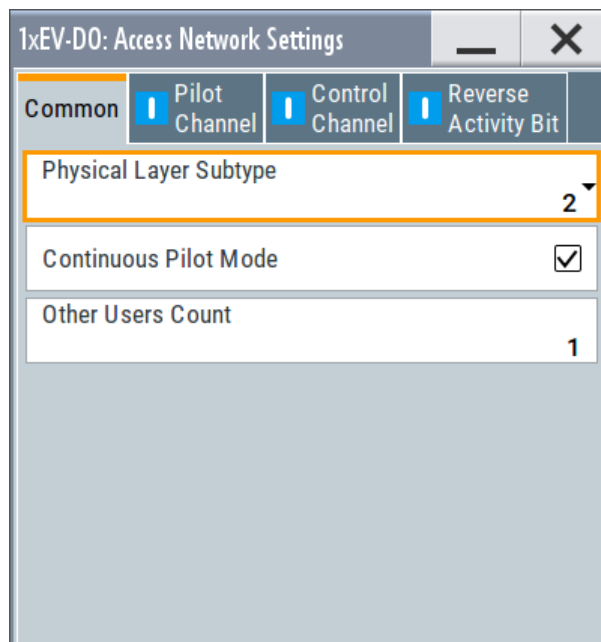

Physical Layer Subtype (Access Network Settings)

Defines the physical layer subtype for the forward link direction.

Physical layer subtype 0 is the original (release "0").

Physical layer subtype 1 and 2 are the revision "A" physical layers.

Physical layer subtype 3 is the revision "B" physical layer.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:ANETwork:SUBType](#) on page 86

Continuous Pilot Mode

Enables or disables a special mode within the 1xEV-DO generator. When the state is off, normal operation is selected. When the state is on, a special mode is selected.

In this special mode, the 1xEV-DO generator generates a pilot signal only.

Note: During the special mode, all other parameters do not affect the signal output.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:ANETwork:CPMode](#) on page 84

Other Users Count

Sets the number of additional users (beyond the four defined users) that appear in the MAC Channel.

These additional users never have a packet addressed to them, but are used to fill in the MAC channel code domain.

These Other Users are used to distribute the excess power (beyond what is required by the "User 1..4" and RAB channels).


Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:ANETwork:OUCount](#) on page 84

Pilot Channel

Access:

"Baseband > 1xEV-DO > General > Access Network Settings > Pilot Channel"

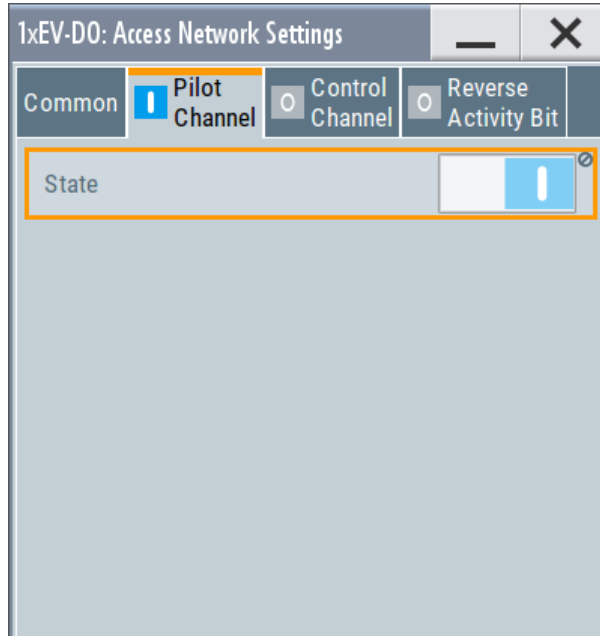

State ← Pilot Channel

Displays the state of the pilot channel. Pilot channel is transmitted by sector on each active forward channel. It is present always and transmitted at the full sector power.

Remote command:

`[:SOURce<hw>] :BB:EVDO:ANETwork:PCChannel:STATe?` on page 85

Control Channel

Access:

"Baseband > 1xEV-DO > General > Access Network Settings > Control Channel"

1xEV-DO: Access Network Settings	
Common	<input checked="" type="radio"/> Pilot Channel
<input checked="" type="radio"/> Control Channel	<input type="radio"/> Reverse Activity Bit
State	0
Rate	38.4 kbps
Packet Start Offset	0
Minimum Revision	1
Maximum Revision	1

State ← Control Channel

Enables or disables the control channel messages.

The only control channel message that is ever sent is the Sync Message. When this is enabled, the control channel messages have the highest priority for placement within the slots. The Sync Message is updated constantly, even when the control channel is not enabled.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:ANETwork:CCHannel:STATE` on page 84

Rate ← Control Channel

Sets the rate that the control channel messages are transmitted at.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:ANETwork:CCHannel:RATE` on page 83

Packet Start Offset ← Control Channel

Sets the offset (in slots) from the start of control channel cycle to the start of the synchronous message capsule that contains the Sync Message.

See [Chapter 3.3, "Traffic Scheduling Process"](#), on page 11 for an explanation on how the control and traffic channels are transmitted over time.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:ANETwork:CCHannel:PSOffset` on page 83

Minimum Revision ← Control Channel

Sets the value of the minimum revision field within the control channel message.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:ANETwork:CCHannel:REvision:MINimum`
on page 84

Maximum Revision ← Control Channel

Sets the value of the maximum revision field within the control channel message.

Remote command:


`[:SOURce<hw>] :BB:EVDO:ANETwork:CCHannel:REVISION:MAXimum`

on page 83

Reverse Activity Bit

Access:

"Baseband > 1xEV-DO > General > Access Network Settings > Reverse Activity Bit"

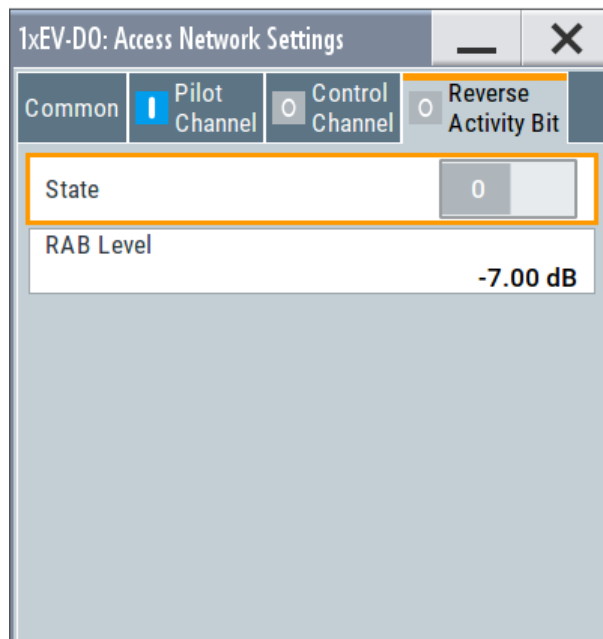**State ← Reverse Activity Bit**

Activates or deactivates the reverse activity bit (RAB).

Remote command:

`[:SOURce<hw>] :BB:EVDO:ANETwork:RAB:STATE` on page 86

RAB Level ← Reverse Activity Bit

Sets the power within the MAC block for the Reverse Activity Channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:ANETwork:RAB:LEVEL` on page 85

RAB Length ← Reverse Activity Bit

For physical layer subtype 0&1 only

Sets the duration (in slots) of a Reverse Activity bit.

Remote command:

`[:SOURce<hw>] :BB:EVDO:ANETwork:RAB:LENGTH` on page 85

RAB Offset ← Reverse Activity Bit

For physical layer subtype 0&1 only

Sets the starting time offset of the Reverse Activity (RA) bit in slots. The command is specified in Reverse Activity Length/8 units.

The RA bit starts when the following equation is satisfied:

- $\text{System Time mod RAB length} = \text{RAB Offset}$,
where System Time is expressed in slots.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:ANETwork:RAB:OFFSet` on page 86

RAB MAC Index ← Reverse Activity Bit

For physical layer subtype 3 only sets the RAB MAC Index.

Remote command:


`[:SOURCE<hw>] :BB:EVDO:ANETwork:RAB:MAC:INDEX` on page 86

4.9 Access Terminal Settings

Access:


1. Select "Baseband > 1xEV-DO > Link Direction > Uplink"
2. Select "Access Terminals".

Four terminals are available.

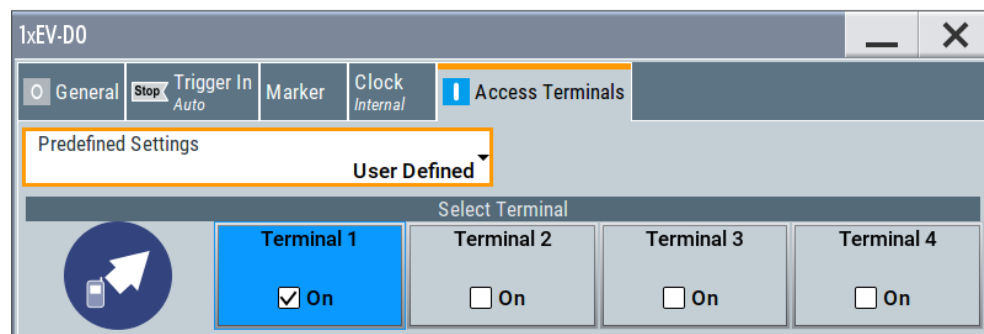

3. To enable a subset of predefined settings for faster configuration, select "Predefined Settings".
4. To activate a terminal, set its state to "On", e.g. "Terminal 1 > On".
5. To access the settings of a terminal, select the corresponding field, e.g. "Terminal 1".

The corresponding "Configure Access Terminal 1 .. 4" dialog opens. The access terminal number is indicated in the panel headline.

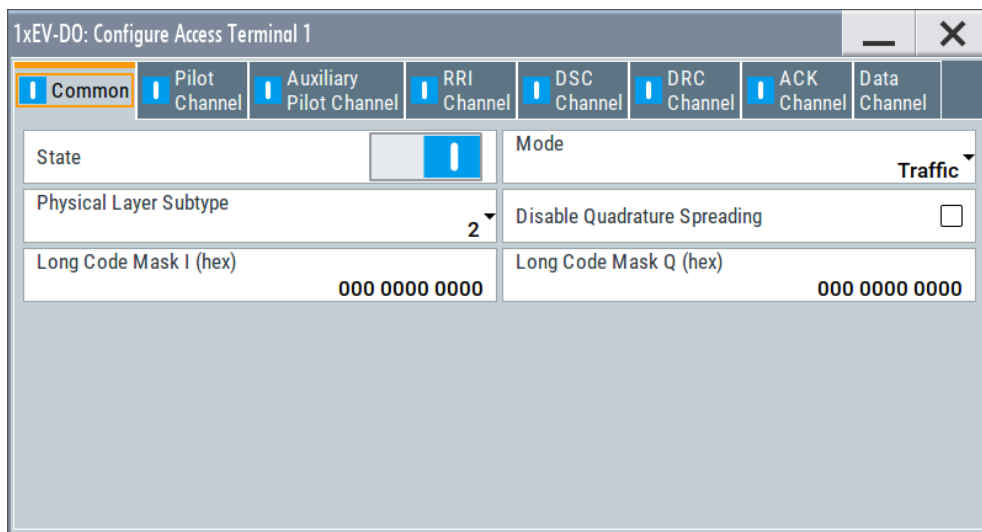

The dialog comprises the settings of the access terminal mode, of the data channel and configuration of the different channels.

The available channels depend on the selected "Physical Layer Subtype" and the selected "Access Terminal Mode", see [Table 4-4](#).

Table 4-4: Overview on available channels, depending on physical layer subtype and access terminal mode

Physical layer subtype	Access terminal mode	Pilot channel	Auxiliary pilot channel	RRI channel	DSC channel	DRC channel	ACK channel	Data channel
0&1	Traffic	X	-	X	-	X	X	Packet 1
	Access	X	-	-	-	-	-	Packet 1

Physical layer subtype	Access terminal mode	Pilot channel	Auxiliary pilot channel	RRI channel	DSC channel	DRC channel	ACK channel	Data channel
2	Traffic	X	X	X	X	X	X	Packet 1..3
	Access	X	-	-	-	-	-	Packet 1

Predefined Settings

Uplink only

Enables selection of UL predefined settings for Terminal 1 for faster configuration.

The predefined settings are made according to 3GPP2 C.S0032-A to allow easy receiver testing.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:PREDEFINED` on page 100

State

Enables or disables the selected access terminal.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:STATE` on page 120

Mode

Sets the mode ("Traffic" or "Access") of the selected access terminal.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:MODE` on page 118

Physical Layer Subtype

Selects the physical layer subtype for the selected access terminal.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:SUBTYPE` on page 120

Disable Quadrature Spreading

Disables the quadrature spreading (complex multiply) with PN sequences and long code.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:DQSPREADING` on page 114

Long Code Mask I (hex)

Sets the long code mask of the I channel.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:IMASK` on page 118

Long Code Mask Q (hex)

Sets the long code mask of the Q channel.


Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:QMASK` on page 119

Preamble Length

(enabled for access terminal working in access mode only)

Specifies the length of the preamble in frames (16 slots each) of the access probe (see figure below).

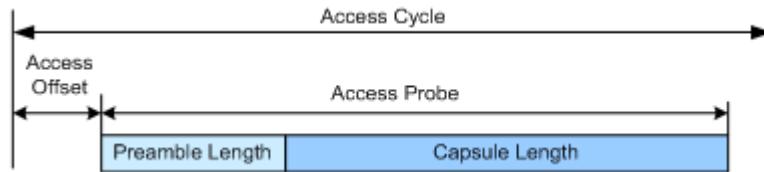

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:PLENgtH` on page 119

Access Cycle Duration

(enabled for access terminal working in access mode only)

Sets the access cycle duration in slots. Access probes are repeated with a period of access cycle duration slots.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:ACYCLe:DURation` on page 103

Access Cycle Offset

(enabled for access terminal working in access mode only)

The access channel transmission starts with this number of slots relative to the beginning of each access cycle duration.


Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:ACYCLe:OFFSet` on page 103

Pilot Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > Pilot Channel".

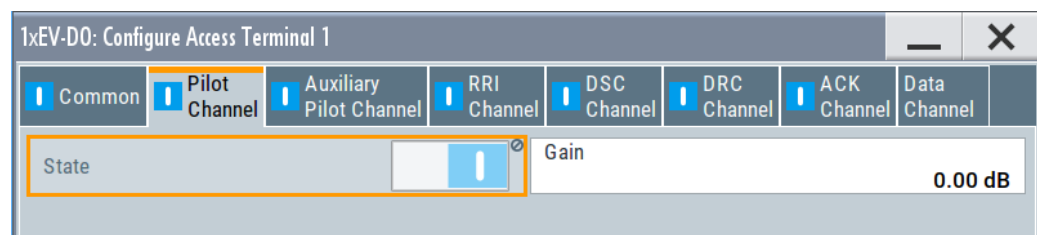**State ← Pilot Channel**

Displays the state of the pilot channel.

Note: The pilot channel is always switched on.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:PChannel:STATe?` on page 119

Gain ← Pilot Channel

Sets the gain of the pilot channel.

Gains of other channels are relative to the pilot channel power. This setting is used to distinguish the power between access terminals, when more than one access terminal is active.


Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:PCHANNEL:GAIN` on page 118

Auxiliary Pilot Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > Auxiliary Pilot Channel".

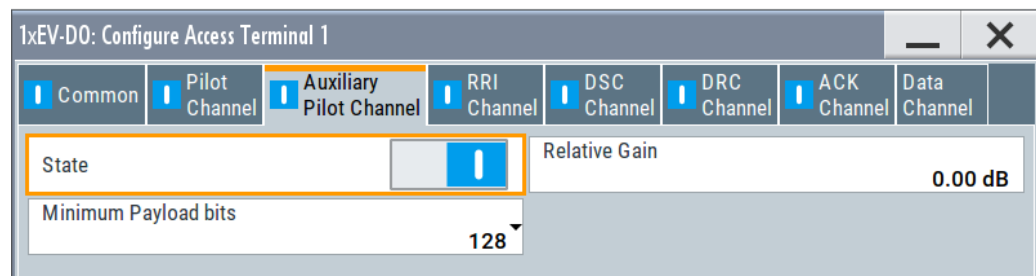

State ← Auxiliary Pilot Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Enables or disables the state of the auxiliary pilot channel.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:APCHANNEL:STATE` on page 104

Relative Gain ← Auxiliary Pilot Channel

Sets the gain of the auxiliary pilot channel relative to the data channel power.

Note: All other channel gains are specified relative to the pilot channel power, but the auxiliary pilot gain is specified relative to the data channel power. This parameter is only enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:APCHANNEL:GAIN` on page 104

Minimum Payload ← Auxiliary Pilot Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Sets the minimum payload size in bits of the data channel that activates the transmission of the auxiliary pilot channel.


Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMINAL<st>:APCHANNEL:PAYLOAD:MINIMUM` on page 104

RRI Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > RRI Channel".

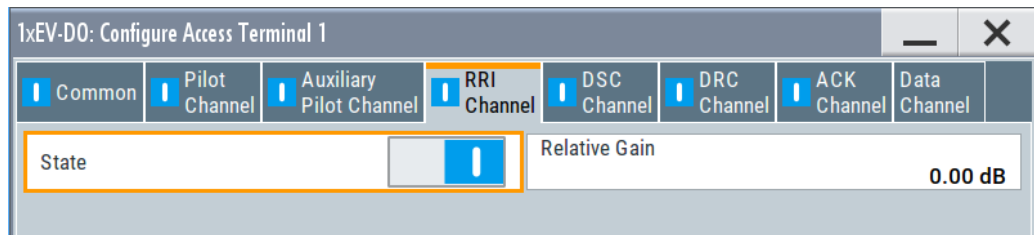

State ← RRI Channel

(enabled for access terminal working in traffic mode only)

Enables or disables the state of the reverse rate indicator (RRI) channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:RRIChannel:STATe` on page 120

Relative Gain ← RRI Channel

(enabled for access terminal working in traffic mode only)

Sets the gain of the reverse rate indicator (RRI) channel relative to the pilot channel power.


Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:RRIChannel:GAIN` on page 119

DSC Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > DSC Channel".

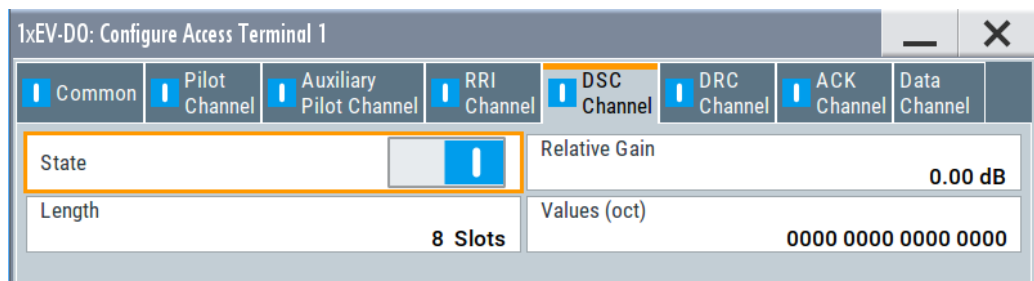

State ← DSC Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Enables or disables the state of the data source control (DSC) channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DSCChannel:STATe` on page 117

Relative Gain ← DSC Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Sets the gain of the data source control (DSC) channel relative to the pilot channel power.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DSCChannel:GAIN` on page 116

Length ← DSC Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Specifies the transmission duration of the data source control (DSC) channel in slots.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DSCChannel:LENGTh` on page 117

Values (OCT) ← DSC Channel

(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Specifies the pattern transmitted on the data source control (DSC) Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is transmitted for DSC length slots.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DSCChannel:VALues` on page 117

DRC Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > DRC Channel".

1xEV-DO: Configure Access Terminal 1							
Common	Pilot Channel	Auxiliary Pilot Channel	RRI Channel	DSC Channel	DRC Channel	ACK Channel	Data Channel
State	<input checked="" type="checkbox"/>	Relative Gain	0.00 dB				
Length	1	Values (hex)	0000 0000 0000 0000				
Cover	7	Gating Active	<input checked="" type="checkbox"/>				

State ← DRC Channel

(enabled for access terminal working in traffic mode only)

Enables or disables the state of the data rate control (DRC) channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:STATe` on page 116

Relative Gain ← DRC Channel

(enabled for access terminal working in traffic mode only)

Sets the gain of the data rate control (DRC) channel relative to the pilot channel power.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:GAIN` on page 115

Length ← DRC Channel

(enabled for access terminal working in traffic mode only)

Specifies the transmission duration of the data rate control (DRC) channel in slots.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:LENGth` on page 115

Values (hex) ← DRC Channel

(enabled for access terminal working in traffic mode only)

Specifies the pattern transmitted on the data rate control (DRC) channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is used for DRC length slots.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:VALues` on page 116

Cover ← DRC Channel

(enabled for access terminal working in traffic mode only)

Selects the data rate control (DRC) channel Walsh cover.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:COVer` on page 114

Gating Active ← DRC Channel

(enabled for access terminal working in traffic mode only)

Activates or deactivates the data rate control (DRC) Channel gating.


With deactivated gating, each DRC value is repeated for DRC length slots.

Example:

DRCLength = 4

Gating OFF

Forward traffic channel

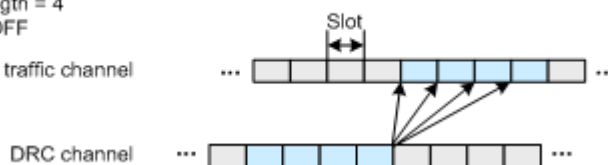


If gating is active, each value of the DRC channel is transmitted for one slot followed by DRCLength-1 empty slots.

Example:

DRCLength = 4

Gating ON

Forward traffic channel

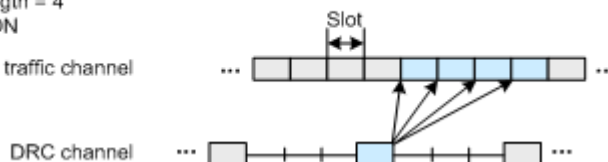


Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe]` on page 115

ACK Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > ACK Channel".

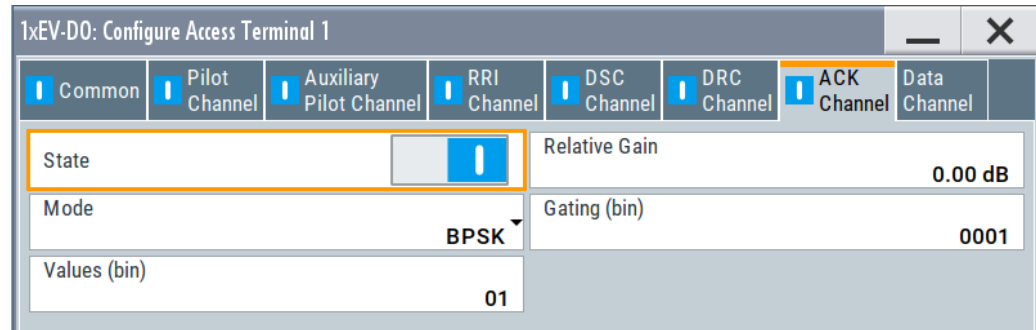**State ← ACK Channel**

(enabled for access terminal working in traffic mode only)

Enables or disables the ACK channel.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:TERMINAL<st>:ACKCHANNEL:STATE](#) on page 102**Relative Gain ← ACK Channel**

(enabled for access terminal working in traffic mode only)

Sets the gain of the ACK channel relative to the pilot channel power.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:TERMINAL<st>:ACKCHANNEL:GAIN](#) on page 101**Mode ← ACK Channel**

(enabled for access terminal working in traffic mode only)

Specifies the modulation mode of the ACK channel.

"BPSK" Sets the modulation to BPSK (Binary Phase Shift Keying). With BPSK modulation, a 0 (ACK) is mapped to +1 and a 1 (NAK) to -1 respectively.

"OOK" Sets the modulation to OOK (On/Off keying). With OOK modulation, a 0 (ACK) is mapped to ON and a 1 (NAK) to OFF.

Note: OOK modulation is only enabled for physical layer subtype 2.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:TERMINAL<st>:ACKCHANNEL:MODE](#) on page 102**Gating (bin) ← ACK Channel**

(enabled for access terminal working in traffic mode only)

Sets the active and inactive slots of the ACK channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern.

A 0 gates the ACK channel off for the corresponding slot, a 1 activates the channel.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:ACKChannel:GATing on page 101

Values ← ACK Channel

(enabled for access terminal working in traffic mode only)

Specifies the data pattern transmitted on the ACK Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. A 0 specifies an ACK, a 1 specifies a NAK. This pattern is only read for slots that are gated on.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:ACKChannel:VALues on page 103

Data Channel

Access:

Select "Baseband > 1xEV-DO > Access Terminals > Terminal > Data Channel".




State ← Data Channel


(enabled for access terminal working in traffic mode only)

Enables or disables the state of the packets.


There are three configurable packets ("Packet 1... 3") for physical layer subtype 2. When more than one packet is active, packet 1 is sent on the first subframe (first four slots). Packets 2 and 3 are sent respectively on the second and the third subframe (see figure below).

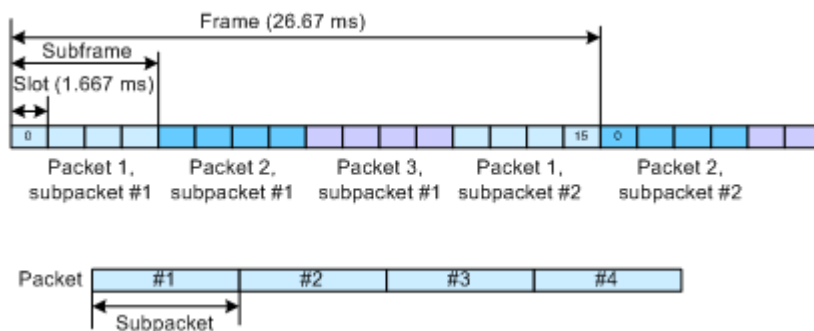

When only one packet is active and "Number of Subpackets" is set to 1, no interleaving is performed between the packets. In this case, the data channel is active continuously (see figure below).

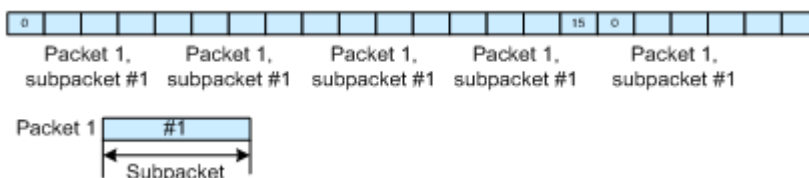

When only one packet is active but the number of subpackets is larger than one, interleave subframe. In this case, two subframes are left empty in-between every two subpackets (see figure below).

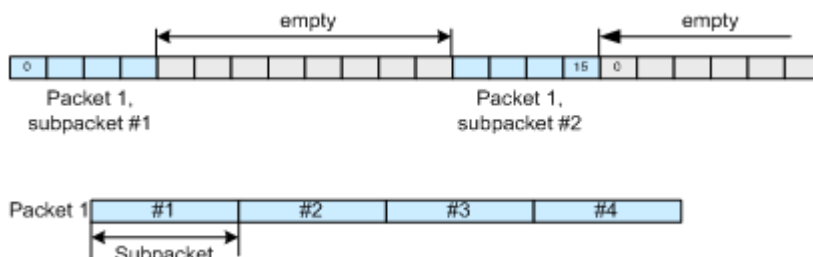

Only one configurable packet is available for physical layer subtype 0&1, the data channel is continuously active for the number of packets to send.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:STATe`
on page 113

Gain/db ← Data Channel

(enabled for access terminal working in traffic mode only)

Sets the gain in dB of the selected packet relative to the pilot channel power.

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURCE<hw>] :BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:GAIN`
on page 111

Infinite Packets ← Data Channel

(enabled for access terminal working in traffic mode only)

Enables or disables sending an unlimited number of packets.

If "Infinite Packets" is disabled, the number of packets to send can be specified with the parameter "Number of Packets to Send".

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite`
on page 111

Packets To Send ← Data Channel

(enabled for access terminal working in traffic mode only)

Sets the number of packets to be sent.

The number of packets to send depends on whether the parameter "Infinite Packets" is enabled or disabled. If "Infinite Packets" is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified. The data channel will be switched off after the specified "Number of Packets" have been sent.

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNT`
on page 108

Subpackets ← Data Channel

(enabled for physical layer subtype 2 and an access terminal working in traffic mode only)

Sets the number of subpackets to be sent.

Example:

If number of subpackets is 4, then subpacket 0, 1, 2 and 3 of a packet is sent in a sub-frame each (with two subframes interleaving between). Afterward the next packet is started. It simulates a situation where three times NAK has been received from the base station with an ACK after the fourth subpacket.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:
SUBPackets [:COUNT]` on page 113

Payload Size/bits ← Data Channel

(enabled for access terminal working in traffic mode only)

Sets the payload size in bits for the selected packet.

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZE
on page 112

Modulation ← Data Channel

(enabled for physical layer subtype 2 and an access terminal working in traffic mode only)

Displays the modulation type per packet.

The modulation type is set automatically according to the selected payload size. The value is read-only.

Remote-control command: SOUR:BB:EVDO:TERM2:DCH:PACK3:MOD?

"B4"	The modulation type is set to BPSK modulation with 4-ary Walsh cover.
"Q4"	The modulation type is set to QPSK modulation with 4-ary Walsh cover.
"Q2"	The modulation type is set to QPSK modulation with 2-ary Walsh cover.
"Q4Q2"	Sum of Q4 and Q2 modulated symbols.
"E4E2"	Sum of E4 (8-PSK modulated with 4-ary Walsh cover) and E2 (8-PSK modulated with 2-ary Walsh cover) modulated symbols.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:
MODulation? on page 112

Data Rate/kbps ← Data Channel

(enabled for access terminal working in traffic mode only)

Displays the resulting data rate for the selected packet.

The data rate is the effective data rate achieved for the specific packet. Sum up the data rates of all three packets to obtain the total effective data rate for the uplink data channel.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATE?
on page 110

Channel Coding ← Data Channel

(enabled for access terminal working in traffic mode only)

Activates or deactivates channel coding, including scrambling, turbo encoding and channel interleaving.

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing
on page 108

Data Source ← Data Channel

(enabled for access terminal working in traffic mode only)

Selects the data source.

The number of bits read from the data source for each packet depends on the payload size, channel coding state and FCS state. The following table gives an overview on the number of bits read.

	FCS ON	FCS OFF
Channel Coding ON	PayloadSize - FCSSize - 6	PayloadSize - 6
Channel Coding OFF	(PayloadSize/CodeRate) - FCSSize	(PayloadSize/CodeRate)

FCSSize and code rate depend on the physical layer subtype (see that table bellow).

	Physical layer subtype 0&1	Physical layer subtype 2
FCSSize	16	24
Code rate	1/4 or 1/2	1/5 or 1/3

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- Section "Modulation Data" in the R&S SMW user manual.
- Section "File and Data Management" in the R&S SMW user manual.
- Section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA`
on page 109

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSElection` on page 109

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATtern` on page 109

FCS ← Data Channel

(enabled for access terminal working in traffic mode only)

Enables or disables appending a standard frame check sequence (FCS) to the MAC layer packet.

Note: Configuration of "Packet 2" and "Packet 3" transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS [:STATe]` on page 110

State ← Data Channel

(enabled for access terminal working in access mode only)

Enables or disables the state of the data channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:STATe` on page 114

Relative Gain ← Data Channel

(enabled for access terminal working in access mode only)

Sets the gain in dB of the data channel relative to the pilot channel power.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:GAIN` on page 107

Capsule Length ← Data Channel

(enabled for access terminal working in access mode only)

Sets the number of frames (16 slots each) to be transmitted after the preamble. Each frame contains one data packet.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:CLEngth` on page 105

Data Rate ← Data Channel

(enabled for access terminal working in access mode only)

Selects the data rate for the data channel.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:DRATe` on page 106

Data Source ← Data Channel

(enabled for access terminal working in access mode only)

Selects the data source.

The following standard data sources are available:

- "All 0, All 1"
An internally generated sequence containing 0 data or 1 data.
- "PNxx"
An internally generated pseudo-random noise sequence.
- "Pattern"
An internally generated sequence according to a bit pattern.
Use the "Pattern" box to define the bit pattern.
- "Data List/Select DList"
A binary data from a data list, internally or externally generated.
Select "Select DList" to access the standard "Select List" dialog.
 - Select the "Select Data List > navigate to the list file *.dm_iqd > Select" to select an existing data list.
 - Use the "New" and "Edit" functions to create internally new data list or to edit an existing one.
 - Use the standard "File Manager" function to transfer external data lists to the instrument.

See also:

- Section "Modulation Data" in the R&S SMW user manual.
- Section "File and Data Management" in the R&S SMW user manual.
- Section "Data List Editor" in the R&S SMW user manual

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:DATA` on page 105

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:DATA:PATtern`

on page 106

Append FCS ← Data Channel

(enabled for access terminal working in access mode only)

Enables or disables appending a standard frame check sequence (FCS) to the MAC layer packet.

Remote command:

`[:SOURce<hw>] :BB:EVDO:TERMinal<st>:DCHannel:FCS [:STATe]`

on page 107


4.10 Filter / Clipping / ARB Settings

Access:

- ▶ Select "General > Filter/Clipping/ARB/IQ Settings".

The dialog comprises the settings, necessary to configure the baseband filter, sample rate variation and clipping.

4.10.1 Filter Settings

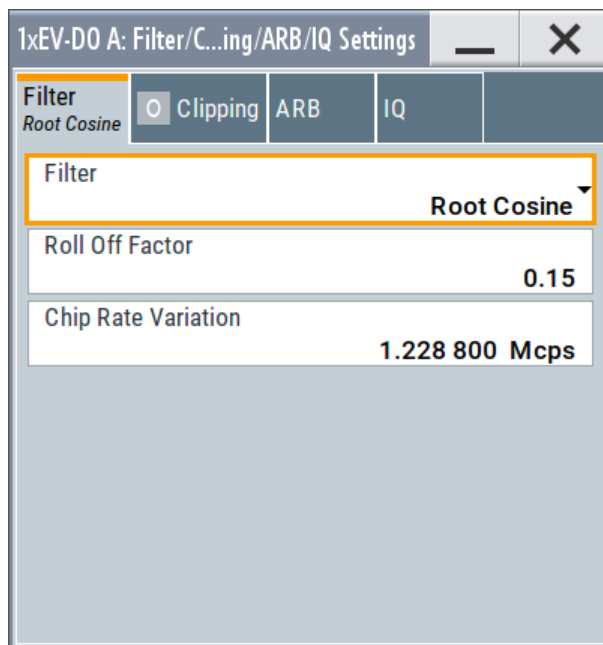

Settings:

Filter

Selects the baseband filter.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:TYPE](#) on page 75

Roll Off Factor or BxT

Sets the filter parameter.

The filter parameter ("Roll off Factor" or "BxT") depends on the currently selected filter type. This parameter is preset to the default for each of the predefined filters.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:APCO25](#) on page 73

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:COSine](#) on page 73

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:GAUSS](#) on page 74

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:PGAuss](#) on page 74

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:RCOSine](#) on page 75

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:SPHase](#) on page 75

Cut Off Frequency Factor

Sets the value for the cutoff frequency factor. The cutoff frequency of the filter can be adjusted to reach spectrum mask requirements.

Remote command:

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:LPASS](#) on page 74

[\[:SOURCE<hw>\]:BB:EVDO:FILTer:PARAmeter:LPASSEVM](#) on page 74

Chip Rate Variation

Enters the chip rate.

The chip rate entry changes the output clock and the modulation bandwidth.


Remote command:

[\[:SOURce<hw>\]:BB:EVDO:CRATe:VARiation](#) on page 73

4.10.2 Clipping Settings

► Access:

Select "Baseband > 1xEV-DO > General > Filter/Clipping/ARB/IQ Settings > Clipping"

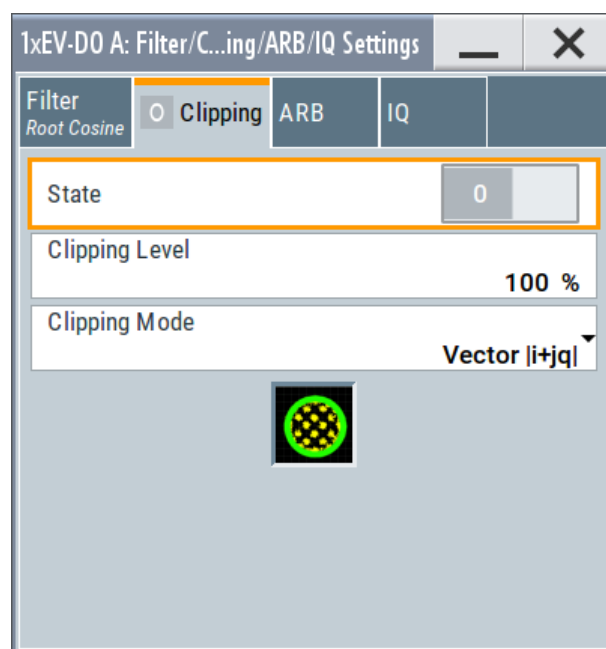

Provided are the following settings for configuring the clipping settings:

Clipping State

(For reverse link mode only)

Switches baseband clipping on and off.

Baseband clipping is a simple and effective way of reducing the crest factor of the signal. Since clipping is done before filtering, the procedure does not influence the spectrum. The EVM however increases.

1xEV-DO signals can have high crest factors particularly with many channels and long sequences.

Remote command:

[\[:SOURce<hw>\]:BB:EVDO:CLIPping:STATe](#) on page 72

Clipping Level

(For reverse link mode only)

Sets the limit for clipping.

This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Remote command:

[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel on page 71

Clipping Mode

(For reverse link mode only)

Selects the clipping method. The dialog displays a graphical illustration on how this two methods work.

- "Vector $|i + jq|$ "
The limit is related to the amplitude $|i + q|$. The I and Q components are mapped together, the angle is retained.
- "Scalar $|i|, |q|$ "
The limit is related to the absolute maximum of all the I and Q values $|i| + |q|$. The I and Q components are mapped separately, the angle changes.


Remote command:

[:SOURce<hw>]:BB:EVDO:CLIPping:MODE on page 72

4.10.3 ARB Settings

► Access:

Select "Baseband > 1xEV-DO > General > Filter/Clipping/ARB/IQ Settings > ARB"

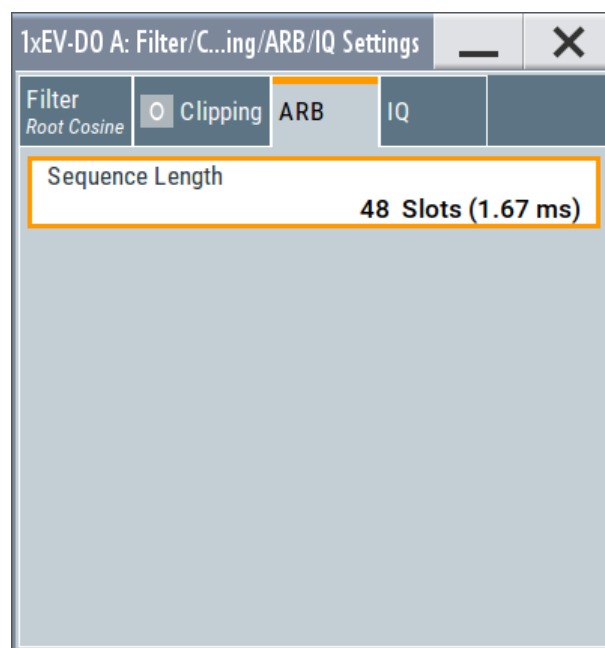

Provided are the following settings for configuring the ARB settings:

Sequence Length ARB

(For reverse link mode only)

Changes the sequence length of the arbitrary waveform component of the 1xEV-DO signal. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the realtime signal components.

The number of chips is determined from this sequence length. One slot of 1.67ms duration equals 2048 chips.


Remote command:

[:SOURce<hw>] :BB:EVDO:SLENgth on page 70

4.10.4 I/Q Setting

► Access:

Select "Baseband > 1xEV-DO > General > Filter/Clipping/ARB/IQ Settings > IQ"

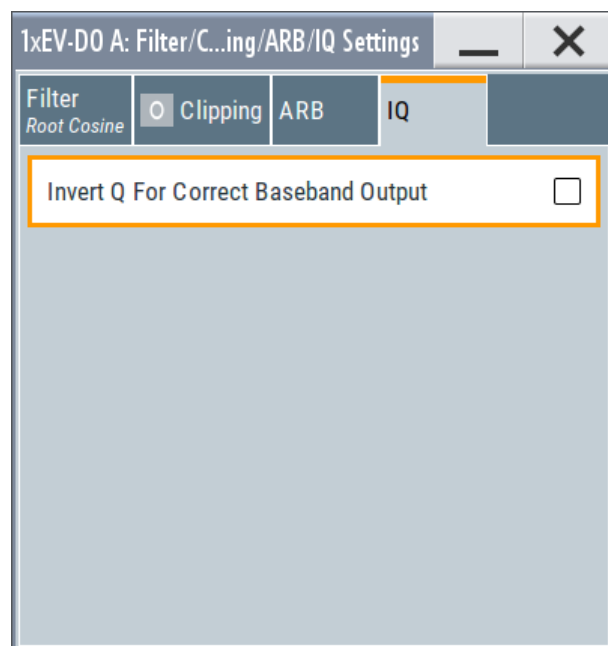

Provided are the following settings for configuring the IQ settings:

Invert Q for Correct Baseband Output

With its default 1xEV-DO settings, the R&S SMW generates a standard compliant *RF* signal.

If a standard compliant *baseband* signal is required, enable this parameter to invert the Q-part of the baseband signal.

If both, the RF signal and baseband signal have to be compliant with the 1xEV-DO standard:

- Set "Invert Q for Correct Baseband Output > On"

- Set "I/Q Mod > I/Q Settings > I/Q Swap > On"

See also R&S SMW user manual, section "Applying I/Q Vector Modulation".

Remote command:

[:SOURce<hw>] :BB:EVDO:IQSWap:STATe on page 76

5 Remote-Control Commands

The following commands are required to generate signals with the 1xEV-DO options in a remote environment. We assume that the R&S SMW has already been set up for remote operation in a network as described in the R&S SMW documentation. A knowledge about the remote control operation and the SCPI command syntax are assumed.



Conventions used in SCPI command descriptions

For a description of the conventions used in the remote command descriptions, see section "Remote Control Commands" in the R&S SMW user manual.

Common Suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
ENTity<ch>	1 to 4	entity in a multiple entity configuration with separate baseband sources ENTity3 4 require option R&S SMW-K76
SOURce<ch>	[1] to 4	available baseband signals only SOURce1 possible, if the keyword ENTity is used
OUTPut<ch>	1 to 3	available markers
CARRier<Ch>	0 to 21	band class
USER<ST>	1 to 4	user
TERMinal<ST>	1 to 4	terminal



Using SCPI command aliases for advanced mode with multiple entities

You can address multiple entities configurations by using the SCPI commands starting with the keyword `SOURce` or the alias commands starting with the keyword `ENTity`.

Note that the meaning of the keyword `SOURce<hw>` changes in the second case.

For details, see section "SCPI Command Aliases for Advanced Mode with Multiple Entities" in the R&S SMW user manual.

The following commands specific to the 1xEV-DO are described here:

- [Programming Examples](#).....65
- [General Commands](#).....68
- [Filter/Clipping/ARB Commands](#).....71
- [Trigger Commands](#).....76
- [Marker Commands](#).....80
- [Clock Commands](#).....82
- [Access Network Commands](#).....82

- [Multi-Carrier Configuration Commands](#).....87
- [Configure Traffic User Commands](#).....89
- [Configure Access Terminal Commands](#).....99

5.1 Programming Examples

Example: Performing general tasks

This example shows how to enable the option with predefined settings as basis for further customization (e.g. defining the transmission direction, etc.). Results and configuration are stored with the save/recall function.

```
// *****
// Reset instrument first
// *****
*RST; *CLS

SOURcel:BB:EVDO:PRESet
SOURcel:BB:EVDO:STATe ON
SOURcel:BB:EVDO:SETTing:STORe "/var/user/1xEVDO_def"

// *****
// Recall settings
// *****
MME:CDIR "/var/user/"
SOURcel:BB:EVDO:SETTing:CATalog?
// 1xEVDO_def,1xEVDO_dl,1xEVDO_test
SOURcel:BB:EVDO:SETTing:DELeTe "1xEVDO_test"
SOURcel:BB:EVDO:SETTing:LOAD "1xEVDO_dl"

// *****
// Change the data transmission direction
// queries PN offset, sets the system time
// queries version and ARB sequence length
// generates and stores an waveform file in the current directory
// *****
SOURcel:BB:EVDO:LINK?
// DOWN
SOURcel:BB:EVDO:LINK UP
SOURcel:BB:EVDO:PNOffset?
// 0
SOURcel:BB:EVDO:STIME 32
SOURcel:BB:EVDO:SLENgth?
// 48
SOURcel:BB:EVDO:VERSion?
// Release B
SOURcel:BB:EVDO:WAVEform:CREate "wv1xEVDO_ul"
```

Example: Adjusting clock and trigger settings

The following example lists the provided commands:

```
// *****
// Clock settings
// *****
SOURCE1:BB:EVDO:CLOCK:SOURCE INTERNAL

// *****
// Configure and enable signal generation
// *****
SOURCE1:BB:EVDO:TRIGGER:SOURCE INTERNAL
SOURCE1:BB:EVDO:TRIGGER:SEQUENCE ARETRIGGER
SOURCE1:BB:EVDO:STAT ON
SOURCE1:BB:EVDO:TRIGGER:EXECUTE
SOURCE1:BB:EVDO:TRIGGER:ARM:EXECUTE
// SOURCE1:BB:EVDO:TRIGGER:SEQUENCE SING
// SOURCE1:BB:EVDO:TRIGGER:SLUNIT CHIP
// SOURCE1:BB:EVDO:TRIGGER:SLENGTH 2
SOURCE1:BB:EVDO:TRIGGER:RMODE?
// Stopped
SOURCE1:BB:EVDO:TRIGGER:EXECUTE
SOURCE1:BB:EVDO:TRIGGER:RMODE?
// Run

// SOURCE1:BB:EVDO:TRIGGER:SOURCE EGT1
// SOURCE1:BB:EVDO:TRIGGER:EXTERNAL:SYNCHRONIZE:OUTPUT ON
// SOURCE1:BB:EVDO:TRIGGER:EXTERNAL:INHIBIT 200
// SOURCE1:BB:EVDO:TRIGGER:EXTERNAL:DELAY 100

// SOURCE1:BB:EVDO:TRIGGER:SOURCE INTB
// SOURCE1:BB:EVDO:TRIGGER:OBASEBAND:INHIBIT 200
// SOURCE1:BB:EVDO:TRIGGER:OBASEBAND:DELAY 100
```

Example: Configure and enable standard marker signals

```
SOURCE1:BB:EVDO:TRIGGER:OUTPUT1:MODE RATIO
SOURCE1:BB:EVDO:TRIGGER:OUTPUT1:ONTIME 40
SOURCE1:BB:EVDO:TRIGGER:OUTPUT1:OFFTIME 20
SOURCE1:BB:EVDO:TRIGGER:OUTPUT3:MODE USER
SOURCE1:BB:EVDO:TRIGGER:OUTPUT3:PERIOD 100

SOURCE1:BB:EVDO:TRIGGER:OUTPUT3:DELAY 1000
```

Example: Generating a downlink multicarrier signal

This example shows how to enable the multi-carrier configuration and generate a signal composed of four carriers within a selected band class.

```
// *****
// Reset instrument first
// *****
*RST; *CLS

SOURCE1:BB:EVDO:LINK?
// DOWN

:SOURCE1:BB:EVDO:DOWN:MC:BCLASS BC11

:SOURCE1:BB:EVDO:DOWN:MC:CARRIER1:STATE 1
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER2:CHANNEL 10
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER2:STATE 1
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER3:CHANNEL 5
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER4:CHANNEL 500
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER4:STATE 1
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER5:CHANNEL 100
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER6:CHANNEL 1200
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER6:CHANNEL?
// 871 (channel 1200 is not allowed; the software selects the next available channel)
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER7:CHANNEL 1536
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER8:CHANNEL 1700
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER8:STATE 1
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER9:CHANNEL 240
:SOURCE1:BB:EVDO:DOWN:MC:STATE 1

:SOURCE1:BB:EVDO:STATE 1

:SOURCE1:BB:EVDO:DOWN:MC:CFREQUENCY?
// 456900000
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER1:FREQUENCY?
// 460000000
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER2:FREQUENCY?
// 460225000
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER4:FREQUENCY?
// 420700000
:SOURCE1:BB:EVDO:DOWN:MC:CARRIER8:FREQUENCY?
//493100000

// apply a carrier delay to reduce the crest factor
:SOURCE1:BB:EVDO:DOWN:MC:CDELAY 0.000001
// Carrier#1 is delayed by 0 ns, carrier#2 by 1000 ns,
// carrier#4 by 2000 ns, carrier#8 by 3000 ns
```

5.2 General Commands

This section contains commands for the primary and general settings of the 1xEV-DO standard. These settings concern activation of the standard, setting the transmission direction, defining the chip rate and the sequence length, as well as the preset and power adjust setting.

<code>[SOURce<hw>]:BB:EVDO:LINK</code>	68
<code>[SOURce<hw>]:BB:EVDO:PNOFset</code>	68
<code>[SOURce<hw>]:BB:EVDO:PRESet</code>	68
<code>[SOURce<hw>]:BB:EVDO:SETTing:CATalog?</code>	69
<code>[SOURce<hw>]:BB:EVDO:SETTing:DELeTe</code>	69
<code>[SOURce<hw>]:BB:EVDO:SETTing:LOAD</code>	69
<code>[SOURce<hw>]:BB:EVDO:SETTing:STORe</code>	69
<code>[SOURce<hw>]:BB:EVDO:SLENgth</code>	70
<code>[SOURce<hw>]:BB:EVDO:STATe</code>	70
<code>[SOURce<hw>]:BB:EVDO:STIMe</code>	70
<code>[SOURce<hw>]:BB:EVDO:VERSion?</code>	71
<code>[SOURce<hw>]:BB:EVDO:WAVEform:CREate</code>	71

`[SOURce<hw>]:BB:EVDO:LINK <Link>`

Defines the transmission direction.

Parameters:

<Link> FORWARD/DOWN | REVERSE/UP
*RST: DOWN

Example: see [Example "Performing general tasks"](#) on page 65

Manual operation: See ["Link Direction"](#) on page 15

`[SOURce<hw>]:BB:EVDO:PNOFset <PnOffset>`

Sets the PN Offset of the 1xEV-DO signal.

Parameters:

<PnOffset> integer
Range: 0 to 511
*RST: 0

Example: see [Example "Performing general tasks"](#) on page 65

Manual operation: See ["PN Offset"](#) on page 15

`[SOURce<hw>]:BB:EVDO:PRESet`

Sets the parameters of the digital standard to their default values (*RST values specified for the commands).

Not affected is the state set with the command `SOURce<hw>:BB:EVDO:STATe`.

Example: see [Example "Performing general tasks"](#) on page 65

Usage: Event

Manual operation: See ["Set To Default"](#) on page 14

[:SOURce<hw>]:BB:EVDO:SETTing:CATalog?

Queries the files with 1xEV-DO settings (file extension *.1xevdo) in the default or the specified directory.

Return values:

<Catalog> "<filename1>,<filename2>,..."

Returns a string of filenames separated by commas.

Example: See [Example "Performing general tasks"](#) on page 65

Usage: Query only

Manual operation: See ["Save/Recall"](#) on page 14

[:SOURce<hw>]:BB:EVDO:SETTing:DELeTe <Filename>

Deletes the selected file from the default or specified directory. Deleted are files with the file extension *.1xevdo.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 65

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 14

[:SOURce<hw>]:BB:EVDO:SETTing:LOAD <Filename>

Loads the selected file from the default or the specified directory. Loads are files with extension *.1xevdo.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 65

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 14

[:SOURce<hw>]:BB:EVDO:SETTing:STORe <Filename>

Stores the current settings into the selected file; the file extension *.1xevdo is assigned automatically.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 65**Usage:** Setting only**Manual operation:** See ["Save/Recall"](#) on page 14**[[:SOURce<hw>]:BB:EVDO:SLENgth <SLength>**

(For reverse link mode only)

Sets the sequence length of the arbitrary waveform component of the 1xEV-DO signal in number of frames. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the real time signal components. The number of chips is determined from this sequence length. One slot of 1.67ms duration equals 2048 chips.

Parameters:

<SLength> integer
 Range: 4 to dynamic
 Increment: 4
 *RST: 48

Example: See [Example "Performing general tasks"](#) on page 65**Manual operation:** See ["Sequence Length ARB"](#) on page 62**[[:SOURce<hw>]:BB:EVDO:STATe <State>**

Activates the standard and deactivates all the other digital standards and digital modulation modes in the same path.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: see [Example "Performing general tasks"](#) on page 65**Manual operation:** See ["State"](#) on page 13**[[:SOURce<hw>]:BB:EVDO:STIME <STime>**

Sets the System Time value of the 1xEV-DO signal and the base station. The System Time value is expressed in units of 1.67 ms intervals (80 ms/ 48).

Note: In uplink, the value selected for system time must be multiple of 16.**Parameters:**

<STime> integer
 Range: 0 to 2199023255551
 *RST: 0

Example: see [Example "Performing general tasks"](#) on page 65

Manual operation: See ["System Time"](#) on page 15

[:SOURce<hw>]:BB:EVDO:VERSion?

Queries the version of the 1xEV-DO standard underlying the definitions

Return values:

<Version> string

Example: see [Example "Performing general tasks"](#) on page 65

Usage: Query only

Manual operation: See ["1xEV-DO Version"](#) on page 15

[:SOURce<hw>]:BB:EVDO:WAVeform:CREate <Filename>

Creates a waveform using the current settings. The file is stored with the predefined file extension *.wv. The filename and the directory it is stored in are user-definable.

Setting parameters:

<Filename> string

Example: See [Example "Performing general tasks"](#) on page 65

Usage: Setting only

Manual operation: See ["Generate Waveform"](#) on page 14

5.3 Filter/Clipping/ARB Commands

[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel	71
[:SOURce<hw>]:BB:EVDO:CLIPping:MODE	72
[:SOURce<hw>]:BB:EVDO:CLIPping:STATe	72
[:SOURce<hw>]:BB:EVDO:CRATe:VARiation	73
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:APCO25	73
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:COSine	73
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:GAUSS	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASs	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASSEVM	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:PGAuss	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:RCOSine	75
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:SPHase	75
[:SOURce<hw>]:BB:EVDO:FILTer:TYPE	75
[:SOURce<hw>]:BB:EVDO:IQSWap:STATe	76

[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel <Level>

(For reverse link mode only)

The command sets the limit for level clipping (Clipping). This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Level clipping is activated with the command `SOUR:BB:EVDO:CLIP:STAT ON`

Parameters:

<Level> integer
 Range: 0 PCT to 100 PCT
 Increment: 1 PCT
 *RST: 100 PCT

Example:

`BB:EVDO:CLIP:LEV 80PCT`
 sets the limit for level clipping to 80% of the maximum level.
`BB:EVDO:CLIP:STAT ON`
 activates level clipping.

Manual operation: See "[Clipping Level](#)" on page 61

[:SOURce<hw>]:BB:EVDO:CLIPping:MODE <Mode>

(For reverse link mode only)

Sets the method for level clipping.

Parameters:

<Mode> VECTOR | SCALAR
VECTOR
 The reference level is the amplitude $|i+jq|$
SCALAR
 The reference level is the absolute maximum of the I and Q values.
 *RST: VECTOR

Example:

`BB:EVDO:CLIP:MODE SCAL`
`BB:EVDO:CLIP:LEV 80PCT`
 Sets the limit for level clipping to 80% of this maximum level.
`BB:EVDO:CLIP:STAT ON`

Manual operation: See "[Clipping Mode](#)" on page 61

[:SOURce<hw>]:BB:EVDO:CLIPping:STATE <State>

(For reverse link mode only)

The command activates level clipping (Clipping). The value is defined with the command `BB:EVDO:CLIPping:LEVel`, the mode of calculation with the command `BB:EVDO:CLIPping:MODE`.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example: BB:EVDO:CLIP:STAT ON
activates level clipping.

Manual operation: See "[Clipping State](#)" on page 60

[[:SOURce<hw>]:BB:EVDO:CRATe:VARiation <Variation>

Enters the output chip rate.

The output chip rate changes the output clock and the modulation bandwidth, as well as the synchronization signals that are output. It does not affect the calculated chip sequence.

Parameters:

<Variation> float
Range: 1 Mcps to 5 Mcps
Increment: 1E-6 Mcps (1cps)
*RST: 1.2288 Mcps

Example: BB:EVDO:CRAT:VAR 4086001
sets the chip rate to 4.08 Mcps.

Manual operation: See "[Chip Rate Variation](#)" on page 60

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:APCO25 <Apco25>

Sets the rolloff factor for filter type APCO25.

Parameters:

<Apco25> float
Range: 0.05 to 0.99
Increment: 0.01
*RST: 0.2

Example: BB:EVDO:FILT:PAR:APCO25 0.2
Sets the rolloff factor to 0.2 for filter type APCO25.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:COSSine <Cosine>

Sets the rolloff factor for the Cosine filter type.

Parameters:

<Cosine> float
Range: 0.05 to 1
Increment: 0.01
*RST: 0.1

Example: BB:EVDO:FILT:PAR:COS 0.35
Sets the rolloff factor to 0.35 for filter type Cosine.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:GAUSSs <Gauss>

Sets the rolloff factor for the Gauss filter type.

Parameters:

<Gauss> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 0.5

Example: BB:EVDO:FILT:PAR:GAUS 0.5
 Sets BxT to 0.5 for the Gauss filter type.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASSs <LPass>

Sets the cutoff frequency factor for the lowpass filter (ACP Opt.) type.

Parameters:

<LPass> float
 Range: 0.05 to 2
 Increment: 0.01
 *RST: 0.5

Example: BB:EVDO:FILT:PAR:LPAS 0.5
 The cut of frequency factor is set to 0.5.

Manual operation: See "[Cut Off Frequency Factor](#)" on page 59

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASSEVM <LPassEvm>

Sets the cutoff frequency factor for the lowpass filter (EVM Opt.) type.

Parameters:

<LPassEvm> float
 Range: 0.05 to 2
 Increment: 0.01
 *RST: 0.5

Example: BB:EVDO:FILT:PAR:LPASSEVM 0.5
 The cut of frequency factor is set to 0.5.

Manual operation: See "[Cut Off Frequency Factor](#)" on page 59

[[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:PGAUSS <PGauss>

Sets the rolloff factor for the Pure Gauss filter type.

Parameters:

<PGauss> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 0.5

Example:

BB:EVDO:FILT:PAR:GAUS 0.5
 Sets BxT to 0.5 for the Pure Gauss filter type.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[:SOURCE<hw>]:BB:EVDO:FILT:PARAMeter:RCOSine <RCosine>

Sets the rolloff factor for the Root Cosine filter type.

Parameters:

<RCosine> float
 Range: 0.05 to 1
 Increment: 0.01
 *RST: 0.15

Example:

BB:EVDO:FILT:PAR:RCOS 0.22
 Sets the rolloff factor to 0.22 for filter type Root Cosine.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[:SOURCE<hw>]:BB:EVDO:FILT:PARAMeter:SPHase <SPHase>

Sets BxT for the Split Phase filter type.

Parameters:

<SPHase> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 2

Example:

BB:EVDO:FILT:PAR:SPH 0.5
 Sets BxT to 0.5 for the Split Phase filter type.

Manual operation: See "[Roll Off Factor or BxT](#)" on page 59

[:SOURCE<hw>]:BB:EVDO:FILT:TYPE <Type>

The command selects the filter type.

Parameters:

<Type> RCOSine | COSine | GAUSSs | LGAuss | CONE | COF705 |
 COEQUALizer | COFEQUALizer | C2K3x | APCO25 | SPHase |
 RECTangle | PGAuss | LPASs | DIRac | ENPShape |
 EWPSHape | LPASSEVM
 *RST: Downlink: COEQ; Uplink: CONE

Example: BB:EVDO:FILT:TYPE CONE
Sets the filter type CdmaOne. This filter type is defined by the standard for the uplink.

Manual operation: See "Filter" on page 59

[:SOURce<hw>]:BB:EVDO:IQSWap:STATe <State>

Inverts the Q-part of the baseband signal

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: SOURce1:BB:EVDO:IQSWap:STATe ON
inverts the Q-part of the baseband signal
SOURce:IQ:SWAP:STATe ON
swaps the I and Q signals

Manual operation: See "Invert Q for Correct Baseband Output" on page 62

5.4 Trigger Commands

[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQUence.....	76
[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:EXTErnal:SYNChronize:OUTPut.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:RMODE?.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce.....	79
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTErnal]:DELay.....	79
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTErnal]:INHibit.....	79

[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQUence <Sequence>

Selects the trigger mode:

- AUTO = auto
- RETRigger = retrigger
- AAUTO = armed auto
- ARETrigger = armed retrigger
- SINGLE = single

Parameters:

<Sequence> AUTO | RETRigger | AAUTO | ARETrigger | SINGLE
*RST: AUTO

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66.

Manual operation: See ["Trigger Mode"](#) on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute

Stops signal generation; a subsequent internal or external trigger event restart signal generation.

Example: see [Example "Adjusting clock and trigger settings"](#) on page 66

Usage: Event

Manual operation: See ["Arm"](#) on page 18

[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute

Executes a trigger.

Example: see [Example "Adjusting clock and trigger settings"](#) on page 66

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 18

[:SOURce<hw>]:BB:EVDO:TRIGger:EXTeRnal:SYNChronize:OUTPut <Output>

Enables signal output synchronous to the trigger event.

Parameters:

<Output> 0 | 1 | OFF | ON
*RST: 1

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Manual operation: See ["Sync. Output to External Trigger/Sync. Output to Trigger"](#) on page 19

[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay <Delay>

Specifies the trigger delay for triggering by the trigger signal from the other baseband.

Parameters:

<Delay> float
Range: 0 to 2147483647
Increment: 0.01
*RST: 0

Example: See [\[:SOURce<hw>\]:BB:EVDO:TRIGger:OBASeband:INHibit](#) on page 78

Manual operation: See ["Trigger Delay"](#) on page 20

[[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit <Inhibit>

For triggering via the other path, specifies the duration by which a restart is inhibited.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Manual operation: See ["External Trigger Inhibit"](#) on page 20

[[:SOURce<hw>]:BB:EVDO:TRIGger:RMODE?

Queries the signal generation status.

Return values:

<RMode> STOP | RUN

Example: see [Example "Adjusting clock and trigger settings"](#) on page 66

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 18

[[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth <SLength>

Defines the length of the signal sequence that is output in the `SINGLE` trigger mode.

Parameters:

<SLength> integer
 Range: 1 to 4294967295
 *RST: 1

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Manual operation: See ["Trigger Signal Duration"](#) on page 18

[[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit <SLunit>

Defines the unit for the entry of the length of the signal sequence.

Parameters:

<SLunit> SLOT | CHIP | SEQUENCE
 *RST: SEQUENCE

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Manual operation: See ["Signal Duration Unit"](#) on page 17

[[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are:

- Internal triggering by a command (INTernal)
- External trigger signal via one of the local or global connectors
 - EGT1|EGT2: External global trigger
 - EGC1|EGC2: External global clock
 - ELTRigger: External local trigger
 - ELClock: External local clock
- Internal triggering by a signal from the other basebands (INTA|INTB)
- In master-slave mode, the external baseband synchronization signal (BBSY)
- OBASeband|BEXTernal|EXTernal: Setting only
 Provided only for backward compatibility with other Rohde & Schwarz signal generators.
 The R&S SMW accepts these values and maps them automatically as follows:
 EXTernal = EGT1, BEXTernal = EGT2, OBASeband = INTA or INTB
 (depending on the current baseband)

Parameters:

<Source> INTB|INTernal|OBASeband|EGT1|EGT2|EGC1|EGC2|ELTRigger|INTA|ELCLock|BEXTernal|EXTernal | BBSY
 *RST: INTernal

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Options: ELTRigger|ELCLock require R&S SMW-B10
 BBSY require R&S SMW-B9

Manual operation: See ["Trigger Source"](#) on page 18

[[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:DELay <Delay>

Sets the trigger delay.

Parameters:

<Delay> float
 Range: 0 to 2147483647
 Increment: 0.01
 *RST: 0
 Default unit: samples

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66.

Manual operation: See ["Trigger Delay"](#) on page 20

[[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:INHibit <Inhibit>

Specifies the duration by which a restart is inhibited.

Parameters:

<Inhibit> integer
 Range: 0 to 21.47*chipRate
 *RST: 0

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66.

Manual operation: See ["External Trigger Inhibit"](#) on page 20

5.5 Marker Commands

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod	81
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay	81

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

Parameters:

<Mode> SLOT | PNSPeriod | ESM | CSPeriod | USER | RATio

SLOT

Each slot (every 1.67 ms)

PNSPeriod

Every 26.67 ms (PN Sequence Period)

ESM

Every 2 s (even second mark).

CSPeriod

Each arbitrary waveform sequence

RATio

Regular marker signal

USER

Every user-defined period.

*RST: SLOT

Example:

SOURce:BB:EVDO:TRIGger:OUTPut2:MODE ESM
 selects the even second mark clock (every 2 seconds) on the
 output for marker signal 2

Manual operation: See ["Marker Mode"](#) on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime <OnTime>

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the duration during which the marker output is on or off.

^{*)} If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See chapter "Basics on ..." in the R&S SMW user manual.

Parameters:

<OffTime> integer
 Range: 1 (R&S SMW-B10) / 1* (R&S SMW-B9) to 16777215
 *RST: 1

Example: See [Example "Configure and enable standard marker signals"](#) on page 66.

Manual operation: See ["Marker Mode"](#) on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod <Period>

Sets the repetition rate for the signal at the marker outputs.

^{*)} If R&S SMW-B9 is installed, the minimum marker duration depends on the sample/symbol rate.

See chapter "Basics on ..." in the R&S SMW user manual.

Parameters:

<Period> integer
 Range: 1 (R&S SMW-B10) / 1* (R&S SMW-B9) to 16777215
 *RST: 2

Example: See [Example "Configure and enable standard marker signals"](#) on page 66.

Manual operation: See ["Marker Mode"](#) on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signals.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 0.001
 *RST: 0

Example: See [Example "Configure and enable standard marker signals"](#) on page 66

Manual operation: See ["Marker x Delay"](#) on page 22

5.6 Clock Commands

[:SOURce<hw>]:BB:EVDO:CLOCK:MODE.....	82
[:SOURce<hw>]:BB:EVDO:CLOCK:SOURce.....	82

[:SOURce<hw>]:BB:EVDO:CLOCK:MODE <Mode>

Sets the type of externally supplied clock.

Parameters:

<Mode> CHIP
 *RST: CHIP

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66

Options: R&S SMW-B10

Manual operation: See ["Clock Mode"](#) on page 23

[:SOURce<hw>]:BB:EVDO:CLOCK:SOURce <Source>

Selects the clock source:

- **INTernal:** Internal clock reference
- **ELCLock:** External local clock
- **EXTernal = ELCLock:** Setting only
 Provided for backward compatibility with other Rohde & Schwarz signal generators

Parameters:

<Source> INTernal|ELCLock|EXTernal
 *RST: INTernal

Example: See [Example "Adjusting clock and trigger settings"](#) on page 66.

Options: ELCLock requires R&S SMW-B10

Manual operation: See ["Clock Source"](#) on page 23

5.7 Access Network Commands

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOffset.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATE.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?.....	85
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth.....	85
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel.....	85

<code>[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDEX</code>	86
<code>[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet</code>	86
<code>[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATE</code>	86
<code>[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType</code>	86

`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFFset <PSoffset>`

Sets the offset (in slots) from the start of control channel cycle to the start of the synchronous message capsule that contains the Sync Message.

Parameters:

`<PSoffset>` integer
 Range: 0 to 3
 *RST: 0

Example: `BB:EVDO:ANET:CCH:PSOF 2`
 sets the packet start offset for the control channel to 2.

Manual operation: See "[Packet Start Offset](#)" on page 41

`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE <Rate>`

Sets the rate that the control channel messages are transmitted at.

Parameters:

`<Rate>` DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 |
 DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K |
 DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K |
 DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2
 *RST: 38.4 kbps

Example: `BB:EVDO:ANET:CCH:RATE DR76K8`
 sets the control channel rate to 76.8 kbps.

Manual operation: See "[Rate](#)" on page 41

`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum <Maximum>`

Sets the value of the maximum revision field within the control channel message.

Parameters:

`<Maximum>` integer
 Range: 0 to 255
 *RST: 1

Example: `BB:EVDO:ANET:CCH:REV:MAX 10`
 sets the value of the maximum revision field to 10.

Manual operation: See "[Maximum Revision](#)" on page 42

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum <Minimum>

Sets the value of the minimum revision field within the control channel message.

Parameters:

<Minimum> integer
 Range: 0 to 255
 *RST: 1

Example: BB:EVDO:ANET:CCH:REV:MIN 1
 sets the value of the minimum revision field to 1.

Manual operation: See "[Minimum Revision](#)" on page 41

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe <State>

Enables or disables the control channel messages.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: BB:EVDO:ANET:CCH:STAT ON
 enables the control channel message.

Manual operation: See "[State](#)" on page 41

[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode <CpMode>

Enables or disables a special mode within the 1xEV-DO generator.

Note: During the special mode, all other parameters do not affect the signal output.

Parameters:

<CpMode> 0 | 1 | OFF | ON
 *RST: 0

Example: BB:EVDO:ANET:CPM ON
 enables the special mode.

Manual operation: See "[Continuous Pilot Mode](#)" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount <OuCount>

Sets the number of additional users (beyond the four defined users) that appear in the MAC Channel.

Parameters:

<OuCount> integer
 Range: 0 to 55 for physical layer subtype 0&1) , 0 to 110 for physical layer subtype 2, 0 to 360 for physical layer subtype 3
 *RST: 1

Example: `BB:EVDO:ANET:OUC 5`
sets the number of additional users to 5.

Manual operation: See "[Other Users Count](#)" on page 39

[[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?

Displays the state of the pilot channel. Pilot channel is transmitted by sector on each active forward channel. It is present always and transmitted at the full sector power.

Return values:

<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:EVDO:ANET:PCH:STAT?`
displays the state of the pilot channel.

Usage: Query only

Manual operation: See "[State](#)" on page 40

[[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth <Length>

Sets the duration (in slots) of a Reverse Activity bit.

Note: This parameter is available for physical layer subtype 0&1 only.

Parameters:

<Length> RL8 | RL16 | RL32 | RL64
*RST: 8

Example: `BB:EVDO:ANET:RAB:LENG RL16`
sets the duration of the Reverse Activity Bit (RAB) to 16 slots.

Manual operation: See "[RAB Length](#)" on page 42

[[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVEl <Level>

Sets the power within the MAC block for the Reverse Activity channel.

Parameters:

<Level> float
Range: -25 to -7
Increment: 0.01
*RST: -7

Example: `BB:EVDO:ANET:RAB:LEV -7.0`
sets the power of the MAC block for the Reverse Activity Channel to -7.0 dB.

Manual operation: See "[RAB Level](#)" on page 42

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDEX <Index>

For physical layer, subtype 3 only sets the RAB MAC Index.

Parameters:

<Index> integer
 Range: 4 to 127
 *RST: 4

Manual operation: See "[RAB MAC Index](#)" on page 43

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet <Offset>

Sets the starting time offset of the Reverse Activity bit in slots. The command is specified in Reverse Activity Length/8 units. The RA bit starts when the following equation is satisfied:

System Time mod RAB length = RAB Offset, where System Time is expressed in slots.

Note: This parameter is available for physical layer subtype 0&1 only.

Parameters:

<Offset> integer
 Range: 0 to 7
 *RST: 0

Example: BB:EVDO:ANET:RAB:OFFS 1
 Sets the starting time offset of the Reverse Activity bit to 1.

Manual operation: See "[RAB Offset](#)" on page 42

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe <State>

Activates or deactivates the reverse activity bit (RAB).

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example: BB:EVDO:ANET:RAB:STAT ON
 activates the Reverse Activity Bit.

Manual operation: See "[State](#)" on page 42

[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType <Subtype>

Selects the physical layer subtype.

Note: The physical layer subtype settings can be queried per user.

Parameters:

<Subtype> S1 | S2 | S3
 *RST: S2

- Example:** BB:EVDO:ANET:SUBT S2
sets the physical layer subtype to 2.
- Options:** S3 requires option R&S SMW-K87
- Manual operation:** See " [Physical Layer Subtype \(User\)](#) " on page 26

5.8 Multi-Carrier Configuration Commands

Multi-Carrier Configuration requires option R&S SMW-K87

[:SOURce<hw>]:BB:EVDO:UP:MC:BClass	87
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BClass	87
[:SOURce<hw>]:BB:EVDO:UP:MC:CFRequency?	87
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFRequency?	87
[:SOURce<hw>]:BB:EVDO:UP:MC:CDElay	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CDElay	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATE	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATE	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREquency	89
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREquency	89
[:SOURce<hw>]:BB:EVDO:UP:MC:STATE	89
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATE	89

[\[:SOURce<hw>\]:BB:EVDO:UP:MC:BClass <BandClass>](#)
[\[:SOURce<hw>\]:BB:EVDO:DOWN:MC:BClass <BandClass>](#)

Selects the band class for operation, as defined in 3GPP2 C.S0057-E.

BC17 is supported in downlink only.

Parameters:

<BandClass> BC0 | BC1 | BC2 | BC3 | BC4 | BC5 | BC6 | BC7 | BC8 | BC9 |
 BC10 | BC11 | BC12 | BC13 | BC14 | BC15 | BC16 | BC17 |
 BC18 | BC19 | BC20 | BC21
 *RST: BC0

Example: see [Example "Generating a downlink multicarrier signal"](#)
on page 67

Options: R&S SMW-K87

Manual operation: See "[Band Class](#)" on page 37

[\[:SOURce<hw>\]:BB:EVDO:UP:MC:CFRequency?](#)
[\[:SOURce<hw>\]:BB:EVDO:DOWN:MC:CFRequency?](#)

Queries the center frequency of the band resulting from the set active carriers.

Return values:`<CenterFrequency>` integer**Example:** see [Example "Generating a downlink multicarrier signal"](#) on page 67**Usage:** Query only**Options:** R&S SMW-K87**Manual operation:** See ["Center Frequency \(band\)"](#) on page 37**[[:SOURce<hw>]:BB:EVDO:UP:MC:CDELay <CarrierDelay>****[[:SOURce<hw>]:BB:EVDO:DOWN:MC:CDELay <CarrierDelay>**

Sets a delay to each active carrier.

Parameters:`<CarrierDelay>` float

Range: 0 to 10E-6

Increment: 1E-9

*RST: 0

Example: see [Example "Generating a downlink multicarrier signal"](#) on page 67**Options:** R&S SMW-K87**Manual operation:** See ["Carrier Delay"](#) on page 37**[[:SOURce<hw>]:BB:EVDO:UP:MC:CARRIER<ch>:STATE <State>****[[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRIER<ch>:STATE <State>**

Switches the selected carrier on or off.

Parameters:`<State>` 0 | 1 | OFF | ON

*RST: 0

Example: see [Example "Generating a downlink multicarrier signal"](#) on page 67**Options:** R&S SMW-K87**Manual operation:** See ["State"](#) on page 37**[[:SOURce<hw>]:BB:EVDO:UP:MC:CARRIER<ch>:CHANNEL <Channel>****[[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRIER<ch>:CHANNEL <Channel>**

Sets carrier's CDMA channel number.

The available `Channel` values depend on the selected `Band Class`.

In some cases, not all channel numbers can be used. In case a non-existing channel is input, the next available channel is used.

Parameters:

<Channel> integer
 Range: 0 to 3000
 *RST: 1

Example: See [Example "Generating a downlink multicarrier signal"](#) on page 67

Options: R&S SMW-K87

Manual operation: See ["CDMA Channel Number"](#) on page 38

[:SOURce<hw>]:BB:EVDO:UP:MC:CARRIER<ch>:FREQUENCY <Frequency>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRIER<ch>:FREQUENCY <Frequency>

Sets the center frequency of the carrier in MHz. In some cases, not all center frequencies are defined by the selected band class. In case a non-existing frequency is input, the next available frequency is used.

Parameters:

<Frequency> float
 Range: 100 to 3000
 Increment: 1E-4
 *RST: 870.03

Example: See [Example "Generating a downlink multicarrier signal"](#) on page 67

Options: R&S SMW-K87

Manual operation: See ["Center Frequency"](#) on page 38

[:SOURce<hw>]:BB:EVDO:UP:MC:STATE <State>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATE <State>

Enables or disables multi-carrier operation.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: See [Example "Generating a downlink multicarrier signal"](#) on page 67

Options: R&S SMW-K87

5.9 Configure Traffic User Commands

[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTERN	90
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGTH	90
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet	91
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod	91

<code>[SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe</code>	91
<code>[SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE</code>	92
<code>[SOURce<hw>]:BB:EVDO:USER<st>:IFACTor</code>	92
<code>[SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDeX</code>	92
<code>[SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel</code>	93
<code>[SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNT</code>	93
<code>[SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite</code>	94
<code>[SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset</code>	94
<code>[SOURce<hw>]:BB:EVDO:USER<st>:PSIZE</code>	95
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RATE?</code>	95
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDeX</code>	96
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect</code>	96
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE</code>	97
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe</code>	97
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT</code>	97
<code>[SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNT</code>	98
<code>[SOURce<hw>]:BB:EVDO:USER<st>:SCOUNt?</code>	98
<code>[SOURce<hw>]:BB:EVDO:USER<st>:STATe</code>	98

`[SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATtern` <Pattern>, <BitCount>

Sets the data pattern for the data portion of the packets sent to the user. The most significant bit (MSB) of this value is the MSB of the packet and the word is repeated to fill all space within the packet.

Parameters:

<Pattern>	numeric
	*RST: #H00000000,
<BitCount>	integer
	Range: 32 to 32
	*RST: 32

Example: `BB:EVDO:USER2:DTA:PATT #H55aa55aa`
Sets the data pattern for user 2.

Manual operation: See " [Data Pattern \(hex\)](#) " on page 32

`[SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth` <Length>

Sets the number of DRC (Data Rate Control) Lock periods that the state of the DRC Lock for the selected user is held constant.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

A value of one allows updating of the DRC Lock bit at anytime.

Parameters:

<Length>	DL1 DL4 DL8 DL16 DL32 DL64
	*RST: 1

Example: `BB:EVDO:USER2:DRCL:LENG DL8`
Sets eight DRCLock periods for holding the state of user 2 constant.

Manual operation: See " [DRC Lock Length](#) " on page 35

[:SOURCE<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet <Offset>

Sets the reverse link frame offset for the reverse link. The frame offset is used to position the DRC Lock bit within the MAC channel.

Parameters:

<Offset> integer
Range: 0 to 15
*RST: 0

Example: `BB:EVDO:USER2:DRCL:OFFS 5`
Sets the reverse link frame offset to 5.

Manual operation: See " [Frame Offset](#) " on page 35

[:SOURCE<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod <Period>

Sets the period (measured in slots) of time between successive transmissions of the DRC (Data Rate Control) Lock bit for the selected user.

Note: A value of zero disables the DRC Lock subchannel and the MAC RPC channel of the selected user is not punctured with the DRC Lock subchannel.

Parameters:

<Period> DP0 | DP4 | DP8 | DP16
*RST: DP4

Example: `BB:EVDO:USER2:DRCL:PER DP8`
Sets the DRC Lock period for user 2 to 8 slots.

Manual operation: See " [DRC Lock Period](#) " on page 35

[:SOURCE<hw>]:BB:EVDO:USER<st>:DRCLock:STATe <State>

Sets the state of the DRC (Data Rate Control) Lock bit for the selected user.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: OFF

Example: `BB:EVDO:USER2:DRCL:STAT ON`
activates the DRC Lock bit for user 2.

Manual operation: See " [DRC Lock State](#) " on page 34

[[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE <Mode>

Enables or disables the H-ARQ Channel. The H-ARQ channel is used by the access network to transmit positive acknowledgement (ACK) or a negative acknowledgement (NAK) in response to a physical layer packet.

Note: This parameter is enabled for Physical Layer Subtype 2 only.

Parameters:

<Mode>

OFF | ACK | NAK

OFF

Disables transmission of the H-ARQ channel.

ACK

Enables transmission of H-ARQ. The channel is transmitted with all bits set to ACK.

NAK

Enables transmission of H-ARQ. The channel is transmitted with all bits set to NAK

*RST: OFF

Example:

BB:EVDO:USER2:SUBT S2

Sets the physical layer subtype for user 2 to 2.

BB:EVDO:USER2:HARQ:MODE ACK

Enables ARQ channel. The channel is transmitted with all bits set to ACK.

Manual operation: See "[H-ARQ Mode](#)" on page 36

[[:SOURce<hw>]:BB:EVDO:USER<st>:IFACTor <IFactor>

Controls the number of interleave slots used for the selected user on the forward link.

Four interleave slots are defined in the 1xEV-DO system.

By default, only 1 Interleave slot (Interleave Factor = 1) for an access terminal is configured and transmission to that access terminal every fourth slot is selected.

For an interleave factor > 1, packets on multiple interleave slots are sent, increasing the data throughput to the access terminal.

Parameters:

<IFactor>

integer

Range: 1 to 4

*RST: 1

Example:

BB:EVDO:USER2:IFAC 2

Sets two interleaved slots for user 2 on the forward link.

Manual operation: See "[Interleave Factor](#)" on page 32

[[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDEX <Index>

Sets the MAC Index used for the selected user.

MAC Index has to be different for the different users. However, in case that two users are using the same value for MAC Index, the lower priority user is disabled, or be unable to enable.

The values for the MAC Indexes for the other users (see `[:SOURCE<hw>] :BB:EVDO:ANETwork:OUCount`) are assigned from a pool of valid MAC Indexes.

Parameters:

<Index> integer
 Range: 5 to 63 for physical layer subtype 0&1, 6 to 127 for physical layer subtype 2, 4 to 383 for physical layer subtype 3
 *RST: Physical layer subtype 0&1: 5 for user 1; 6 for user 2; 7 for user 3; 8 for user 4; / physical layer subtype 2: 6 for user 1; 7 for user 2; 8 for user 3; 9 for user 4

Example: `BB:EVDO:USER2:MAC:IND 6`
 Sets the MAC index for user 2 to 16.

Manual operation: See " [MAC Index](#) " on page 32

`[:SOURCE<hw>] :BB:EVDO:USER<st>:MAC:LEVel <Level>`

Sets the power within the MAC channel that is dedicated to the selected user.

Parameters:

<Level> float
 Range: -25 to -7
 Increment: 0.01
 *RST: -7

Example: `BB:EVDO:USER2:MAC:LEV -7.0`
 sets the power within the MAC channel to -7.0 dB.

Manual operation: See " [MAC Level](#) " on page 32

`[:SOURCE<hw>] :BB:EVDO:USER<st>:PACKet:COUNT <Count>`

Sets the number of packets to send to the selected user.

The number of packets to be send depends on whether the parameter "Infinite" is enabled or disabled.

If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled and a value is specified while packets are being sent, the new count value is used at the end of transmission of the current packet. If a value of zero is specified, the transmission to the user is stopped at the end of the current packet.

Parameters:

<Count> integer
 Range: 0 to 65536
 *RST: 65536

Example: `BB:EVDO:USER2:PACK:INF OFF`
 Disables sending of unlimited number of packets.
`BB:EVDO:USER2:PACK:COUNT 10`
 Sets the number of packets to be sent to 10.

Manual operation: See " [Number of Packets to Send - Value](#) " on page 26

[:SOURCE<hw>]:BB:EVDO:USER<st>:PACKet:INFinite <Infinite>

Enables or disables sending an unlimited number of packets to the selected user.

Parameters:

<Infinite> 0 | 1 | OFF | ON

ON

Enables sending of an unlimited number of packets to the user.

OFF

Disables sending of an unlimited number of packets to the user.
 The number of packets to be sent can be specified.

*RST: 1

Example: `BB:EVDO:USER2:PACK:INF OFF`
 Disables sending of unlimited number of packets for user 2.
`BB:EVDO:USER2:PACK:COUNT 10`
 Sets the number of packets to be sent to user 2 to 10.

Manual operation: See " [Number of Packets to Send - Infinite](#) " on page 26

[:SOURCE<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset <SOFFset>

Sets the minimum number of slots between the end of one packet and the beginning of the next.

For single slot packets, a value of zero will cause the next packet to be sent in the immediate next slot (subject to scheduling).

For multiple slot packets, a value of zero will cause the next packet transmission to start three slots after the end of the previous packet. The three slot delay is identical to the interleaving delay between slots for multiple slot packets. The offset value is attached to the end of the preceding packet.

Parameters:

<SOFFset> integer
 Range: 0 to 255
 *RST: 0

Example: `BB:EVDO:USER2:PACK:SOFF 10`
 Sets the packet start offset for user 2 to 10.

Manual operation: See " [Packet Start Offset](#) " on page 26

[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZe <PSize>

Sets the packet size for the packets sent to the selected user.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Parameters:

<PSize> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 |
PS3072 | PS4096 | PS5120 | PS6144 | PS8192 | PS12288 |
PS7168
*RST: PS128

Example:

```
BB:EVDO:ANET:SUBT S2
sets the physical layer subtype to 2.
BB:EVDO:USER2:RATE:IND 4
sets the rate index of user 2 to 4.
BB:EVDO:USER2:PSIZ PS256
sets the packet size for user 2 to 256.
SOUR:BB:EVDO:USER2:RATE?
queries the data rare for user 2.
Response: 76.8 kbps
```

Manual operation: See "[Packet Size](#)" on page 31

[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?

Queries the data rate of the packets sent to the selected user.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Return values:

<Rate> DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 |
DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K |
DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K |
DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2
*RST: DR4K8

Example:

```
BB:EVDO:ANET:SUBT S2
sets the physical layer subtype.
BB:EVDO:USER2:RATE:IND 4
sets the rate index of user 2.
BB:EVDO:USER2:PSIZ PS256
sets the packet size for user 2.
SOUR:BB:EVDO:USER2:RATE?
queries the data rate for user 2.
Response: 76.8 kbps
```

Usage: Query only

Manual operation: See "[Data Rate](#)" on page 31

[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDex <Index>

Determines the rate index.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Parameters:

<Index> integer
 Range: 1 to 12 (physical layer subtype 0&1), 1 to 14 (physical layer subtype 2), 1 to 28 (physical layer subtype 3)
 *RST: 1

Example:

```
BB:EVDO:ANET:SUBT S2
sets the physical layer subtype.
BB:EVDO:USER2:RATE:IND 4
sets the rate index of user 2.
BB:EVDO:USER2:PSIZ PS256
sets the packet size for user 2.
SOUR:BB:EVDO:USER2:RATE?
queries the data rate for user 2.
Response: 76.8 kbps
```

Manual operation: See "[Rate Index](#)" on page 27

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect

Enables sending of user defined Reverse Power Control (RPC) pattern at the end of the current RPC mode.

The former RPC mode is restart at the end of the pattern transmission.

Example:

```
BB:EVDO:USER2:RPC:MODE PATT
Sets the mode of the Reverse Power Control (RPC) Channel
within the MAC channel for user 2 to pattern, i.e. a user-defined
sequence is transmitted.
BB:EVDO:USER2:RPC:ZONE0:BIT 1
Sets the bit for zone 0 to 1
BB:EVDO:USER2:RPC:ZONE0:COUNT 10
Sets the number of RPC bits for zone 0 to 10.
BB:EVDO:USER2:RPC:ZONE1:BIT 0
BB:EVDO:USER2:RPC:ZONE1:COUNT 100
BB:EVDO:USER2:RPC:ZONE2:BIT 1
BB:EVDO:USER2:RPC:ZONE2:COUNT 50
BB:EVDO:USER2:RPC:ZONE3:BIT 0
BB:EVDO:USER2:RPC:ZONE3:COUNT 10
BB:EVDO:USER2:RPC:INJ
The user defined RPC pattern is inserted at the end of the cur-
rent RPC mode.
```

Usage: Event

[[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE <Mode>

Sets the operation mode for the Reverse Power Control (RPC) Channel within the MAC channel for the selected user.

Parameters:

<Mode> HOLD | UP | DOWN | RANGE | PATTeRn
 *RST: HOLD

Example:

BB:EVDO:USER2:RPC:MODE UP
 a continuous stream of Up (0) are transmitted on the Reverse Power Control (RPC) Channel within the MAC channel for user 2.

Manual operation: See " [RPC Mode](#) " on page 33

[[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe <Range>

Sets the number of Reverse Power Control (RPC) bits sent in each direction when the "RPC Mode = Range". The specified value is used immediately.

Parameters:

<Range> integer
 Range: 1 to 256
 *RST: 1

Example:

BB:EVDO:USER2:RPC:MODE RANG
 Sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to range.
 BB:EVDO:USER2:RPC:RANG:COUN 200
 Sets the number of RPC bits to 200.

Manual operation: See " [RPC Range Count](#) " on page 34

[[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT <Bit>

The Reverse Power Control (RPC) pattern is defined in form of table with four zones (zone 0 .. 3). For each zone, a bit and a count can be defined.

This parameter defines the RPC bits sent within the specific zone of the RPC Pattern.

Parameters:

<Bit> 0 | 1
 Range: 0 to 1
 *RST: 0

Example:

BB:EVDO:USER2:RPC:MODE PATT
 Sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to pattern, i.e. a user-defined sequence is transmitted.
 BB:EVDO:USER2:RPC:ZONE1:BIT 1
 Sets the bit for zone 1 to 1.

Manual operation: See " [RPC Pattern](#) " on page 34

[[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNT <Count>

The Reverse Power Control (RPC) pattern is defined in form of table with four zones (zone 0 .. 3). For each zone, a bit and a count can be defined.

This parameter defines the number of RPC bits sent within the specific zone of the RPC Pattern.

Parameters:

<Count> integer
 Range: 1 to 128
 *RST: 0

Example:

BB:EVDO:USER2:RPC:MODE PATT

Sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to pattern, i.e. a user-defined sequence is transmitted.

BB:EVDO:USER2:RPC:ZONE1:COUNT 10

Sets the number of RPC bits for zone 1 to 10.

Manual operation: See " [RPC Pattern](#) " on page 34

[[:SOURce<hw>]:BB:EVDO:USER<st>:SCOUNT?

Queries the slot count of the packets sent to the selected user.

Return values:

<SCOUNT> integer

Example:

BB:EVDO:ANET:SUBT S2

Sets the physical layer subtype to 2.

BB:EVDO:USER2:RATE:IND 4

Sets the rate index of user 2 to 4.

BB:EVDO:USER2:PSIZ PS256

Sets the packet size for user 2 to 256.

SOUR:BB:EVDO:USER2:SCO?

Queries the number of slots for user 2.

Response: 2

Usage: Query only

Manual operation: See " [Slot Count](#) " on page 31

[[:SOURce<hw>]:BB:EVDO:USER<st>:STATE <State>

Enables or disables the selected user. If the user is enabled, the proper MAC Index is placed within the MAC channel and packets can be sent to the user. If disabled, the MAC Index is not present within the MAC channel and packets cannot be sent to the user.

Note: Disabling the state of a user during a transfer aborts all transfers to the user.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON (user 1); OFF (user 2 .. 4)

Example:

BB:EVDO:USER2:STAT ON
 Activates user 2.

Manual operation: See " [State \(User\)](#) " on page 26

5.10 Configure Access Terminal Commands

[SOURce<hw>]:BB:EVDO:PREDefined.....	100
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN.....	101
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing.....	101
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE.....	102
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe.....	102
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues.....	103
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:DUration.....	103
[SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:OFFSet.....	103
[SOURce<hw>]:BB:EVDO:TERMinal<st>:APChannel:GAIN.....	104
[SOURce<hw>]:BB:EVDO:TERMinal<st>:APChannel:PAYLoad:MINimum.....	104
[SOURce<hw>]:BB:EVDO:TERMinal<st>:APChannel:STATe.....	104
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLENght.....	105
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA.....	105
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSElection.....	106
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATtern.....	106
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe.....	106
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe].....	107
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN.....	107
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing.....	108
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNT.....	108
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA.....	109
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSElection.....	109
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATtern.....	109
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe?.....	110
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe].....	110
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN.....	111
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite.....	111
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation?.....	112
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZe.....	112
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe.....	113
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNT].....	113
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe.....	114
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading.....	114
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer.....	114
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN.....	115
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe].....	115
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth.....	115
[SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe.....	116

<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCCChannel:VALues</code>	116
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN</code>	116
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth</code>	117
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe</code>	117
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues</code>	117
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASK</code>	118
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE</code>	118
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN</code>	118
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe?</code>	119
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLENGth</code>	119
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASK</code>	119
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:GAIN</code>	119
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe</code>	120
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe</code>	120
<code>[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType</code>	120

`[:SOURce<hw>]:BB:EVDO:PREDefined` <Predefined>

Sets the UL setting of Terminal 1 to one of the predefined configurations.

The predefined settings are made according to 3GPP2 C.S0032-A to allow easy receiver testing.

Parameter	Description
USER	There are no predefined settings
ULS1DR9K6	UL, Subtype 1, 9.6 kbps.
ULS1DR19K2	UL, Subtype 1, 19.2 kbps.
ULS1DR38K4	UL, Subtype 1, 38.4 kbps.
ULS1DR76K8	UL, Subtype 1, 76.8 kbps.
ULS1DR153K6	UL, Subtype 1, 153.6 kbps.
ULS2PS128LL	UL, Subtype 2, 128 bits payload, Low Latency.
ULS2PS256HC	UL, Subtype 2, 256 bits payload, High Capacity.
ULS2PS256LL	UL, Subtype 2, 256 bits payload, Low Latency.
ULS2PS512LL	UL, Subtype 2, 512 bits payload, Low Latency.
ULS2PS768LL	UL, Subtype 2, 768 bits payload, Low Latency.
ULS2PS1024LL	UL, Subtype 2, 1024 bits payload, Low Latency.
ULS2PS1536LL	UL, Subtype 2, 1536 bits payload, Low Latency.
ULS2PS2048LL	UL, Subtype 2, 2048 bits payload, Low Latency.
ULS2PS3072LL	UL, Subtype 2, 3072 bits payload, Low Latency.
ULS2PS4096LL	UL, Subtype 2, 4096 bits payload, Low Latency.
ULS2PS6144LL	UL, Subtype 2, 6144 bits payload, Low Latency.

Parameter	Description
ULS2PS8192LL	UL, Subtype 2, 8192 bits payload, Low Latency.
ULS2PS12288LL	UL, Subtype 2, 12288 bits payload, Low Latency.

Parameters:

<Predefined> USER | ULS1DR9K6 | ULS1DR19K2 | ULS1DR38K4 |
 ULS1DR76K8 | ULS1DR153K6 | ULS2PS128LL |
 ULS2PS256HC | ULS2PS256LL | ULS2PS512LL |
 ULS2PS768LL | ULS2PS1024LL | ULS2PS1536LL |
 ULS2PS2048LL | ULS2PS3072LL | ULS2PS4096LL |
 ULS2PS6144LL | ULS2PS8192LL | ULS2PS12288LL
 *RST: USER

Example:

BB:EVDO:PRED ULS2PS256HC
 Sets the UL settings of Terminal 1 to UL of Subtype 2 with 256 bits payload and High Capacity.
 BB:EVDO:TERM1:SUBT?
 Response: S2.
 BB:EVDO:TERM1:DCH:PACK1:PSIZ?
 Response: 256

Manual operation: See " [Predefined Settings](#) " on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN <Gain>

(enabled for access terminal working in traffic mode)

Sets the gain of the ACK channel relative to the pilot channel power.

Parameters:

<Gain> float
 Range: -80 to 30
 Increment: 0.01
 *RST: 0

Example:

BB:EVDO:TERM2:ACKC:GAIN -10
 Sets the relative gain of ACK channel to -10 dB

Manual operation: See " [Relative Gain](#) " on page 51

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing <Gating>

(enabled for access terminal working in traffic mode)

Sets the active and inactive slots of the ACK channel. This parameter is in binary format and has a maximal length of 16 bits.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. A 0 gates the ACK channel off for the corresponding slot, a 1 activates the channel.

Parameters:

<Gating> integer
 *RST: 0001

Example:

BB:EVDO:TERM2:ACKC:GAT #B11001100,8
 Sets slots 3, 4, 7 and 8 of ACK channel as inactive.

Manual operation: See " [Gating \(bin\)](#) " on page 51

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:ACKChannel:MODE <Mode>

(enabled for access terminal working in traffic mode)

Specifies the modulation mode of the ACK channel.

With BPSK modulation, a 0 (ACK) is mapped to +1 and a 1 (NAK) to -1. With OOK modulation, a 0 (ACK) is mapped to ON and a 1 (NAK) to OFF.

Parameters:

<Mode> BPSK | OOK

BPSK

Sets the modulation to BPSK (Binary Phase Shift Keying).

OOK

Sets the modulation to OOK (On-Off Keying).

Note: This value is only enabled for physical layer subtype 2.

*RST: BPSK

Example:

BB:EVDO:TERM2:MODE TRAF

sets the mode of terminal 2 to traffic.

BB:EVDO:TERM2:SUBT S2

sets the physical layer subtype of terminal 2 to 2.

BB:EVDO:TERM2:ACKC:MODE OOK

selects OOK modulation for ACK channel of terminal 2.

Manual operation: See " [Mode](#) " on page 51

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:ACKChannel:STATe <State>

(enabled for access terminal working in traffic mode)

Enables or disables the ACK channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:EVDO:TERM2:ACKC:STAT OFF

Deactivates the ACK channel for terminal 2.

Manual operation: See " [State](#) " on page 51

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues <Values>

(enabled for access terminal working in traffic mode)

Specifies the data pattern transmitted on the ACK Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. A 0 specifies an ACK, a 1 specifies a NAK. The pattern is only read for slots that are gated on. This parameter is in binary format and has a maximal length of 16 bits.

Parameters:

<Values> integer
 *RST: #H1

Example:

BB:EVDO:TERM2:ACKC:VAL #B011,3

Sets the data pattern transmitted on the ACK channel for terminal 2.

Manual operation: See " [Values](#) " on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCLe:DURation <Duration>

(enabled for access terminal working in access mode)

Sets the access cycle duration in slots. Access probes are repeated with a period of access cycle duration slots.

Parameters:

<Duration> integer
 Range: 1 to 255
 *RST: 16

Example:

BB:EVDO:TERM2:MODE ACC

enables terminal 2 to work in access mode.

BB:EVDO:TERM2:ACYC:DUR 20

sets the duration of the access cycle for terminal 2 to 20 slots.

Manual operation: See " [Access Cycle Duration](#) " on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCLe:OFFSet <Offset>

(enabled for access terminal working in access mode)

The Access Channel transmission starts with this number of slots relative to the beginning of each access cycle duration.

Parameters:

<Offset> integer
 Range: 0 to 12
 Increment: 4
 *RST: 0

Example: `BB:EVDO:TERM2:MODE ACC`
 Enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:ACYC:OFFS 10`
 Sets the offset of the Access Channel to 10.

Manual operation: See " [Access Cycle Offset](#) " on page 46

[:SOURCE<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN <Gain>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the gain of the auxiliary pilot channel relative to the data channel power.

Note: All other channel gains are specified relative to the pilot power, but the auxiliary pilot gain is specified relative to the data channel power.

Parameters:

<Gain> float
 Range: -80 to 30
 Increment: 0.01
 *RST: 0

Example: `BB:EVDO:TERM2:APCH:GAIN -10`
 sets the relative gain of auxiliary pilot channel to -10 dB

Manual operation: See " [Relative Gain](#) " on page 47

[:SOURCE<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum <Minimum>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the minimum payload size in bits of the data channel that activates the transmission of the auxiliary pilot channel.

Parameters:

<Minimum> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 |
 PS3072 | PS4096 | PS6144 | PS8192 | PS12288
 *RST: PS128

Example: `BB:EVDO:TERM2:APCH:PAYL:MIN PS256`
 Sets the minimum payload of the auxiliary pilot channel to 256 bits.

Manual operation: See " [Minimum Payload](#) " on page 47

[:SOURCE<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe <State>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Enables or disables the auxiliary pilot channel.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example:

BB:EVDO:TERM2:APCH:STAT OFF
Deactivates the auxiliary pilot channel for terminal 2.

Manual operation: See " [State](#) " on page 47

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:DCHannel:CLENGTH <CLength>

(enabled for access terminal working in access mode)

Sets the number of frames (16 slots each) to be transmitted after the preamble. Each frame contains one data packet.

Parameters:

<CLength> integer
Range: 1 to 15
*RST: 1

Example:

BB:EVDO:TERM2:MODE ACC
Enables terminal 2 to work in access mode.
BB:EVDO:TERM2:DCH:CLEN 10
For terminal two, ten frames will be transmitted after the preamble.

Manual operation: See " [Capsule Length](#) " on page 57

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:DCHannel:DATA <Data>

Selects the data source, e.g. a sequence of 0 or 1, a pseudo-random sequence with different length, a pattern or a data list (DLIST).

Parameters:

<Data> ZERO | ONE | PATTErn | PN9 | PN11 | PN15 | PN16 | PN20 |
PN21 | PN23 | DLISt
*RST: PN9

Example:

SOURCE:BB:EVDO:TERMIal2:DCHannel:DATA PATTErn
Sets the data source of terminal 2 to pattern.
SOURCE:BB:EVDO:TERMIal2:DCHannel:DATA:PATTErn
#H3F,8
Sets the pattern for the data source of terminal 2.

Example: SOURce:BB:EVDO:TERMinal2:DCHannel:DATA DLISt
 Sets the data source of terminal 2 to data list.
 MMEM:CDIR "datalists"
 Selects the directory for the data lists.
 SOURce:BB:EVDO:TERMinal2:DCHannel:DATA:
 DSELection "datalist.dm_iqd"
 Selects datalist.dm_iqd file as data source. This file must
 be in the directory /var/user/datalists and have a file
 extension *.dm_iqd.

Manual operation: See " [Data Source](#) " on page 57

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSELection
 <Filename>

Selects the data list for the data source.

Parameters:

<Filename> string

Example: see [\[:SOURce<hw>\]:BB:EVDO:TERMinal<st>:DCHannel:DATA](#) on page 105

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATtern <Pattern>,
 <BitCount>

Selects the bit pattern for the data source.

Parameters:

<Pattern> numeric
 *RST: #H0

<BitCount> integer
 Range: 1 to 64
 *RST: 1

Example: see [\[:SOURce<hw>\]:BB:EVDO:TERMinal<st>:DCHannel:DATA](#) on page 105

Manual operation: See " [Data Source](#) " on page 57

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe <DRate>

(enabled for an access terminal working in access mode)

Selects the data rate for the Data Channel.

Parameters:

<DRate> DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 |
 DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K |
 DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K |
 DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2
 *RST: DR9K6

Example:

BB:EVDO:TERM2:MODE ACC
 Enables terminal 2 to work in access mode.
 BB:EVDO:TERM2:DCH:DRAT DR19K2
 Sets the data rate of the data channel for terminal 2 kbps to 19.2 kbps.

Manual operation: See " [Data Rate](#) " on page 57

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:FCS[:STATe] <State>

(enabled for an access terminal working in access mode)

Enables or disables appending a standard frame check sequence (FCS) to the MAC layer packet.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:EVDO:TERM2:MODE ACC
 Enables terminal 2 to work in access mode.
 BB:EVDO:TERM2:DCH:FCS:STAT OFF
 Disables appending of FCS to the MAC layer for terminal 2.

Manual operation: See " [Append FCS](#) " on page 58

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:GAIN <Gain>

(enabled for an access terminal working in access mode)

Sets the gain in dB of the data channel relative to the pilot channel power.

Parameters:

<Gain> float
 Range: -80 to 30
 Increment: 0.01
 *RST: 0

Example:

BB:EVDO:TERM2:MODE ACC
 Enables terminal 2 to work in access mode.
 BB:EVDO:TERM2:DCH:GAIN -10
 Sets the relative gain of data channel to -10 dB

Manual operation: See " [Relative Gain](#) " on page 57

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing
 <CCoding>

(enabled for an access terminal working in traffic mode)

Activates or deactivates channel coding, including scrambling, turbo encoding and channel interleaving.

Parameters:

<CCoding> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:EVDO:TERM2:MODE TRAF
 Enables terminal 2 to work in traffic mode.
 BB:EVDO:TERM2:SUBT S2
 Sets physical layer subtype 2 for terminal 2.
 BB:EVDO:TERM2:DCH:PACK3:CCOD OFF
 Disables channel coding for packet 3.

Manual operation: See " [Channel Coding](#) " on page 55

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNT
 <Count>

(enabled for an access terminal working in traffic mode)

Sets the number of packets to be sent.

The number of packets to be send depends on whether the parameter "Infinite Packets" is enabled or disabled. If "Infinite Packets" is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified. In this case, the data channel will be switched off after the specified number of packets have been sent.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Count> integer
 Range: 0 to 65536
 *RST: 65536

Example:

BB:EVDO:TERM2:MODE TRAF
 Enables terminal 2 to work in traffic mode.
 BB:EVDO:TERM2:SUBT S2
 Sets physical layer subtype 2 for terminal 2.
 BB:EVDO:TERM2:DCH:PACK3:INF OFF
 Disables sending of unlimited umber of packets.
 BB:EVDO:TERM2:DCH:PACK3:COUN 2000
 Sets number of packets to be sent to 2000.

Manual operation: See " [Packets To Send](#) " on page 54

```
[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:DATA <Data>
```

Selects the data source of an access terminal working in traffic mode

Parameters:

```
<Data>          ZERO | ONE | PATtern | PN9 | PN11 | PN15 | PN16 | PN20 |
                PN21 | PN23 | DLISt
*RST:           PN9
```

Example:

```
SOURce:BB:EVDO:TERMIal2:MODE TRAFFIC
Enables terminal 2 to work in traffic mode.
SOURce:BB:EVDO:TERMIal2:SUBType S2
Sets physical layer subtype 2 for terminal 2.
SOURce:BB:EVDO:TERMIal2:DCHannel:PACKet3:DATA
PATtern
Sets the data source of terminal 2 to pattern.
SOURce:BB:EVDO:TERMIal2:DCHannel:PACKet3:
PATtern #H3F,8
Sets the pattern for the data source of terminal 2.
```

Example:

```
SOURce:BB:EVDO:TERMIal2:DCHannel:PACKet1:DATA
DLISt
Sets the data source of terminal 2, packet 1 to data list.
MMEM:CDIR "/var/user/datalists"
Selects the directory for the data lists.
SOURce:BB:EVDO:TERMIal2:DCHannel:PACKet1:DATA:
DSElection "datalist.dm_iqd"
Selects datalist.dm_iqd file as data source. This file must
be in the directory /var/user/datalists and have a file
extension *.dm_iqd.
```

Manual operation: See " [Data Source](#) " on page 56

```
[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:DATA:
DSElection <Filename>
```

(enabled for an access terminal working in traffic mode)

Selects the data list for the data source.

Parameters:

```
<Filename>      string
```

Example:

```
See \[:SOURce<hw>\]:BB:EVDO:TERMIal<st>:DCHannel:
PACKet<ch>:DATA on page 109
```

Manual operation: See " [Data Source](#) " on page 56

```
[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:DATA:PATtern
<Pattern>, <BitCount>
```

(enabled for an access terminal working in traffic mode)

Selects the bit pattern for the data source.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Pattern> numeric
 *RST: #H0

<BitCount> integer
 Range: 1 to 64
 *RST: 1

Example: see [:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA on page 109

Manual operation: See " Data Source " on page 56

[[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe?

(enabled for an access terminal working in traffic mode)

Displays the data rate in kbps of the selected packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Return values:

<DRate> float
 Range: 0 to ...

Example: BB:EVDO:TERM2:MODE TRAF
 enables terminal 2 to work in traffic mode.
 BB:EVDO:TERM2:DCH:PACK2:DRAT?
 queries the data rate of the packet number 2 for terminal 2.
 Response: '6.4'
 the data rate of packet 2 is 6.4 kbps.

Usage: Query only

Manual operation: See " Data Rate/kbps " on page 55

**[[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe]
 <State>**

(enabled for an access terminal working in traffic mode)

Enables or disables appending a standard Frame Check Sequence (FCS) and tail to the MAC layer packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example:

BB:EVDO:TERM2:MODE ACC
 enables terminal 2 to work in access mode.
 BB:EVDO:TERM2:DCH:PACK:FCS:STAT OFF
 disables appending of FCS to the MAC layer for terminal 2,
 packet 1.

Manual operation: See " [FCS](#) " on page 57

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain in dB of the Data Channel relative to the pilot channel power.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Gain> float
 Range: -80 to 30
 Increment: 0.01
 *RST: 0

Example:

BB:EVDO:TERM2:MODE TRAF
 Enables terminal 2 to work in traffic mode.
 BB:EVDO:TERM2:SUBT S2
 Sets the physical layer subtype of terminal 2 to 2.
 BB:EVDO:TERM2:DCH:PACK3:GAIN -10
 Sets the relative gain of packet 3 dB to -10 dB

Manual operation: See " [Gain/db](#) " on page 53

**[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite
 <Infinite>**

(enabled for an access terminal working in traffic mode)

Enables or disables sending an unlimited number of packets.

The parameter "Number of Packets to be Send" depends on whether the parameter "Infinite Packets" is enabled or disabled. If "Infinite Packets" is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Infinite> 0 | 1 | OFF | ON
 *RST: ON

Example:

```
BB:EVDO:TERM2:MODE TRAF
Enables terminal 2 to work in traffic mode.
BB:EVDO:TERM2:SUBT S2
Sets physical layer subtype 2 for terminal 2.
BB:EVDO:TERM2:DCH:PACK3:INF OFF
Disables sending of unlimited number of packets.
BB:EVDO:TERM2:DCH:PACK3:COUN 2000
Sets number of packets to be sent to 2000.
```

Manual operation: See " [Infinite Packets](#) " on page 54

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:MODulation?

(enabled for physical layer subtype 2 and for an access terminal working in traffic mode)

Displays the modulation type per packet.

Return values:

<Modulation> B4 | Q4 | Q2 | Q4Q2 | E4E2

B4

The modulation type is set to BPSK modulation with 4-ary Walsh cover.

Q4

The modulation type is set to QPSK modulation with 4-ary Walsh cover.

Q2

The modulation type is set to QPSK modulation with 2-ary Walsh cover.

Q4Q2

Sum of Q4 and Q2 modulated symbols.

E4E2

Sum of E4 (8-PSK modulated with 4-ary Walsh cover) and E2 (8-PSK modulated with 2-ary Walsh cover) modulated symbols.

*RST: B4

Example:

```
BB:EVDO:TERM2:DCH:PACK3:MOD?
queries the modulation for packet 3 of terminal 2.
```

Usage:

Query only

Manual operation: See " [Modulation](#) " on page 55

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:PSIZe <PSize>

(enabled for an access terminal working in traffic mode)

Sets the Payload Size in bits for the selected packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<PSize> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 | PS3072 | PS4096 | PS6144 | PS8192 | PS12288

Example:

```
BB:EVDO:TERM2:MODE TRAF
enables terminal 2 to work in traffic mode.
BB:EVDO:TERM2:SUBT S2
sets the physical layer subtype of terminal 2 to 2.
BB:EVDO:TERM2:DCH:PACK3:PSIZ PS512
sets the payload size fro packet 3 to 512.
```

Manual operation: See " [Payload Size/bits](#) " on page 54

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:STATe <State>

For an access terminal working in traffic mode, enables or disables the state of the packets.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example:

```
BB:EVDO:TERM2:MODE TRAF
Enables terminal 2 to work in traffic mode.
BB:EVDO:TERM2:SUBT S2
Sets the physical layer subtype of terminal 2 to 2.
BB:EVDO:TERM2:DCH:PACK2:STAT OFF
Deactivates packet 2 of terminal 2.
```

Manual operation: See " [State](#) " on page 52

[:SOURCE<hw>]:BB:EVDO:TERMIal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNT] <Count>

(enabled for physical layer subtype 2 and for an access terminal working in traffic mode)

Sets the number of subpackets to be sent.

Parameters:

<Count> integer
Range: 1 to 4
*RST: 1

Example:

```
BB:EVDO:TERM2:MODE TRAF
```

Enables terminal 2 to work in traffic mode.

```
BB:EVDO:TERM2:SUBT S2
```

Sets physical layer subtype 2 for terminal 2.

```
BB:EVDO:TERM2:DCH:PACK3:SUBP:COUN 4
```

Sets the number of subpackets to 4, i.e. subpacket 0, 1, 2 and 3 of a packet is sent in a subframe each (with two subframes interleaving between). Afterward the next packet is started.

This is to simulate a situation where three times NAK has been received from the base station with an ACK after the fourth subpacket

Manual operation: See "[Subpackets](#)" on page 54

```
[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DCHannel:STATe <State>
```

(enabled for an access terminal working in access mode)

Enables or disables the state of the Data Channel.

Parameters:

```
<State>          0 | 1 | OFF | ON
*RST:           ON
```

Example:

```
BB:EVDO:TERM2:MODE ACC
```

enables terminal 2 to work in access mode.

```
BB:EVDO:TERM2:DCH:STAT OFF
```

disables data channel for terminal 2.

Manual operation: See "[State](#)" on page 57

```
[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DQSPreading <DqSpreading>
```

Disables the quadrature spreading (complex multiply) with PN sequences and long code.

Parameters:

```
<DqSpreading>   0 | 1 | OFF | ON
*RST:           OFF
```

Example:

```
BB:EVDO:TERM2:DQSP ON
```

enables using quadrature spreading with PN sequence and long code.

Manual operation: See "[Disable Quadrature Spreading](#)" on page 45

```
[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:DRCChannel:COVER <Cover>
```

(enabled for an access terminal working in traffic mode)

Selects the Data Rate Control (DRC) Channel Walsh cover.

Parameters:

<Cover> integer
 Range: 0 to 7
 *RST: 7

Example: BB:EVDO:TERM2:DRCC:COV 1
 Sets the DRC cover to 1.

Manual operation: See " [Cover](#) " on page 50

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DRCCchannel:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain of the Data Rate Control (DRC) channel relative to the pilot channel power.

Parameters:

<Gain> float
 Range: -80 dB to 10 dB
 Increment: -
 *RST: 0 dB

Example: BB:EVDO:TERM2:DRCC:GAIN 10
 sets the relative gain for DRC to 10 dB.

Manual operation: See " [Relative Gain](#) " on page 49

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DRCCchannel:GATING[:STATE] <State>

(enabled for an access terminal working in traffic mode)

Activates or deactivates the Data Rate Control (DRC) Channel gating.

If gating is active, each value of the DRC channel is transmitted for one slot followed by DRCLength-1 empty slots.

With deactivated gating, each DRC value is repeated for DRC length slots.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example: BB:EVDO:TERM2:DRCC:GAT:STAT OFF
 deactivates DRC gating.

Manual operation: See " [Gating Active](#) " on page 50

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DRCCchannel:LENGTH <Length>

(enabled for an access terminal working in traffic mode)

Specifies the transmission duration of the Data Rate Control (DRC) channel in slots.

Parameters:

<Length> DL1 | DL2 | DL4 | DL8
 *RST: DL1

Example:

BB:EVDO:TERM2:DRCC:LENG DL2
 Sets the transmission duration of DRC to two slots.

Manual operation: See " [Length](#) " on page 50

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:DRCCchannel:STATE <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Data Rate Control (DRC) channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example:

BB:EVDO:TERM2:DRCC:STAT OFF
 deactivates DRC channel.

Manual operation: See " [State](#) " on page 49

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:DRCCchannel:VALues <Values>

(enabled for an access terminal working in traffic mode)

Specifies the pattern transmitted on the Data Rate Control (DRC) Channel. The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is used for DRC length slots.

Parameters:

<Values> integer
 *RST: #H0

Example:

BB:EVDO:TERM2:DRCC:VAL #H7,4
 sets transmitted pattern on DRC to #H7,4.

Manual operation: See " [Values \(hex\)](#) " on page 50

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:DSCChannel:GAIN <Gain>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the gain of the Data Source Control (DSC) channel relative to the pilot channel power.

Parameters:

<Gain> float
 Range: -80 dB to 10 dB
 Increment: -
 *RST: 0 dB

Example:

BB:EVDO:TERM2:DSCC:GAIN 10
 sets the relative gain for DSC to 10 dB.

Manual operation: See " [Relative Gain](#) " on page 48

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DSCChannel:LENGTH <Length>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Specifies the transmission duration of the Data Source Control (DSC) channel in slots.

Parameters:

<Length> integer
 Range: 8 to 256
 Increment: 8
 *RST: 8

Example:

BB:EVDO:TERM2:DSCC:LENG 16
 sets the transmission duration of DSC to 16 slots.

Manual operation: See " [Length](#) " on page 49

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DSCChannel:STATE <State>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Enables or disables the state of the Data Source Control (DSC) channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example:

BB:EVDO:TERM2:DSCC:STAT OFF
 deactivates DSC channel.

Manual operation: See " [State](#) " on page 48

[:SOURCE<hw>]:BB:EVDO:TERMINAL<st>:DSCChannel:VALUES <Values>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Specifies the pattern transmitted on the Data Source Control (DSC) Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is transmitted for DSC length slots.

Parameters:

<Values> integer
 *RST: 0

Example:

BB:EVDO:TERM2:DSCC:VAL #H147,12
 sets transmitted pattern on DSC to #H147,12.

Manual operation: See " [Values \(OCT\)](#) " on page 49

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:IMASK <IMask>

Sets the long code mask of the I channel.

Parameters:

<IMask> 44 bits
 *RST: #H000000000000

Example:

BB:EVDO:TERM2:IMAS #H2FFFFFFFFFFFF,42
 sets the long code mask for I channel to #H2FFFFFFFFFFFF,42.

Manual operation: See " [Long Code Mask I \(hex\)](#) " on page 45

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:MODE <Mode>

Sets the mode (Traffic or Access) of the selected access terminal.

Parameters:

<Mode> ACCess | TRAFfic
 *RST: TRAFfic

Example:

BB:EVDO:TERM2:MODE ACC
 sets the mode of terminal 2 to access.

Manual operation: See " [Mode](#) " on page 45

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:PCHannel:GAIN <Gain>

Sets the gain of the pilot channel.

Gains of other channels are relative to the Pilot Channel power.

This setting is used to distinguish the power between access terminals, when more than one access terminal is active.

Parameters:

<Gain> float
 Range: -80 to 10 dB
 Increment: 0.01
 *RST: 0 dB

Example:

BB:EVDO:TERM2:PCH:GAIN 10
 sets the gain of pilot channel to 10 dB.

Manual operation: See " [Gain](#) " on page 46

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:PCHannel:STATe?

Displays the state of the pilot channel.

Note: The pilot channel is always switched on.

Return values:

<State> 0 | 1 | OFF | ON
*RST: ON

Example: BB:EVDO:TERM2:PCH:STAT?
queries the state of the pilot channel.

Usage: Query only

Manual operation: See " [State](#) " on page 46

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:PLENgtH <PLength>

(enabled for access terminal working in access mode)

Specifies the length of the preamble in frames (16 slots each) of the access probe.

Parameters:

<PLength> integer
Range: 1 to 7
*RST: 1

Example: BB:EVDO:TERM2:PLEN 7
Sets the preamble length to seven frames.

Manual operation: See " [Preamble Length](#) " on page 46

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:QMASk <QMask>

Sets the long code mask of the Q channel.

Parameters:

<QMask> 44 bits
*RST: #H000000000000

Example: BB:EVDO:TERM2:IMAS #H3FFFFFFFFFFFF,42
sets the long code mask for I channel to #H3FFFFFFFFFFFF,42.

Manual operation: See " [Long Code Mask Q \(hex\)](#) " on page 45

[[:SOURce<hw>]:BB:EVDO:TERMIal<st>:RRIChannel:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain of the Reverse Rate Indicator (RRI) channel relative to the pilot channel power.

Parameters:

<Gain> float
 Range: -80 to 10 dB
 Increment: 0.01
 *RST: 0 dB

Example:

BB:EVDO:TERM2:RRIC:GAIN 10
 sets the gain of pilot channel to 10 dB.

Manual operation: See " [Relative Gain](#) " on page 48

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:RRIC:STATe <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Reverse Rate Indicator (RRI) channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example:

BB:EVDO:TERM2:RRIC:STAT OFF
 Disables the RRI channel.

Manual operation: See " [State](#) " on page 48

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:STATe <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Reverse Rate Indicator (RRI) channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON (access terminal 1)

Example:

BB:EVDO:TERM2:RRIC:STAT OFF
 Disables the RRI channel.

Manual operation: See " [State](#) " on page 45

[:SOURCE<hw>]:BB:EVDO:TERMI<st>:SUBType <Subtype>

Selects the physical layer subtype for the selected access terminal.

Parameters:

<Subtype> S1 | S2
 *RST: 2

Example:

BB:EVDO:TERM2:SUBT S2
 sets the physical layer subtype 2.

Manual operation: See " [Physical Layer Subtype](#) " on page 45

List of Commands

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFFset.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum.....	83
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount.....	84
[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?.....	85
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth.....	85
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel.....	85
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDex.....	86
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet.....	86
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe.....	86
[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType.....	86
[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel.....	71
[:SOURce<hw>]:BB:EVDO:CLIPping:MODE.....	72
[:SOURce<hw>]:BB:EVDO:CLIPping:STATe.....	72
[:SOURce<hw>]:BB:EVDO:CLOCK:MODE.....	82
[:SOURce<hw>]:BB:EVDO:CLOCK:SOURce.....	82
[:SOURce<hw>]:BB:EVDO:CRATe:VARiation.....	73
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BCLass.....	87
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel.....	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency.....	89
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe.....	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CDELay.....	88
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFREquency?.....	87
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATe.....	89
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:APCO25.....	73
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:COSine.....	73
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:GAUSSs.....	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASSs.....	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:LPASSEVM.....	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:PGAuss.....	74
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:RCOSine.....	75
[:SOURce<hw>]:BB:EVDO:FILTer:PARAmeter:SPHase.....	75
[:SOURce<hw>]:BB:EVDO:FILTer:TYPE.....	75
[:SOURce<hw>]:BB:EVDO:IQSWap:STATe.....	76
[:SOURce<hw>]:BB:EVDO:LINK.....	68
[:SOURce<hw>]:BB:EVDO:PNOFFset.....	68
[:SOURce<hw>]:BB:EVDO:PREDEfined.....	100
[:SOURce<hw>]:BB:EVDO:PRESet.....	68
[:SOURce<hw>]:BB:EVDO:SETTing:CATalog?.....	69
[:SOURce<hw>]:BB:EVDO:SETTing:DELeTe.....	69
[:SOURce<hw>]:BB:EVDO:SETTing:LOAD.....	69
[:SOURce<hw>]:BB:EVDO:SETTing:STORe.....	69
[:SOURce<hw>]:BB:EVDO:SLENGth.....	70
[:SOURce<hw>]:BB:EVDO:STATe.....	70

[:SOURce<hw>]:BB:EVDO:STIME.....	70
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN.....	101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing.....	101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE.....	102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe.....	102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues.....	103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACyCle:DUration.....	103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACyCle:OFFSet.....	103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN.....	104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum.....	104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe.....	104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLEngth.....	105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA.....	105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSElection.....	106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATtern.....	106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATE.....	106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe].....	107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN.....	107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing.....	108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNT.....	108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA.....	109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSElection.....	109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATtern.....	109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATE?.....	110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe].....	110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN.....	111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite.....	111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation?.....	112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZE.....	112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe.....	113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNT].....	113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe.....	114
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading.....	114
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer.....	114
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN.....	115
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe].....	115
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth.....	115
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe.....	116
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:VALues.....	116
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN.....	116
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth.....	117
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe.....	117
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues.....	117
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASK.....	118
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE.....	118
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN.....	118
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe?.....	119
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLEngth.....	119
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASK.....	119
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRICchannel:GAIN.....	119

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe.....	120
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe.....	120
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType.....	120
[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:EXTErnal:SYNChronize:OUTPut.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELAy.....	77
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELAy.....	81
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE.....	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime.....	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime.....	80
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod.....	81
[:SOURce<hw>]:BB:EVDO:TRIGger:RMODE?.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit.....	78
[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce.....	79
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTErnal]:DELAy.....	79
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTErnal]:INHibit.....	79
[:SOURce<hw>]:BB:EVDO:UP:MC:BCLAss.....	87
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel.....	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREQuency.....	89
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe.....	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CDELAy.....	88
[:SOURce<hw>]:BB:EVDO:UP:MC:CFREquency?.....	87
[:SOURce<hw>]:BB:EVDO:UP:MC:STATe.....	89
[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTern.....	90
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth.....	90
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet.....	91
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod.....	91
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe.....	91
[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE.....	92
[:SOURce<hw>]:BB:EVDO:USER<st>:IFACTor.....	92
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDEx.....	92
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel.....	93
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNT.....	93
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite.....	94
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFSet.....	94
[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZE.....	95
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDEx.....	96
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?.....	95
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect.....	96
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE.....	97
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGE.....	97
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT.....	97
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNT.....	98
[:SOURce<hw>]:BB:EVDO:USER<st>:SCOUNt?.....	98
[:SOURce<hw>]:BB:EVDO:USER<st>:STATe.....	98
[:SOURce<hw>]:BB:EVDO:VERSion?.....	71
[:SOURce<hw>]:BB:EVDO:WAVEform:CREate.....	71

[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQuence.....76

Index

Symbols

1xEV-DO	
Default settings	14
Save/Recall	14
Set to default	14
State	13
Version	15

A

Access cycle	
Duration	46
Offset	46
Access network settings	
Physical layer subtype	26
Access Network Settings	
Physical Layer Subtype	39
Access Networks Settings	38
Access terminal	
Physical layer subtype	45
State	45
Access Terminal	
Mode	45
Access Terminal:Mode	118
Access Terminal:Physical Layer Subtype	120
ACK channel	
Gating active	51
Length	51
Relative gain	51
State	51
Values	52
Application cards	7
Application notes	7
Arm trigger	18
Armed_Auto	17
Armed_Retrigger	17
Auto	17
Auxiliary pilot channel	
Minimum payload	47
Relative gain	47
State	47

B

B x T	59
Band class	37
Baseband Clipping	60
Brochures	7

C

Capsule length	
Data channel	57
Carrier delay	37
CDMA Channel Number (MC)	38
Center frequency	
Band	37
Carrier (MC)	38
Overall	37
Channel coding	
Packet	55
Channel configuration	37
Chip Rate Variation	60

Clipping Level	61, 71
Clipping Mode	61
Clipping State	60
Clock mode	23
Clock source	23
Common trigger settings	17
Configure access terminals	43
Configure traffic channels	24
Continuous Pilot Mode	39, 84
Control Channel	
Maximum Revision	42
Minimum Revision	41
Packet Start Offset	41
Rate	41
State	41
Control Channel:Rate	83
Conventions	
SCPI commands	64
Coupled trigger settings	17
Cover (DRC Channel)	50
Crest factor	60
Crest factor - Clipping	71
Cut Off Frequency Factor	59

D

Data channel	
Capsule length	57
Data rate	57
Data source	57
FCS	58
Packet state	52
Relative gain	57
State	57
Data Channel:State	114
Data pattern	32, 56, 57
Data rate	31
Data channel	57
Packet	55
Data Rate	95
Data Rate (Packet)	110
Data sheets	7
Data source	
Data channel	57
Packet	56
Default settings	
1xEV-DO	14
Delay	
Marker	22
Trigger	20
Disable quadrature spreading	45
Disable Quadrature Spreading	114
Documentation overview	5
Downlink	68
1xEV-DO	15
DRC Channel	
Cover	50
Gating active	50
Length	50
Relative Gain	49
State	49
Values	50
DRC Channel:Relative Gain	115

- DRC Channel:State 116
 - DRC lock length 35
 - DRC lock state 34, 35
 - DRC Lock State 91
 - DSC Channel
 - Length 49
 - Relative Gain 48
 - State 48
 - Values 49
 - DSC Channel:Length 117
 - DSC Channel:Relative Gain 116
 - DSC Channel:State 117
 - DSC Channel:Values 117
- E**
- External trigger
 - Delay 20
- F**
- FCS
 - Data channel 58
 - Packet 57
 - FCS (Packet) 110
 - Filter Parameter 59
 - Filter Type 59
 - Filtering, Clipping, ARB Settings 58
 - Frame offset 35
- G**
- Gain
 - Pilot channel 46
 - Gain (Pilot Channel) 118
 - Gating active
 - ACK channel 51
 - DRC channel 50
 - Generate
 - Waveform file (1xEV-DO) 14
 - Getting started 5
- H**
- H-ARQ mode 36
 - Help 6
- I**
- I/Q swap 62
 - Infinite
 - Number of packets to send 26
 - Infinite packets
 - Packet 54
 - Installation 8
 - Instrument help 6
 - Instrument security procedures 6
 - Interleave factor 32
 - Invert Q for Correct Baseband Output 62
- L**
- Length
 - ACK channel 51
 - Length (DRC Channel) 50
 - Length (DSC Channel) 49, 117
 - Link Direction 68
 - 1xEV-DO 15
 - Long code mask I channel 45
 - Long code mask Q channel 45
- M**
- MAC index 32
 - MAC level 32
 - Marker delay 22
 - Marker mode 21
 - Marker Mode 80
 - Maximum Revision (Control Channel) 42
 - Measured external clock 23
 - Minimum payload
 - Auxiliary pilot channel 47
 - Minimum Revision (Control Channel) 41
 - Mode (access terminal) 45
 - Mode (Access Terminal) 118
 - Modulation
 - Packet 55
 - Modulation (Packet) 112
 - Multi-carrier configuration 36
- N**
- Number of packets to send
 - Infinite 26
 - Packet 54
 - Value 26
 - Number of subpackets
 - Packet 54
- O**
- Open source acknowledgment (OSA) 7
 - Other User Count 39
- P**
- Packet
 - Channel coding 55
 - Data rate 55
 - Data source 56
 - FCS 57
 - Infinite packets 54
 - Modulation 55
 - Number of packets to send 54
 - Number of subpackets 54
 - Payload size 54
 - Relative gain 53
 - Packet size 31
 - Packet start offset 26
 - Packet Start Offset (Control Channel) 41
 - Packet state
 - Data channel 52
 - Packet: Data Rate 110
 - Packet:FCS 110
 - Packet:Modulation 112
 - Packet:Payload Size 112
 - Pattern 56, 57
 - Payload size
 - Packet 54
 - Payload Size (Packet) 112
 - Physical layer subtype
 - Access terminal 45
 - Physical layer subtype (Access network settings) 26
 - Physical Layer Subtype (Access Network Settings) 39
 - Physical Layer Subtype (Access Terminal) 120

- Pilot channel
 - State 46
 - Pilot Channel
 - Gain 46
 - State 40
 - Pilot Channel:Gain 118
 - Pilot Channel:State 85, 119
 - PN Offset 15, 68
 - Preamble length 46
 - Predefined Settings 45
- R**
- RAB Length (Reverse Activity Bit) 42, 85
 - RAB Level (Reverse Activity Bit) 42
 - RAB MAC Index 43
 - RAB Offset (Reverse Activity Bit) 42
 - Raised cosine filter
 - see Cosine filter 59
 - Rate (Control Channel) 41, 83
 - Rate index 27
 - Relative gain
 - ACK channel 51
 - Auxiliary pilot channel 47
 - Data channel 57
 - Packet 53
 - Relative Gain (DRC Channel) 49, 115
 - Relative Gain (DSC Channel) 48, 116
 - Relative Gain (RRI Channel) 48, 119
 - Release notes 7
 - Retrigger 17
 - Reverse Activity Bit
 - RAB Length 42
 - RAB Level 42
 - RAB Offset 42
 - State 42
 - Reverse Activity Bit:RAB Length 85
 - Reverse Activity Bit:State 86
 - Roll Off 59
 - Root raised cosine filter
 - see Root Cosine 59
 - RPC mode 33
 - RPC Mode 97
 - RPC pattern 34
 - RPC range count 34
 - RRC filter
 - see Root Cosine filter 59
 - RRI Channel
 - Relative Gain 48
 - State 48
 - RRI Channel:Relative Gain 119
- S**
- Safety instructions 6
 - Save/Recall
 - 1xEV-DO 14
 - Sequence Length (ARB) 62
 - Service manual 6
 - Set to default
 - 1xEV-DO 14
 - Signal duration unit 17
 - Signal generation status 18
 - Single 17
 - Slot Count 31
 - Standard settings
 - 1xEV-DO 14
- State
 - 1xEV-DO 13
 - ACK channel 51
 - Auxiliary pilot channel 47
 - Data channel 57
 - Pilot channel 46
 - user 26
 - State - Clipping 72
 - State (access terminal) 45
 - State (Control Channel) 41, 84
 - State (Data Channel) 114
 - State (DRC Channel) 49, 116
 - State (DSC Channel) 48, 117
 - State (Pilot Channel) 40, 85, 119
 - State (Reverse Activity Bit) 42, 86
 - State (RRI Channel) 48
 - System Time 15
- T**
- Transmission direction 68
 - 1xEV-DO 15
 - Trigger
 - Sync. output 19
 - Trigger delay 20
 - Trigger mode 17
 - Trigger signal duration 18
 - Trigger source 18
 - Tutorials 6
- U**
- Uplink 68
 - 1xEV-DO 15
 - User
 - State 26
 - User manual 6
- V**
- Value
 - Number of packets to send 26
 - Values
 - ACK channel 52
 - Values (DRC Channel) 50
 - Values (DSC Channel) 49, 117
 - Version 71
 - 1xEV-DO 15
- W**
- Waveform file
 - Create (1xEV-DO) 14
 - White papers 7