

**PWS4000 Series  
Linear DC Power Supplies  
Declassification and Security  
Instructions**

[www.tektronix.com](http://www.tektronix.com)



077-0640-00

**Tektronix**

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

## **Contacting Tektronix**

Tektronix, Inc.  
14150 SW Karl Braun Drive  
P.O. Box 500  
Beaverton, OR 97077  
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit [www.tektronix.com](http://www.tektronix.com) to find contacts in your area.

---

# Table of Contents

Preface ..... iii

Clear and Sanitize Procedures..... 1

    Memory Devices..... 1

    Data Export Device..... 2

Troubleshooting..... 3

    How to Clear or Sanitize a Nonfunctional Instrument..... 3

    How to Recover from Sanitizing the Nonvolatile Memory of the Instrument ..... 3



# Preface

This document helps customers with data security concerns to sanitize or remove memory devices from the PWS4000 Series Linear DC Power Supplies.

These products have data storage (memory) devices and a data output device (USB port). These instructions tell how to clear or sanitize the memory devices and disable the data output device. The instructions also tell how to declassify an instrument that is not functioning.

## Products

The following Tektronix product is covered by this document:

- PWS4205
- PWS4305
- PWS4323
- PWS4602
- PWS4721

## Related Documents

The following table lists the documentation that is available for these products and shows where you can find it: in a printed manual, on the product documentation CD-ROM, or on the Tektronix Web site.

**Table i: Product documentation**

| Item                                                            | Purpose                                                                                                                                                                                          | Location                                                                                                           |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| User Manual                                                     | Provides operation and application information. This manual is available in English, Spanish, French, German, Portuguese, Italian, Russian, Korean, Simplified Chinese, and Traditional Chinese. | Product Documentation CD and available at <a href="http://www.tektronix.com/manuals">www.tektronix.com/manuals</a> |
| Specifications and Performance Verification Technical Reference | Specifications and procedures for checking instrument performance.                                                                                                                               | Product Documentation CD and available at <a href="http://www.tektronix.com/manuals">www.tektronix.com/manuals</a> |
| Programmer Manual                                               | SCPI command reference for remotely controlling the instrument.                                                                                                                                  | Product Documentation CD and available at <a href="http://www.tektronix.com/manuals">www.tektronix.com/manuals</a> |

## Terms

The following terms may be used in this document:

- **Clear.** This removes data on media/memory before reusing it in a secured area. All reusable memory is cleared to deny access to previously stored information by standard means of access.
- **Erase.** This is equivalent to clear.

- **Media storage/data export device.** Any of several devices that can be used to store or export data from the instrument, such as a USB port.
- **Nonvolatile memory.** Data is retained when the instrument is powered off.
- **Power off.** Some instruments have a “Standby” mode, in which power is still supplied to the instrument. For the purpose of clearing data, putting the instrument in Standby mode does not qualify as powering off. For these products, you will need to either press a rear-panel OFF switch or remove the power source from the instrument.
- **Remove.** This is a physical means to clear the data by removing the memory device from the instrument. Instructions are available in the product Service Manual.
- **Sanitize.** This eradicates the data from media/memory so that the data cannot be recovered by other means or technology. This is typically used when the device will be moved (temporarily or permanently) from a secured area to a non-secured area.
- **Scrub.** This is equivalent to sanitize.
- **User-modifiable.** The user can write to the memory device during normal instrument operation, using the instrument interface or remote control.
- **Volatile memory.** Data is lost when the instrument is powered off.

# Clear and Sanitize Procedures

## Memory Devices

The following tables list nonvolatile and volatile memory devices. Detailed procedures to sanitize or clear these devices are shown after the tables.

**Table 1: Nonvolatile memory devices**

| Type and minimum size         | Function                                               | User modifiable | Data input method                  | Location   | To clear | To sanitize                                               |
|-------------------------------|--------------------------------------------------------|-----------------|------------------------------------|------------|----------|-----------------------------------------------------------|
| EEPROM, 8k x 8 bit            | Current setup, saved setups, and calibration constants | Yes             | Firmware operations and user input | Main board |          | See Clear Flash and EEPROM Procedure following this table |
| Flash 8k x bit                | ListData                                               | Yes             | Firmware operations and user input | Main board |          | See Clear Flash and EEPROM Procedure following this table |
| AT91SAM7X256, 256k Flash      |                                                        | No              | Firmware update                    | CPU board  |          |                                                           |
| STM32F103C8, 64k – 128k Flash |                                                        | No              | Firmware update                    | Main board |          |                                                           |

**Table 2: Volatile memory devices**

| Type and minimum size  | Function | User modifiable | Data input method   | Location   | To clear                                     | To sanitize |
|------------------------|----------|-----------------|---------------------|------------|----------------------------------------------|-------------|
| AT91SAM7X256, 64k SRAM |          | No              | Firmware operations | CPU board  | Cycle power with a minimum of 15 seconds off |             |
| STM32F103C8, 20k SRAM  |          | No              | Firmware operations | Main board | Cycle power with a minimum of 15 seconds off |             |

### Clear Flash and EEPROM Procedure

1. Press the front-panel **Shift** button.
2. Press the front-panel **.** button.
3. Press the front-panel **2** button.

### Clear STM32F103 and AT91SAM Procedure

1. Press the front-panel power button to turn the instrument off.
2. Wait at least 15 seconds before turning the instrument back on.

## Data Export Device

The following table lists the data export device. There are no procedures to disable this device.

**Table 3: Data export devices**

| Type and minimum size | Function                                          | User modifiable | Data input method             | Location                 | To disable         |
|-----------------------|---------------------------------------------------|-----------------|-------------------------------|--------------------------|--------------------|
| USB device port       | Supports remote control and data transfer to a PC | Yes             | Remote control through USBTMC | Rear-panel of instrument | Cannot be disabled |

---

# Troubleshooting

## How to Clear or Sanitize a Nonfunctional Instrument

To sanitize a nonfunctional instrument, remove the Main and CPU boards and return the instrument to Tektronix for installation of replacement boards.

## How to Recover from Sanitizing the Nonvolatile Memory of the Instrument

After performing the Clear Flash and EEPROM Procedure, the power supply will return to the factory default setting. Therefore, a recovery procedure is not necessary.