

# R&S® FSV-K40

## Phase Noise Measurements

### Operating Manual



1176754902

This manual describes the following R&S®FSV/FSVA options:

- R&S FSV-K40 (1310.8403.02)

This manual describes the following R&S FSVA/FSV models with firmware version 3.30 and higher:

- R&S®FSVA4 (1321.3008K05)
- R&S®FSVA7 (1321.3008K08)
- R&S®FSVA13 (1321.3008K14)
- R&S®FSVA30 (1321.3008K31)
- R&S®FSVA40 (1321.3008K41)
- R&S®FSV4 (1321.3008K04)
- R&S®FSV7 (1321.3008K07)
- R&S®FSV13 (1321.3008K13)
- R&S®FSV30 (1321.3008K30)
- R&S®FSV40 (1321.3008K39/1321.3008K40)

It also applies to the following R&S®FSV models. However, note the differences described in [Chapter 1.4, "Notes for Users of R&S FSV 1307.9002Kxx Models"](#), on page 9.

- R&S®FSV3 (1307.9002K03)
- R&S®FSV7 (1307.9002K07)
- R&S®FSV13 (1307.9002K13)
- R&S®FSV30 (1307.9002K30)
- R&S®FSV40 (1307.9002K39/1307.9002K40)

# Contents

<b>1</b>	<b>Preface</b> .....	<b>5</b>
1.1	Documentation Overview.....	5
1.2	Conventions Used in the Documentation.....	6
1.3	How to Use the Help System.....	7
1.4	Notes for Users of R&S FSV 1307.9002Kxx Models.....	9
<b>2</b>	<b>Phase Noise Measurements Option R&amp;S FSV-K40</b> .....	<b>10</b>
2.1	Instrument Functions of Phase Noise Measurements (R&S FSV-K40).....	11
2.2	Remote Control.....	48
	<b>List of Commands</b> .....	<b>98</b>
	<b>Index</b> .....	<b>101</b>



# 1 Preface

## 1.1 Documentation Overview

This section provides an overview of the R&S FSVA/FSV user documentation. Unless specified otherwise, you find the documents on the R&S FSVA/FSV product page at:

[www.rohde-schwarz.com/manual/FSVA](http://www.rohde-schwarz.com/manual/FSVA)

### 1.1.1 Quick Start Guide

Introduces the R&S FSVA/FSV and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

### 1.1.2 Operating Manuals and Help

Separate operating manuals are provided for the base unit and the firmware applications:

- **Base unit manual**  
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- **Firmware application manual**  
Contains the description of the specific functions of a firmware application. Basic information on operating the R&S FSVA/FSV is not included.

The contents of the operating manuals are available as help in the R&S FSVA/FSV. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All operating manuals are also available for download or for immediate display on the Internet.

### 1.1.3 Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, <https://gloris.rohde-schwarz.com>).

### 1.1.4 Instrument Security Procedures

Deals with security issues when working with the R&S FSVA/FSV in secure areas. It is available for download on the Internet.

### 1.1.5 Basic Safety Instructions

Contains safety instructions, operating conditions and further important information. The printed document is delivered with the instrument.

### 1.1.6 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S FSVA/FSV. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See [www.rohde-schwarz.com/brochure-datasheet/FSV](http://www.rohde-schwarz.com/brochure-datasheet/FSV)

### 1.1.7 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

See [www.rohde-schwarz.com/firmware/FSV](http://www.rohde-schwarz.com/firmware/FSV)

### 1.1.8 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

See [www.rohde-schwarz.com/application/FSV](http://www.rohde-schwarz.com/application/FSV)

## 1.2 Conventions Used in the Documentation

### 1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
Filenames, commands, program code	Filenames, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
<a href="#">Links</a>	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

## 1.2.2 Conventions for Procedure Descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

## 1.2.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

# 1.3 How to Use the Help System

## Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the [HELP] key on the front panel. The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- ▶ If the help is already displayed, press the softkey for which you want to display help.

A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

### Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

### Navigating in the table of contents

- To move through the displayed contents entries, use the [UP ARROW] and [DOWN ARROW] keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the [ENTER] key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

### Navigating in the help topics

- To scroll through a page, use the rotary knob or the [UP ARROW] and [DOWN ARROW] keys.
- To jump to the linked topic, press the link text on the touchscreen.

### Searching for a topic

1. Change to the "Index" tab.
2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the [ENTER] key.
4. Select the suitable keyword by using the [UP ARROW] or [DOWN ARROW] keys or the rotary knob.
5. Press the [ENTER] key to display the help topic.

The "View" tab with the corresponding help topic is displayed.



### Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

### Closing the help window

- ▶ Press the [ESC] key or a function key on the front panel.

## 1.4 Notes for Users of R&S FSV 1307.9002Kxx Models

Users of R&S FSV 1307.9002Kxx models should consider the following differences to the description of the newer R&S FSVA/FSV 1321.3008Kxx models:

- Functions that are based on the Windows 10 operating system (e.g. printing or setting up networks) may have a slightly different appearance or require different settings on the Windows XP based models. For such functions, refer to the Windows documentation or the documentation originally provided with the R&S FSV instrument.
- The R&S FSV 1307.9002K03 model is restricted to a maximum frequency of 3 GHz, whereas the R&S FSVA/FSV1321.3008K04 model has a maximum frequency of 4 GHz.
- The bandwidth extension option R&S FSV-B160 (1311.2015.xx) is not available for the R&S FSV 1307.9002Kxx models. The maximum usable I/Q analysis bandwidth for these models is 28 MHz, or with option R&S FSV-B70, 40 MHz.

## 2 Phase Noise Measurements Option R&S FSV-K40

Phase Noise Measurement Software R&S FSV-K40 extends the measurement capabilities of Rohde&Schwarz signal and spectrum analyzers by phase noise tests. The R&S FSV-K40 is ideal for this purpose because of its low inherent phase noise and noise figure. The high phase noise measurement speed is achieved through the high sweep rates of all analyzers. It is possible to trade off speed against accuracy at small resolution bandwidths ( $\leq 1$  kHz) by using either FFT or digital filters. The software allows different settings within a phase noise diagram, e.g. FFT close to the carrier and analog/digital filters far off the carrier.

This part of the documentation consists of the following chapters:

<b>2.1 Instrument Functions of Phase Noise Measurements (R&amp;S FSV-K40)</b> .....	<b>11</b>
2.1.1 Measurements and Results.....	13
2.1.2 Softkeys of the Phase Noise Menu (R&S FSV-K40).....	27
2.1.3 FREQ key.....	29
2.1.4 SPAN key.....	29
2.1.5 AMPT key.....	30
2.1.6 BW key.....	30
2.1.7 Softkeys of the Sweep Menu – SWEEP key (R&S FSV-K40).....	30
2.1.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K40).....	31
2.1.9 Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K40).....	35
2.1.10 Softkeys of the Marker Menu – MKR key (R&S FSV-K40).....	35
2.1.11 Softkeys of the Marker To Menu – MKR-> key (R&S FSV-K40).....	37
2.1.12 Softkeys of the Lines Menu – LINES key (R&S FSV-K40).....	37
2.1.13 Working with Limit Lines.....	38
2.1.14 Editing Limit Lines.....	39
2.1.15 Detector Overview.....	40
2.1.16 Selecting the Appropriate Filter Type.....	41
2.1.17 List of Available RRC and Channel Filters.....	42
2.1.18 Trace Mode Overview.....	44
2.1.19 ASCII File Export Format.....	45
<b>2.2 Remote Control</b> .....	<b>48</b>
2.2.1 Notation.....	49
2.2.2 CALCulate subsystem.....	51

2.2.3	CONFigure Subsystem.....	69
2.2.4	DISPlay Subsystem.....	70
2.2.5	FETCh Subsystem.....	74
2.2.6	FORMat subsystem.....	75
2.2.7	INITiate subsystem.....	75
2.2.8	INPUt Subsystem.....	77
2.2.9	INSTrument subsystem.....	78
2.2.10	MMEMory subsystem.....	78
2.2.11	SENSE Subsystem.....	79
2.2.12	STATus Subsystem.....	87
2.2.13	Status Reporting System.....	91
2.2.14	TRACe subsystem.....	96
2.2.15	Other Commands Referenced in this Document.....	96

## 2.1 Instrument Functions of Phase Noise Measurements (R&S FSV-K40)

### To open the main Phase Noise measurements menu

- If the Phase Noise mode is not the active measurement mode, press the [MODE] key and activate the "Phase Noise" option.
- If the Phase Noise mode is already active, press the [HOME] key. The main phase noise figure measurements menu is displayed.

### Menu and softkey description

In the following sections the specific softkeys available for phase noise measurements are described.

- [Chapter 2.1.2, "Softkeys of the Phase Noise Menu \(R&S FSV-K40\)", on page 27](#)
- [Chapter 2.1.7, "Softkeys of the Sweep Menu – SWEEP key \(R&S FSV-K40\)", on page 30](#)
- [Chapter 2.1.8, "Softkeys of the Trace Menu – TRACE key \(R&S FSV-K40\)", on page 31](#)
- [Chapter 2.1.9, "Softkeys of the Auto Set menu - AUTO SET Key \(R&S FSV-K40\)", on page 35](#)
- [Chapter 2.1.12, "Softkeys of the Lines Menu – LINES key \(R&S FSV-K40\)", on page 37](#)
- [Chapter 2.1.10, "Softkeys of the Marker Menu – MKR key \(R&S FSV-K40\)", on page 35](#)

- [Chapter 2.1.11, "Softkeys of the Marker To Menu – MKR-> key \(R&S FSV-K40\)",](#) on page 37

The "Trigger", "Meas Config", "Input/Output", and "Marker Functions" menus are not available for Phase noise measurements.

#### Further information

- [Chapter 2.1.1.4, "Measurement Settings and Results Display",](#) on page 24
- [Chapter 2.1.15, "Detector Overview",](#) on page 40
- [Chapter 2.1.18, "Trace Mode Overview",](#) on page 44
- [Chapter 2.1.16, "Selecting the Appropriate Filter Type",](#) on page 41
- [Chapter 2.1.17, "List of Available RRC and Channel Filters",](#) on page 42
- [Chapter 2.1.19, "ASCII File Export Format",](#) on page 45

#### Tasks

- [Chapter 2.1.1.1, "Overview of General Settings",](#) on page 13
- [Chapter 2.1.1.2, "Overview of Measurement Settings",](#) on page 20
- [Chapter 2.1.1.3, "Running Measurements",](#) on page 23
- [Chapter 2.1.13, "Working with Limit Lines",](#) on page 38
- [Chapter 2.1.14, "Editing Limit Lines",](#) on page 39

2.1.1	Measurements and Results.....	13
2.1.1.1	Overview of General Settings.....	13
2.1.1.2	Overview of Measurement Settings.....	20
2.1.1.3	Running Measurements.....	23
2.1.1.4	Measurement Settings and Results Display.....	24
2.1.1.5	Saving and Recalling Settings and Results.....	26
2.1.2	Softkeys of the Phase Noise Menu (R&S FSV-K40).....	27
2.1.3	FREQ key.....	29
2.1.4	SPAN key.....	29
2.1.5	AMPT key.....	30
2.1.6	BW key.....	30
2.1.7	Softkeys of the Sweep Menu – SWEEP key (R&S FSV-K40).....	30
2.1.8	Softkeys of the Trace Menu – TRACE key (R&S FSV-K40).....	31
2.1.9	Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K40).....	35
2.1.10	Softkeys of the Marker Menu – MKR key (R&S FSV-K40).....	35
2.1.11	Softkeys of the Marker To Menu – MKR-> key (R&S FSV-K40).....	37
2.1.12	Softkeys of the Lines Menu – LINES key (R&S FSV-K40).....	37
2.1.13	Working with Limit Lines.....	38

2.1.14	Editing Limit Lines.....	39
2.1.15	Detector Overview.....	40
2.1.16	Selecting the Appropriate Filter Type.....	41
2.1.17	List of Available RRC and Channel Filters.....	42
2.1.18	Trace Mode Overview.....	44
2.1.19	ASCII File Export Format.....	45

## 2.1.1 Measurements and Results

This section contains a detailed description of performing measurements and their results. It covers the following subjects:

2.1.1.1	Overview of General Settings.....	13
2.1.1.2	Overview of Measurement Settings.....	20
2.1.1.3	Running Measurements.....	23
2.1.1.4	Measurement Settings and Results Display.....	24
2.1.1.5	Saving and Recalling Settings and Results.....	26

### 2.1.1.1 Overview of General Settings

This section describes the "General Settings" view where all settings related to the general measurement can be modified, i.e. the signal characteristics, display settings, trace settings, residual calculation settings and spot noise settings.



When a particular parameter is selected within the "General Settings" view, the status bar changes to display information on the valid settings for the selected parameter.

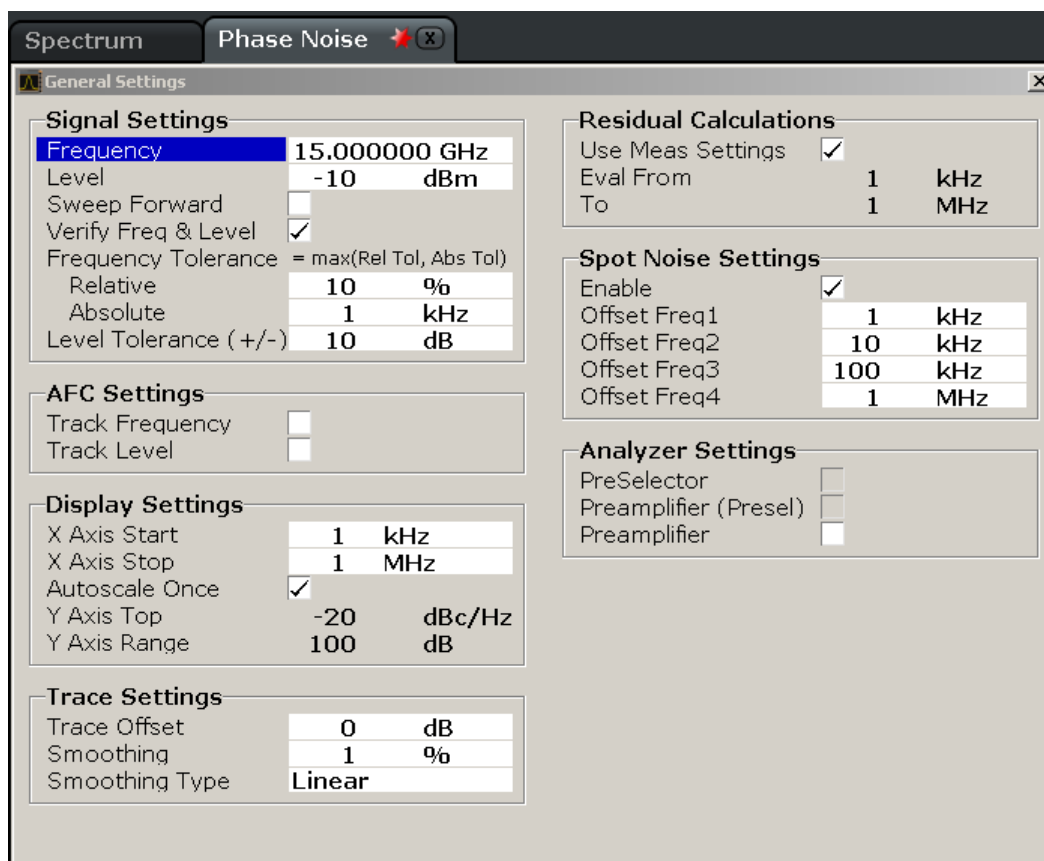


Figure 2-1: "General Settings" view

The parameters within the "General Settings" view are logically grouped together into:

Signal Settings.....	15
L Frequency.....	15
L Level.....	15
L Sweep Forward.....	15
L Verify Freq and Level.....	15
L Frequency Tolerance.....	16
L Level Tolerance.....	16
AFC SettingsTrack Frequency.....	16
L Track Level.....	16
Display Settings.....	16
L X Axis Start.....	17
L X Axis Stop.....	17
L Autoscale Once.....	17
L Y Axis Top.....	17
L Y Axis Range.....	17
Trace Settings.....	17
L Trace Offset.....	18
L Smoothing.....	18
L Smoothing Type.....	18
Residual CalculationsUse Meas Settings.....	19

Eval From.....	19
To.....	19
Spot Noise Settings.....	19
L Enable.....	20
L Offset Freq 1,2,3,4.....	20
PreSelector.....	20
Preamplifier (Preselect).....	20
Preamplifier.....	20

### Signal Settings

The "Signal Settings" are the general settings concerning the level and frequency of the signal to be measured. These settings contain the following parameters:

- "Frequency" on page 15
- "Level" on page 15
- "Sweep Forward" on page 15
- "Verify Freq and Level" on page 15
- "Frequency Tolerance" on page 16
- "Level Tolerance" on page 16

#### Frequency ← Signal Settings

Specifies the center frequency of the signal to be measured.

**Tip:** you can switch directly to this field by pressing the [FREQ] key.

Remote command:

[SENSe:] FREQuency: CENTer on page 81

#### Level ← Signal Settings

Specifies the expected level of the RF input signal.

**Tip:** you can switch directly to this field by pressing the [AMPT] key.

[SENSe:] POWer: RLEVel on page 84

#### Sweep Forward ← Signal Settings

Determines the sweep direction for the current measurement.

"ON"                   The measurement is performed from the start offset frequency to the stop offset frequency.

"OFF"                   The measurement is performed from the stop offset frequency to the start offset frequency.

Remote command:

[SENSe:] SWEEp: FORWard on page 86

#### Verify Freq and Level ← Signal Settings

Enables a search across a frequency tolerance range, for the carrier of greatest magnitude. Carrier frequency and level are measured. If the level is within a level tolerance range, the measured level overrides the specified [Level](#). Otherwise the measurement is aborted.

This should be used when the carrier frequency is not known precisely.

When "Verify Freq" is on, [Frequency Tolerance](#) and [Level Tolerance](#) parameters become enabled.

Remote command:

[\[SENSe:\] FREQuency:VERify\[:STATe\]](#) on page 82

### Frequency Tolerance ← Signal Settings

Used to verify the input signal frequency; the value used is the higher value of the specified "Relative" or "Absolute" tolerance values.

"Relative"      The "Relative Frequency Tolerance" parameter is the ratio of the sub-span's start frequency. A frequency and level check is carried out before each subsweep.

"Absolute"      The "Absolute Frequency Tolerance" is the range either side of the "Signal Frequency" within which the carrier is known to be. A frequency and level check is carried out before each subsweep.

Remote command:

[\[SENSe:\] FREQuency:VERify:TOLerance:RELative](#) on page 83

[\[SENSe:\] FREQuency:VERify:TOLerance](#) on page 82

### Level Tolerance ← Signal Settings

Offset relative to the "Level". It is used to verify the "Level" of the input signal.

"Level Tolerance" specifies the maximum and minimum deviation from the specified "Level" setting that the input signal may vary by and still pass the verification, i.e. the measured level between ("Level"+"Level\_Tolerance") and ("Level"-"Level\_Tolerance") is accepted.

Remote command:

[\[SENSe:\] POWer:RLEVel:VERify:TOLerance](#) on page 85

### AFC SettingsTrack Frequency

Enables or disables the signal frequency tracking mechanism during the measurement.

This parameter is only available when the "Verify Freq and Level" on page 15 parameter is enabled.

Remote command:

[\[SENSe:\] FREQuency:TRACk](#) on page 81

### Track Level ← AFC SettingsTrack Frequency

Enables or disables the signal level tracking mechanism during the measurement.

This parameter is only available when the "Verify Freq and Level" on page 15 parameter is enabled.

Remote command:

[\[SENSe:\] POWer:TRACk](#) on page 85

### Display Settings

The display settings configure the display of the measurement results. The settings contain the following parameters:

- ["X Axis Start"](#) on page 17
- ["X Axis Stop"](#) on page 17
- ["Autoscale Once"](#) on page 17
- ["Y Axis Top"](#) on page 17



- ["Y Axis Range"](#) on page 17

#### **X Axis Start ← Display Settings**

Specifies the minimum frequency for the X axis.

When "X Axis Start" changes, the "Start" parameter in the "Measurement Settings" view is updated accordingly.

Remote command:

[\[SENSe:\] FREQuency: START](#) on page 81

#### **X Axis Stop ← Display Settings**

Specifies the maximum frequency for the X axis.

When "X Axis Stop" changes, the "Stop" parameter in the "Measurement Settings" view is updated accordingly.

Remote command:

[\[SENSe:\] FREQuency: STOP](#) on page 81

#### **Autoscale Once ← Display Settings**

If activated, the y-axis scaling is calculated from the results.

The autoscaling is only carried out once in the first sweep. The subsequent sweeps do not autoscale the y-axis.

When "Autoscale Once" is on, "Y Axis Top" and "Range" parameters are unavailable. When it is off, the "Y Axis Top" and "Range" parameters are editable.

Remote command:

[DISPlay\[:WINDow<n>\]: TRACe<t>:Y\[:SCALe\]: AUTO](#) on page 72

#### **Y Axis Top ← Display Settings**

Specifies the maximum phase noise level in the y-axis for the trace results.

Remote command:

[DISPlay\[:WINDow<n>\]: TRACe<t>:Y\[:SCALe\]: RLEVel](#) on page 73

#### **Y Axis Range ← Display Settings**

Specifies the distance from the top to the origin in the y-axis.

Remote command:

[\[SENSe:\] POWer: RLEVel: VERify: TOLerance](#) on page 85

#### **Trace Settings**

The trace settings configure the trace and contain the following parameters:

- ["Trace Offset"](#) on page 18
- ["Smoothing"](#) on page 18
- ["Smoothing Type"](#) on page 18

If smoothing is activated using the ["Smoothing"](#) on page 33 softkey in the "Trace" menu, the trace on the screen is smoothed by the defined smoothing percentage (see ["Smoothing"](#) on page 18). Each trace (trace1, trace2 and trace3) can be smoothed and unsmoothed individually.

The smoothing algorithm used is as follows:

$$y'(s) = 10 * \text{Log}_{10} \left( \left( \sum_{x=s-\left(\frac{n-1}{2}\right)}^{x=s+\left(\frac{n-1}{2}\right)} 10^{\left(\frac{y(x)}{10}\right)} \right) \div n \right)$$

Where:

"s" = the trace sample number

"y(s)" = the phase noise at sample "s"

"x" = the sample offset from "s"

"n" = the width of the sliding window

When "x" exceeds the boundary samples, the boundary sample is used, i.e. if the trace has samples numbered 0 to 500, then with "n" = 5 and "s" = 0, the average is calculated as:

$$y'(0) = 10 * \text{Log}_{10} \left( \left( 3 * 10^{\left(\frac{y(0)}{10}\right)} + 10^{\left(\frac{y(1)}{10}\right)} + 10^{\left(\frac{y(2)}{10}\right)} \right) \div 5 \right)$$

If both trace averaging (see ["Sweep Mode Settings"](#) on page 21) and smoothing are activated, then trace smoothing is applied first, and averaging is performed on the smoothed trace.

When smoothing is applied to a trace, the original (unsmoothed) trace is still held in memory. This makes it possible to toggle between a smoothed and unsmoothed trace without the need to run a new measurement sweep.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SMOothing:APERture](#) on page 71

#### Trace Offset ← Trace Settings

Defines an arithmetic reference level offset which is added to the y axis labelling.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RLEVEL:OFFSet](#) on page 73

#### Smoothing ← Trace Settings

Specifies the % of the display width to be used as a window when a trace is smoothed.

The larger the setting of the "Smoothing" parameter, the greater the smoothing effect.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SMOothing:APERture](#) on page 71

#### Smoothing Type ← Trace Settings

Defines whether linear or logarithmic smoothing is to be used.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SMOothing:TYPE](#) on page 72

**Residual Calculations Use Meas Settings**

Specifies whether to use the whole measurement range or the user defined evaluation range for the residual calculations.

If the "Use Meas Settings" is activated, the "Eval From" on page 19 and "To" on page 19 fields become disabled and residual calculations are performed across the complete range of the measurement results.

If the "Use Meas Settings" is deactivated, the "Eval From" on page 19 and "To" on page 19 fields become enabled. Use them to specify the range over which residual calculations are performed.

Remote command:

`CALCulate<n>:EVALuation[:STATe]` on page 54

**Eval From**

Specifies the start of the measurement range for which residual calculations are to be performed.

The minimum value that can be specified for the "Eval From" setting is the value of the "X Axis Start" on page 17 setting.

The maximum value that can be specified for the "Eval From" setting is the value of the "X Axis Stop" on page 17 setting.

When the "X Axis Start" on page 17 or "X Axis Stop" on page 17 settings are modified, the "Eval From" is automatically adjusted to ensure that it is not outside the measurement range.

The "Eval From" setting cannot be set higher than the "To" setting.

Remote command:

`CALCulate<n>:EVALuation:START` on page 54

**To**

Specifies the end of the measurement range for which residual calculations are to be performed.

The minimum value that can be specified for the "To" setting is the value of the "X Axis Start" on page 17 setting.

The maximum value that can be specified for the "To" setting is the value of the "X Axis Stop" on page 17 setting.

When the "X Axis Start" on page 17 or "X Axis Stop" on page 17 settings are modified, the "Eval From" on page 19 setting is automatically adjusted to ensure that it is not outside the measurement range.

The "To" setting cannot be set lower than the "Eval From" on page 19 setting.

Remote command:

`CALCulate<n>:EVALuation:STOP` on page 54

**Spot Noise Settings**

In spot noise settings you can specify up to 4 discrete frequency points from which the phase noise result from a measurement sweep can be obtained and displayed.

Spot noise results are updated while a sweep is running.

**Enable ← Spot Noise Settings**

Activates and deactivates spot noise calculations.

Remote command:

`CALCulate<n>:SNOise<m>:STATe` on page 66

`CALCulate<n>:SNOise<m>:AOFF` on page 66

**Offset Freq 1,2,3,4 ← Spot Noise Settings**

In the "Offset Freq" settings you can specify up to four frequency points at which spot noise calculations are performed.

If an offset frequency is specified which is outside the measurement frequency range, no results are displayed for that offset frequency.

Remote command:

`CALCulate<n>:SNOise<m>:X` on page 67

**PreSelector**

Activates or deactivates the preselector (if installed).

Remote command:

`INPut:PRESelection[:STATe]` on page 77

**Preamplifier (Preselect)**

Activates or deactivates the preamplifier on the preselector (if installed).

Remote command:

`INPut:GAIN:STATe` on page 77

**Preamplifier**

Activates or deactivates the preamplifier.

Remote command:

`INPut:GAIN:STATe` on page 77

### 2.1.1.2 Overview of Measurement Settings

This section describes the "Measurement Settings" view, in which the settings associated with measurement sweep are specified.

The "Measurement Settings" are logically grouped together into:

- "Sweep Mode Settings" on page 21
- "Span Settings" on page 22
- "Carrier Frequency Offset Table" on page 22
- "Preset Settings" on page 23

When a particular parameter is selected within the "Measurement Settings" view, the status bar changes to display information about the valid settings for the selected parameter.

**Measurement Settings**

Sweep Mode: NORMAL | Sweep Settings: FFT Window FLATTOP | Use Overlap:

Span Settings: Start Offset 1 kHz, Stop Offset 1 MHz

Carrier Frequency Offset		From	To	RBW	Avg	FFT	Meas Time
1 Hz	3 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s		
3 Hz	10 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s		
10 Hz	30 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s		
30 Hz	100 Hz	1 Hz	3	<input checked="" type="checkbox"/>	11.74 s		
100 Hz	300 Hz	3 Hz	3	<input checked="" type="checkbox"/>	4.23 s		
300 Hz	1 kHz	10 Hz	3	<input checked="" type="checkbox"/>	1.24 s		
1 kHz	3 kHz	30 Hz	10	<input checked="" type="checkbox"/>	1.5 s		
3 kHz	10 kHz	100 Hz	10	<input checked="" type="checkbox"/>	521.98 ms		
10 kHz	30 kHz	300 Hz	10	<input checked="" type="checkbox"/>	233.94 ms		
30 kHz	100 kHz	1 kHz	10	<input checked="" type="checkbox"/>	191.62 ms		
100 kHz	300 kHz	3 kHz	10	<input checked="" type="checkbox"/>	227.07 ms		
300 kHz	1 MHz	10 kHz	10	<input type="checkbox"/>	409.13 ms		
1 MHz	3 MHz	30 kHz	10	<input type="checkbox"/>	296.36 ms		
3 MHz	10 MHz	100 kHz	10	<input type="checkbox"/>	222.77 ms		
10 MHz	30 MHz	300 kHz	10	<input type="checkbox"/>	202.15 ms		
30 MHz	100 MHz	1 MHz	10	<input type="checkbox"/>	214.15 ms		
100 MHz	300 MHz	3 MHz	10	<input type="checkbox"/>	327.75 ms		
300 MHz	1 GHz	10 MHz	10	<input type="checkbox"/>	344.23 ms		
1 GHz	3 GHz	10 MHz	10	<input type="checkbox"/>	347.71 ms		
3 GHz	10 GHz	10 MHz	10	<input type="checkbox"/>	351.18 ms		
Total Estimated Measurement Time							3.08 s

Preset Settings: RBW 10% (of start frequency), Average 1, FFT Filters

Figure 2-2: Measurement Settings view

### Sweep Mode Settings

When the "Sweep Mode" parameter is changed, the "Carrier Frequency Offset" table is updated from the instrument's default settings.

**Tip:** You can switch directly to this field by pressing the "Sweep Mode" softkey.

In fast, normal and averaged modes, the table is not editable, it is for information only.

- "Fast" Not averaged. The measurement is very fast, as the average column is set to 1 for all sub-bands.
- "Normal" Normal averaged. The measurement is slower than the "Fast" mode, but the sub-bands are averaged more.
- "Averaged" Highly averaged. The measurement is very slow, with high average in each sub-band for more accurate results.
- "Manual" The "RBW", "Average" and "FFT" columns in the "Carrier Frequency Offset Table", as well as the "Preset Settings", can be set by the user (see ["Carrier Frequency Offset Table"](#) on page 22 and ["Preset Settings"](#) on page 23).

### Sweep Settings ← Sweep Mode Settings

The following sweep settings are displayed for information only:

## Instrument Functions of Phase Noise Measurements (R&amp;S FSV-K40)

<b>Sweep type</b>	FFT, Sweep or Auto
<b>Window function</b>	Window function for FFT, e.g. "Window FLATTOP"
<b>Use overlap</b>	Overlapping FFTs

**Span Settings**

Defines the span settings of the measurement.

**Start Offset ← Span Settings**

Defines the start frequency of the measurement.

When this parameter changes, the "[X Axis Start](#)" on page 17 parameter in the "General Settings" view is updated accordingly.

The selected span for the noise measurement is highlighted in the "[Carrier Frequency Offset Table](#)" on page 22 table.

**Tip:** you can switch directly to this setting by pressing the [SPAN] key.

**Stop Offset ← Span Settings**

Defines the stop frequency of the measurement.

When this parameter changes, the "[X Axis Stop](#)" on page 17 parameter in the "General Settings" view is updated accordingly.

The selected span for the noise measurement is highlighted in the "[Carrier Frequency Offset Table](#)" on page 22 table.

**Carrier Frequency Offset Table**

Carrier Frequency Offset						
From	To	RBW	Avg	FFT	Meas Time	
1 Hz	3 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s	
3 Hz	10 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s	
10 Hz	30 Hz	1 Hz	1	<input checked="" type="checkbox"/>	3.91 s	
30 Hz	100 Hz	1 Hz	3	<input checked="" type="checkbox"/>	11.74 s	
100 Hz	300 Hz	3 Hz	3	<input checked="" type="checkbox"/>	4.23 s	
300 Hz	1 kHz	10 Hz	3	<input checked="" type="checkbox"/>	1.24 s	
1 kHz	3 kHz	30 Hz	10	<input checked="" type="checkbox"/>	1.5 s	
3 kHz	10 kHz	100 Hz	10	<input checked="" type="checkbox"/>	521.98 ms	
10 kHz	30 kHz	300 Hz	10	<input checked="" type="checkbox"/>	233.94 ms	
30 kHz	100 kHz	1 kHz	10	<input checked="" type="checkbox"/>	191.62 ms	
100 kHz	300 kHz	3 kHz	10	<input checked="" type="checkbox"/>	227.07 ms	
300 kHz	1 MHz	10 kHz	10	<input type="checkbox"/>	409.13 ms	
1 MHz	3 MHz	30 kHz	10	<input type="checkbox"/>	296.36 ms	
3 MHz	10 MHz	100 kHz	10	<input type="checkbox"/>	222.77 ms	
10 MHz	30 MHz	300 kHz	10	<input type="checkbox"/>	202.15 ms	
30 MHz	100 MHz	1 MHz	10	<input type="checkbox"/>	214.15 ms	
100 MHz	300 MHz	3 MHz	10	<input type="checkbox"/>	327.75 ms	
300 MHz	1 GHz	10 MHz	10	<input type="checkbox"/>	344.23 ms	
1 GHz	3 GHz	10 MHz	10	<input type="checkbox"/>	347.71 ms	
3 GHz	10 GHz	10 MHz	10	<input type="checkbox"/>	351.18 ms	
Total Estimated Measurement Time					3.08 s	

**Note:** The selected spans for the noise measurement are highlighted in the "Carrier Frequency Offset" table.

The "RBW", "Avg" and "FFT" fields are editable in "Manual" sweep mode only. For all other sweep modes, this table is for information only.

The total measurement time for the selected sub-bands is displayed at the bottom of the table.

**From ← Carrier Frequency Offset Table**

The start frequency of each sub-band.

Remote command:

[SENSe:] FREQuency: START on page 81

**To ← Carrier Frequency Offset Table**

The stop frequency of each sub-band.

Remote command:

[SENSe:] FREQuency: STOP on page 81

**RBW ← Carrier Frequency Offset Table**

The resolution filter bandwidth used for each sub-band. Enter values in steps of 1/3/10.

**Tip:** you can switch directly to the first "RBW" field in the span by pressing the [BW] key.

**Range ← Carrier Frequency Offset Table**

0.1 % .. 30 % of the start frequency in that row.

**Average ← Carrier Frequency Offset Table**

The number of sweeps to average over for each sub-band.

**Range ← Carrier Frequency Offset Table**

1 .. 10000

**FFT ← Carrier Frequency Offset Table**

Selection to use the FFT Resolution Filter or the conventional filter for each decade.

FFT is only available for RBW values between 1 Hz and 30 kHz.

**Meas Time ← Carrier Frequency Offset Table**

The estimated measurement time for each sub-band. Note this time is for the measurement only and does not include processing time.

**Preset Settings**

The "Preset Settings" display the default values used for "RBW" , "Average" , "FFT" when the "Preset Settings" softkey is pressed (see "Preset Settings" on page 29).

For sweep mode "MANUAL", you can edit these settings. In this case, the values in the "Carrier Frequency Offset" table are changed accordingly (see "Carrier Frequency Offset Table" on page 22).

### 2.1.1.3 Running Measurements

To start a measurement, press the [RUN SINGLE] or [RUN CONT] key.

- "RUN SINGLE" switches to single sweep mode and performs a single sweep, just as the [Single Sweep](#) softkey in the "Sweep" menu does.

- "RUN CONT" switches to continuous sweep mode and starts sweeping, just as the "Continuous Sweep" on page 30 softkey in the "Sweep" menu does.



If you press one of the [RUN] keys while a measurement is running, the measurement is aborted.

During a measurement, the text "Running..." is displayed in the status bar at the bottom of the screen. A progress bar is also displayed to show progress through the current measurement sweep. After successful completion of a single measurement, the status bar displays "Measurement Complete".

If the "Verify Freq and Level" on page 15 parameter is selected in the "General Settings" view, then R&S FSV-K40 checks if there is a signal within the specified frequency and level tolerance ranges relative to the specified signal frequency and level. If no signal is found, or a signal is found which is outside the tolerance range, then a message is displayed in the status bar ("No signals found within tolerance range") and the measurement is aborted.

While a measurement sweep is running, changing any of the settings in the "General Settings" or "Meas Settings" views causes the measurement to be aborted, apart from the following settings:

- "Verify On/Off" on page 28
- "Track Level On/Off" on page 28
- "Track Freq On/Off" on page 29
- "Preset Settings" on page 29
- "Autoscale Y Axis" on page 29
- "Ref Meas" on page 29

Once a measurement sweep has been performed, all active limit lines as well as the limit result are displayed.

#### 2.1.1.4 Measurement Settings and Results Display

The diagram header shows the general measurement settings used to obtain the current measurement results.



Spectrum		Phase Noise  			
Settings		Residual Noise		Spot Noise [T1]	
Signal Freq	15.000000 GHz	Eval from	...	1 kHz	...
Signal Level	-10 dBm	Residual PM	...	10 kHz	...
Signal Freq Δ	...	Residual FM	...	100 kHz	...
Signal Level Δ	...	RMS Jitter	...	1 MHz	...
Top	-20 dBc/Hz	RF Atten	...		

Figure 2-3: Diagram header with measurement settings and results

The header includes the following information:



<b>Settings</b>	
<b>Signal Frequency</b>	The frequency of the measured input signal.
<b>Signal Level</b>	The level of the input signal
<b>Signal Freq <math>\Delta</math></b>	The measured frequency difference (during verification and tracking)
<b>Signal Level <math>\Delta</math></b>	The measured level difference (during verification and tracking)
<b>Top</b>	The Y-Axis top (the maximum phase noise level in the y-axis for the trace results)
<b>RF Atten</b>	The RF attenuation
<b>Residual Noise</b>	
<b>Eval from ... to ...</b>	The frequency range for which residual noise is calculated. The range of the residual noise calculations is displayed in the results trace by two lines, marker EL1 and EL2.
<b>Residual PM</b>	The residual PM result over the selected evaluation range.
<b>Residual FM</b>	The residual FM result over the selected evaluation range.
<b>RMS Jitter</b>	The RMS jitter result over the selected evaluation range
<b>Spot Noise</b>	
1 kHz/ 10 kHz/ 100 kHz/ 1MHz	Spot noise results at selected frequencies within the evaluation range

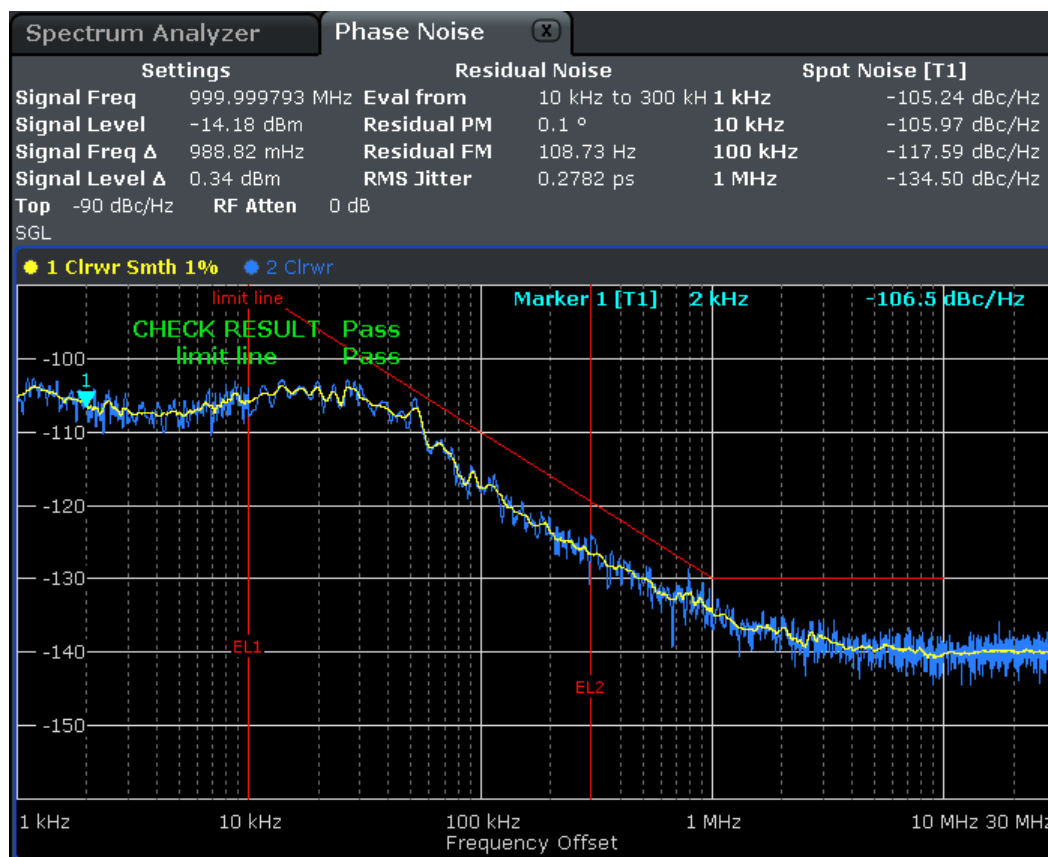


Figure 2-4: Phase Noise Measurement Results

Note that the residual noise results are displayed at the end of a measurement sweep. If you change the range for the residual noise results in the "General Setting" view after a measurement sweep has been run, the residual noise results are automatically updated. The range of the residual noise calculations is displayed in the results trace by two lines, marker EL1 and EL2.

### 2.1.1.5 Saving and Recalling Settings and Results

The save/recall functions for phase noise measurements using R&S FSV-K40 are the same as for the base unit. For details see the Save/Rcl menu description for the base unit.

Specifically in the R&S FSV-K40 option, the following items can be saved or recalled:

- **Current Settings** - all user settings for phase noise measurements
- **K40 Results** - all current trace results
- **All Limit Lines** - all defined limit lines

## 2.1.2 Softkeys of the Phase Noise Menu (R&S FSV-K40)

The following table shows all softkeys available in the "Phase Noise" menu.

General Settings.....	27
L Signal Settings.....	27
L Display Settings.....	27
L Trace Settings.....	27
L Residual Calc.....	27
L Spot Noise.....	27
L Smoothing %.....	28
Meas Settings.....	28
L Sweep Mode.....	28
L Span Start.....	28
L Span Stop.....	28
L Subspan RBW.....	28
L RBW %.....	28
L Average.....	28
L Use FFT On/Off.....	28
Verify On/Off.....	28
Track Level On/Off.....	28
Track Freq On/Off.....	29
Preset Settings.....	29
Autoscale Y Axis.....	29
Ref Meas.....	29

### General Settings

Displays the "General Settings" view and the "General Settings" submenu. See [Overview of General Settings](#) for details.

### Signal Settings ← General Settings

Switches to the first setting in the "Signal Settings" area of the "General Settings" view.

### Display Settings ← General Settings

Switches to the first setting in the "Display Settings" area of the "General Settings" view. See [Overview of General Settings](#) for details.

### Trace Settings ← General Settings

Switches to the first setting in the "Trace Settings" area of the "General Settings" view. See [Overview of General Settings](#) for details.

### Residual Calc ← General Settings

Switches to the first setting in the "Residual Calculations" area of the "General Settings" view. See [Overview of General Settings](#) for details.

### Spot Noise ← General Settings

Switches to the first setting in the "Spot Noise Settings" area of the "General Settings" view. See [Overview of General Settings](#) for details.

**Smoothing % ← General Settings**

Switches to the "Smoothing" setting in the "Trace Settings" area of the "General Settings" view. See [Overview of General Settings](#) for details.

**Meas Settings**

Displays the "Meas Settings" view and the "Meas Settings" submenu. See [Overview of Measurement Settings](#) for details.

**Sweep Mode ← Meas Settings**

Switches to the "Sweep Mode" setting in the "Measurement Settings" view. See [Overview of Measurement Settings](#) for details.

**Span Start ← Meas Settings**

Switches to the "Start Offset" setting in the "Span Settings" area of the "Measurement Settings" view. See [Overview of Measurement Settings](#) for details.

**Span Stop ← Meas Settings**

Switches to the "Stop Offset" setting in the "Span Settings" area of the "Measurement Settings" view. See [Overview of Measurement Settings](#) for details.

**Subspan RBW ← Meas Settings**

Switches to the first field in the "RBW" column for the subspan in the "Measurement Settings" view. This softkey is only available in sweep mode "MANUAL". See [Overview of Measurement Settings](#) for details.

**RBW % ← Meas Settings**

Switches to the "RBW" setting in the "Preset Settings" area of the "Measurement Settings" view. This softkey is only available in sweep mode "MANUAL". See [Overview of Measurement Settings](#) for details.

**Average ← Meas Settings**

Switches to the "Average" setting in the "Preset Settings" area of the "Measurement Settings" view. This softkey is only available in sweep mode "MANUAL". See [Overview of Measurement Settings](#) for details.

**Use FFT On/Off ← Meas Settings**

Switches to the "FFT Filters" setting in the "Preset Settings" area of the "Measurement Settings" view. This softkey is only available in sweep mode "MANUAL". See [Overview of Measurement Settings](#) for details.

**Verify On/Off**

toggles frequency and level verification on and off

Remote command:

```
[SENSe:]FREQuency:VERify[:STATe]
```

**Track Level On/Off**

toggles level tracking on and off

Remote command:

```
[SENSe:]POWer:TRACk
```

**Track Freq On/Off**

toggles frequency tracking on and off

Remote command:

`[SENSe:] FREQuency: TRACk`

**Preset Settings**

Presets the option back to the default settings

**Autoscale Y Axis**

Scales the Y axis according to the trace results

Remote command:

`DISPlay[:WINDow<n>]: TRACe<t>: Y[:SCALe]: AUTO` on page 72

**Ref Meas**

Performs a measurement and stores the trace as a reference trace in trace 3

Remote command:

`CONFigure: POWer: EXPeCted: RF`

### 2.1.3 FREQ key

This key opens the "General Settings" dialog box and jumps directly to the "Frequency" field (see "Frequency" on page 15). Furthermore, a submenu with the following soft-keys is displayed:

**Frequency**

Opens the "General Settings" dialog box and jumps directly to the "Frequency" field (see "Frequency" on page 15).

Remote command:

`[SENSe:] FREQuency: CENTer` on page 81

**X Axis Start**

Opens the "General Settings" dialog box and jumps directly to the "X Axis Start" field (see "X Axis Start" on page 17).

Remote command:

`[SENSe:] FREQuency: START` on page 81

**X Axis Stop**

Opens the "General Settings" dialog box and jumps directly to the "X Axis Stop" field (see "X Axis Stop" on page 17).

Remote command:

`[SENSe:] FREQuency: STOP` on page 81

### 2.1.4 SPAN key

This key opens the "Measurement Settings" dialog box and jumps directly to the "Start Offset" field (see "Start Offset" on page 22 "Span Settings" on page 22).

Furthermore, the "Frequency" submenu is displayed, see [Chapter 2.1.3, "FREQ key"](#), on page 29.

### 2.1.5 AMPT key

This key opens the "General Settings" dialog box and jumps directly to the "Level" field (see ["Level"](#) on page 15).

Furthermore, a submenu with the following softkeys is displayed:

#### Level

Opens the "General Settings" dialog box and jumps directly to the "Level" field (see ["Level"](#) on page 15).

Remote command:

[\[SENSe:\]POWer:RLEVel](#) on page 84

#### Autoscale Once

Activates or deactivates the "Autoscale Once" function (see ["Autoscale Once"](#) on page 17).

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:AUTO](#) on page 72

#### Y Axis Top

Opens the "General Settings" dialog box and jumps directly to the "Y Axis Top" field (see ["Y Axis Top"](#) on page 17).

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:RLEVel](#) on page 73

#### Y Axis Range

Opens the "General Settings" dialog box and jumps directly to the "Y Axis Range" field (see ["Y Axis Range"](#) on page 17).

Remote command:

[\[SENSe:\]POWer:RLEVel:VERify:TOLerance](#) on page 85

### 2.1.6 BW key

This key opens the "Measurement Settings" dialog box and jumps directly to the "Sweep Mode" field (see ["Sweep Mode Settings"](#) on page 21).

### 2.1.7 Softkeys of the Sweep Menu – SWEEP key (R&S FSV-K40)

#### Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "Sweep Count" on page 31).

Remote command:

INIT:CONT ON, see [INITiate<n>:CONTinuous](#) on page 75

### Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the [Sweep Count](#) softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:

INIT:CONT OFF, see [INITiate<n>:CONTinuous](#) on page 75

### Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

[\[SENSe:\] SWEEp:COUNT](#) on page 86

## 2.1.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K40)

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data. In this section, only the commands specific to the phase noise option are described. The following softkeys of the "Trace" menu are available for phase noise measurements:

Trace 1 / Trace 2 / Trace 3.....	32
L Clear Write.....	32
L Max Hold.....	32
L Min Hold.....	32
L Average.....	32
L View.....	33
L Blank.....	33
L Smoothing.....	33
Sweep Count.....	33
ASCII Trace Export.....	33
Decim Sep.....	34
Trace Math.....	34
L T1-T3->T1.....	34
L T2-T3->T2.....	34
L Trace Math Off.....	34

**Trace 1 / Trace 2 / Trace 3**

Selects the active trace (1, 2, 3) and opens the ""Trace"" submenu for the selected trace.

**Clear Write ← Trace 1 / Trace 2 / Trace 3**

Overwrite mode: the trace is overwritten by each sweep. This is the default setting. All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

**Max Hold ← Trace 1 / Trace 2 / Trace 3**

The maximum value is determined over several sweeps and displayed. The R&S FSV-A/FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

**Min Hold ← Trace 1 / Trace 2 / Trace 3**

The minimum value is determined from several measurements and displayed. The R&S FSV-A/FSV saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

**Average ← Trace 1 / Trace 2 / Trace 3**

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [Chapter 2.1.15, "Detector Overview"](#), on page 40).

This mode is not available for statistics measurements.


Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70



**View ← Trace 1 / Trace 2 / Trace 3**

The current contents of the trace memory are frozen and displayed.

**Note:** If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSVA/FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

**Blank ← Trace 1 / Trace 2 / Trace 3**

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 70

**Smoothing ← Trace 1 / Trace 2 / Trace 3**

Activates or deactivates smoothing for the selected trace according to the "[Trace Settings](#)" on page 17. If activated, the trace on the screen is smoothed by the smoothing percentage (see "[Smoothing](#)" on page 18). Toggling this softkey has an immediate effect on the active trace on display. Each trace (trace1, trace2 and trace3) can be smoothed/unsmoothed individually.

For details on smoothing, see "[Trace Settings](#)" on page 17.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:SMOothing\[:STATe\]](#) on page 71

**Sweep Count**

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

Remote command:

[\[SENSe:\]SWEep:COUNT](#) on page 86

**ASCII Trace Export**

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [Chapter 2.1.19, "ASCII File Export Format"](#), on page 45.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "Decim Sep" on page 34).

Remote command:

`FORMat:DEXPort:DSEParator` on page 75

`MMEMemory:STORE<n>:TRACe` on page 78

### Decim Sep

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

`FORMat:DEXPort:DSEParator` on page 75

### Trace Math

Opens the "Trace Math" submenu to select a trace math function. The following functions are available:

- "T1-T3->T1" on page 34
- "T2-T3->T2" on page 34

#### T1-T3->T1 ← Trace Math

Activates/Deactivates the trace math function that subtracts Trace3 from Trace1 and copies the results into Trace1.

To switch off the trace math, use the [Trace Math Off](#) softkey.

Remote command:

`CALCulate<n>:MATH[:EXpression][:DEFine]` on page 68

`CALCulate<n>:MATH:STATe` on page 68

#### T2-T3->T2 ← Trace Math

Activates/Deactivates the trace math function that subtracts Trace3 from Trace2 and copies the results into Trace2.

To switch off the trace math, use the [Trace Math Off](#) softkey.

Remote command:

`CALCulate<n>:MATH[:EXpression][:DEFine]` on page 68

`CALCulate<n>:MATH:STATe` on page 68

#### Trace Math Off ← Trace Math

Deactivates any previously selected trace math functions.

Remote command:

`CALC:MATH:STAT OFF`, see `CALCulate<n>:MATH:STATe` on page 68

### 2.1.9 Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K40)

The following table shows all softkeys available in the "Auto Set" menu. These functions automatically select the optimal settings for the current measurement.

Auto All.....	35
Auto Freq.....	35
Auto Level.....	35

#### Auto All

Performs all automatic settings.

- "Auto Freq" on page 35
- "Auto Level" on page 35

This function overwrites the "Level" and "Frequency" settings in the "Signal Settings", see "Signal Settings" on page 15.

Remote command:

[SENSe:]ADJust:ALL on page 79

#### Auto Freq

Defines the center frequency and the reference level automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

This function overwrites the "Frequency" setting in the "Signal Settings", see "Frequency" on page 15.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:

[SENSe:]ADJust:FREQuency on page 80

#### Auto Level

Defines the optimal reference level for the current measurement automatically.

This function overwrites the "Level" setting in the "Signal Settings", see "Level" on page 15.

Remote command:

[SENSe:]ADJust:LEVel on page 80

### 2.1.10 Softkeys of the Marker Menu – MKR key (R&S FSV-K40)

The MKR key opens a submenu for the marker settings. The following table shows all softkeys available in the "Marker" menu in "Phase Noise" mode.

Marker 1/2/3/4.....	36
Marker Norm/Delta.....	36
Marker Zoom (span > 0).....	36
All Marker Off.....	36

**Marker 1/2/3/4**

Selects the corresponding marker and activates it.

Marker 1 is always a normal marker. After Marker 2 to 4 have been switched on, they are delta markers that are referenced to Marker 1. These markers can be converted into markers with absolute value displays using the "Marker Norm/Delta" softkey. When Marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker. Pressing the "Marker 1" to "Marker 4" softkey again switches the corresponding marker off.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 64

`CALCulate<n>:MARKer<m>:X` on page 65

`CALCulate<n>:MARKer<m>:Y` on page 65

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 52

`CALCulate<n>:DELTamarker<m>:X` on page 52

`CALCulate<n>:DELTamarker<m>:Y` on page 53

**Marker Norm/Delta**

Changes the active marker to a normal (norm) or delta marker (with respect to marker 1).

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 64

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 52

**Marker Zoom (span > 0)**

Opens an edit dialog box to enter a display range for the zoom. The area around marker 1 is expanded accordingly and more details of the result can be seen. If no marker is activated, marker 1 is switched on and set on the largest signal.

The following sweep is stopped at the position of the reference marker. The frequency of the signal is counted and the measured frequency becomes the new center frequency. The zoomed display range is then configured and the new settings are used by the R&S FSVA/FSV for further measurements.

If the display has not yet been switched to the new frequency display range and you press the softkey, the procedure is aborted. If an instrument setting is changed during this operation, the procedure is also aborted.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:ZOOM` on page 63

**All Marker Off**

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

`CALCulate<n>:MARKer<m>:AOFF` on page 63

### 2.1.11 Softkeys of the Marker To Menu – MKR-> key (R&S FSV-K40)

The following table shows all softkeys available in the "Marker To" menu in "Phase Noise" mode (MKR-> key).

Select Marker.....	37
Marker to Trace.....	37

#### Select Marker

Opens a submenu to select one of the markers.

#### Marker to Trace

Opens an edit dialog box to enter the number of the trace on which the marker is to be placed.

Remote command:

CALCulate<n>:MARKer<m>:TRACe on page 64

### 2.1.12 Softkeys of the Lines Menu – LINES key (R&S FSV-K40)

The LINES key is used to configure limit and display lines. The "Lines" menu and the "Select Limit Line" dialog box are displayed. For details on the "Select Limit Line" dialog box refer to [Chapter 2.1.13, "Working with Limit Lines"](#), on page 38.

The following table shows all softkeys available in the "Lines" menu in Phase Noise mode (LINES key).

New.....	37
L Name.....	37
L Value.....	37
L Insert.....	38
L Delete.....	38
L Save.....	38
Edit.....	38
Delete.....	38

#### New

Displays the "Edit Limit Line" dialog box and the "Limit Line Editor" submenu. For details on creating a new limit line, see [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.

#### Name ← New

Switches to the "Name" field of the "Limit Line Editor". For details see [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.

Remote command:

CALCulate<n>:LIMit<k>:NAME on page 60

#### Value ← New

Switches to the "Frequency" field of the "Limit Line Editor". For details see [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.

**Insert ← New**

Inserts a row above the currently selected row in the Frequency/Limits table of the "Limit Line Editor". For details see [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.

**Delete ← New**

Deletes the currently selected row in the Frequency/Limits table of the "Limit Line Editor". For details see [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39. This action requires no confirmation.

**Save ← New**

Saves the currently displayed limit line definition. If data is missing or if some data is invalid, an error message is displayed.

**Edit**

Displays the "Edit Limit Line" dialog box in edit mode with all data of the selected limit line. For further details refer to [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.

**Delete**

Deletes the selected limit line.

Remote command:

`CALCulate<n>:LIMit<k>:DELete` on page 57

### 2.1.13 Working with Limit Lines

1. Press the LINES key.


The "Select Limit Line" dialog box is displayed. For each limit line, the following information is given:

Name	Unique ID of the limit line as defined in the "Name" field (see <a href="#">Chapter 2.1.14, "Editing Limit Lines"</a> , on page 39).
Domain	Frequency or time domain
Units	Unit of the y-axis
Limit	Type of limit (for phase noise: upper)
X Scaling	Absolute or relative scaling
Y Scaling	Absolute or relative scaling
Trace No.	Selected trace (defined in "Trace No." field, see <a href="#">Chapter 2.1.14, "Editing Limit Lines"</a> , on page 39)
Compatible	Indicates compatibility of the limit line to the current measurement settings
Check	Activates/Deactivates the limit check using the limit line for the trace. If a limit check is performed, the trace values are checked whether they exceed the limit values and the result ("Pass"/"Fail") is indicated in the display.
Comment	Optional description as defined in the "Comment" field (see <a href="#">Chapter 2.1.14, "Editing Limit Lines"</a> , on page 39).

- To define a new limit line, press the "New" softkey and enter the limit line characteristics as described in [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.
- To modify a limit line, select the limit line you want to edit and press the "Edit" softkey as described in [Chapter 2.1.14, "Editing Limit Lines"](#), on page 39.
- To save a limit line, press the "Save" softkey.  
If data is missing or if some data is invalid, an error message is displayed.
- To delete a limit line, select the limit line you want to edit and press the "Delete" softkey.

### 2.1.14 Editing Limit Lines

When you press the "New" softkey to define a new limit line (see "New" on page 37), or the "Edit" softkey to edit an existing limit line (see "Edit" on page 38), the "Edit Limit Line" dialog box and the "Limit Line Editor" submenu are displayed.

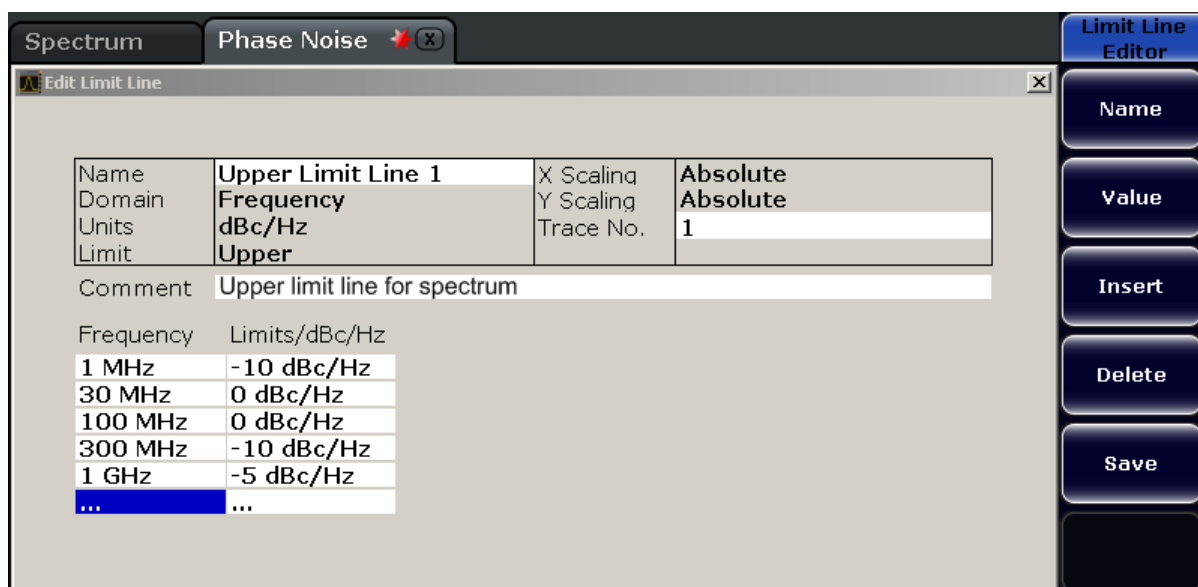

#### To create or edit a limit line:

- Enter the following settings as required:

<b>Name</b>	Name of the limit line to uniquely identify every limit line. Any combination of alphanumeric characters is allowed. If the entered name already exists, an error message is displayed with the request to alter the name.
<b>Trace No.</b>	Trace number for which the limit line is defined.
<b>Comment</b>	Description for the limit line. Any combination of alphanumeric characters is allowed.
<b>Frequency</b>	Receive frequencies (in Hz)
<b>Limit</b>	Limits for the receive frequencies (in dBc/Hz).

The "Frequency/Limits" table lists the limit values for specific frequency values. The list can contain up to 100 frequency/limit value pairs. Note that the frequency values must be in ascending order.

2. To insert a new frequency/limit entry, press the ENTER key after entering a limit, or press the "Insert" softkey.  
To delete a frequency/limit entry, select the entry and press the "Delete" softkey.
3. When you have entered all required values, press the "Save" softkey.  
If data is missing or if some data is invalid, an error message is displayed. Correct the input, if necessary.
4. In the "Select Limit Line" view, define whether the limit line is to be used to perform a limit check for the trace by activating or deactivating the "Check" option for the limit line.

#### Remote commands:

`CALCulate<n>:LIMit<k>:COMMeNt` on page 56

Specifies a description for the limit line.

`CALCulate<n>:LIMit<k>:CONTRol[:DATA]` on page 56

Specifies the receive frequencies.

`CALCulate<n>:LIMit<k>:LOWer[:DATA]` on page 58

`CALCulate<n>:LIMit<k>:UPPer[:DATA]` on page 61

Specifies the limits for the receive frequencies.

### 2.1.15 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S FSVA/FSV. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

The detectors of the R&S FSVA/FSV are implemented as pure digital devices. They collect signal power data within each measured point during a sweep. The default number of sweep points is 691. The following detectors are available:

*Table 2-1: Detector types*

Detector	Indicator	Function
Auto Peak	Ap	Determines the maximum and the minimum value within a measurement point (not available for SEM)
Positive Peak	Pk	Determines the maximum value within a measurement point
Negative Peak (min peak)	Mi	Determines the minimum value within a measurement point
RMS	Rm	Determines the root mean square power within a measurement point



Detector	Indicator	Function
Average	Av	Determines the linear average power within a measurement point
Sample	Sa	Selects the last value within a measurement point

The result obtained from the selected detector within a measurement point is displayed as the power value at this measurement point.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



#### Number of measured values

During a frequency sweep, the R&S FSVA/FSV increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



#### RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

### 2.1.16 Selecting the Appropriate Filter Type

All resolution bandwidths are realized with digital filters.

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth ( $VBW * 10 \times RBW$ ) for the amplitudes of pulses to be measured correctly.

The following filter types are available:

- Normal (3dB) (Gaussian) filters  
The Gaussian filters are set by default. The available bandwidths are specified in the data sheet.

- CISPR (6 dB) filters
- MIL Std (6 dB) filters  
Note that the 6 dB bandwidths are available only with option R&S FSV-K54.
- Channel filters  
For details see [Chapter 2.1.17, "List of Available RRC and Channel Filters"](#), on page 42 .  
Channel filters do not support FFT mode.
- RRC filters  
For details see [Chapter 2.1.17, "List of Available RRC and Channel Filters"](#), on page 42 .  
RRC filters do not support FFT mode.
- 5-Pole filters  
The available bandwidths are specified in the data sheet.  
5-Pole filters do not support FFT mode.

### 2.1.17 List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth. For RRC filters, the fixed roll-off factor (a) is also indicated.

**Table 2-2: Filter types**

Filter Bandwidth	Filter Type	Application
100 Hz	CFILter	
200 Hz	CFILter	
300 Hz	CFILter	
500 Hz	CFILter	
1 kHz	CFILter	
1.5 kHz	CFILter	
2 kHz	CFILter	
2.4 kHz	CFILter	SSB
2.7 kHz	CFILter	
3 kHz	CFILter	
3.4 kHz	CFILter	
4 kHz	CFILter	DAB, Satellite
4.5 kHz	CFILter	
5 kHz	CFILter	
6 kHz	CFILter	
6 kHz, a=0.2	RRC	APCO

## Instrument Functions of Phase Noise Measurements (R&amp;S FSV-K40)

Filter Bandwidth	Filter Type	Application
7.5 kHz	CFILter	
8.5 kHz	CFILter	ETS300 113 (12.5 kHz channels)
9 kHz	CFILter	AM Radio
10 kHz	CFILter	
12.5 kHz	CFILter	CDMAone
14 kHz	CFILter	ETS300 113 (20 kHz channels)
15 kHz	CFILter	
16 kHz	CFILter	ETS300 113 (25 kHz channels)
18 kHz, a=0.35	RRC	TETRA
20 kHz	CFILter	
21 kHz	CFILter	PDC
24.3 kHz, a=0.35	RRC	IS 136
25 kHz	CFILter	APCO 25-P2
30 kHz	CFILter	CDPD, CDMAone
50 kHz	CFILter	
100 kHz	CFILter	
150 kHz	CFILter	FM Radio
192 kHz	CFILter	PHS
200 kHz	CFILter	GSM
300 kHz	CFILter	
500 kHz	CFILter	J.83 (8-VSB DVB, USA); RF ID 14333
1 MHz	CFILter	CDMAone
1.228 MHz	CFILter	CDMAone
1.28 MHz, a=0.22	RRC	TD-SCDMA
1.5 MHz	CFILter	DAB
2 MHz	CFILter	
3 MHz	CFILter	
3.75 MHz	CFILter	
3.84 MHz, a=0.22	RRC	W-CDMA 3GPP
4.096 MHz, a=0.22	RRC	W-CDMA NTT DCoMo

Filter Bandwidth	Filter Type	Application
5 MHz	CFILter	
20 MHz	CFILter	
28 MHz	CFILter	
40 MHz	CFILter	

### 2.1.18 Trace Mode Overview

The traces can be activated individually for a measurement or frozen after completion of a measurement. Traces that are not activate are hidden. Each time the trace mode is changed, the selected trace memory is cleared.

The R&S FSVA/FSV offers 6 different trace modes:

#### Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

#### Max Hold

The maximum value is determined over several sweeps and displayed. The R&S FSVA/FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

#### Min Hold

The minimum value is determined from several measurements and displayed. The R&S FSVA/FSV saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

### Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [Chapter 2.1.15, "Detector Overview"](#), on page 40).


This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

### View

The current contents of the trace memory are frozen and displayed.

**Note:** If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSVA/FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 70

### Blank

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 70

## 2.1.19 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on measurement) which are also separated by a semicolon.



### Exporting a single trace vs exporting all traces

Note that the file containing the trace data has a slightly different structure when you export all traces compared to exporting a single trace only. The differences are indicated in the tables below.

## Instrument Functions of Phase Noise Measurements (R&amp;S FSV-K40)

<b>Blue font:</b> Information provided when you export a single trace	
<b>Green font:</b> Information provided when you export all traces	
<b>Black font:</b> Information provided regardless of the export mode	
<b>Header</b>	
Type;<instrument_model>;	Instrument model
Version;1.00;	Firmware version
Date;01. Jan 3000;	Date of data set storage
Mode;Receiver;	Application
Start;150000.000000;Hz	Start frequency of the scan
Stop;100000000.000000;Hz;	Stop frequency of the scan
X-Axis;LIN;	Scale of the x-axis
Detector;Average;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;dBμV;	Unit of the y-axis
Scan Count;1;	Scan count
Transducer;,,,,,;	Transducer information

<b>Data section (scan ranges)</b>	
Scan 1:	
Start;150000.000000;Hz;	Start frequency of the scan range
Stop;29998500.000000;Hz;	Stop frequency of the scan range
Step;4500.000000;Hz;	Frequency stepsize applied in the scan range
RBW;9000.000000;Hz;	Measurement bandwidth applied in the scan range
Meas Time;0.001000;s;	Measurement time in the scan range
Auto Ranging;OFF;	State of the auto ranging feature
RF Att;10.000000;dB;	Attenuation applied in the scan range
Auto Preamp;OFF; Preamp;0.000000;dB;	Preamplifier information for the scan range
RF Input;1;	RF input used in the scan range
Scan 2:	
(...)	

<b>Data section (traces)</b>	
Trace 1:	
Trace Mode;CLR/WRITE;	Trace mode
Detector;MAX PEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Values;1343;	Number of measurement points
150000.000000;3.541122; 154500.000000;5.776306;[...]	String of results
Trace 2:	
(...)	

## Instrument Functions of Phase Noise Measurements (R&amp;S FSV-K40)

<b>Blue font:</b> Information provided when you export a single trace	
<b>Green font:</b> Information provided when you export all traces	
<b>Black font:</b> Information provided regardless of the export mode	
<b>Header</b>	
Type;<instrument_model>;	Instrument model
Version;1.00;	Firmware version
Date;01. Jan 3000;	Date of data set storage
Mode;Analyzer;	Application
Center Freq;100000000.000000;	Center frequency
Freq Offset;0.000000;Hz;	Frequency offset
Span;10000000000.000000;Hz;	Frequency span
X-Axis;LIN;	Scale of the x-axis
Start;150000.000000;Hz;	Start frequency
Stop;2500000.000000;Hz;	Stop frequency
Ref Level;97.000000;dBμV;	Reference level
Level Offset;0.000000;Hz;	Reference level offset
Ref Position;100.000000;%;	Reference position
Y-Axis;LOG;	Scale of the y-axis
Level Range;100.000000;dB;	Range of the y-axis
Rf Att;10.000000;dB;	RF attenuation
RBW;3000000.000000;Hz;	Resolution bandwidth
VBW;300000.000000;Hz;	Video bandwidth
SWT;0.002000;s;	Sweep time
Trace mode;CLR/WRITE;	Trace mode
Detector;AUTOPEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Preamplifier;OFF;	State of the preamplifier
Transducer;OFF;	Transducer information
Sweep Count;0;	Sweep / average count

<b>Data section (traces)</b>	
Trace 1:	
Trace Mode;CLR/WRITE;	Trace mode
Detector;MAX PEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Preamplifier;OFF;	State of the preamplifier
Transducer;OFF;	Transducer information
Values;691;	Number of measurement points
150000.000000;3.541122; 154500.000000;5.776306;[...]	String of results
Trace 2:	
(...)	

## 2.2 Remote Control

This section specifies the remote control commands specific to the R&S FSV-K40 option. Only those commands provided for this option are specified.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

2.2.1	Notation.....	49
2.2.2	CALCulate subsystem.....	51
2.2.2.1	CALCulate:DELTa marker subsystem.....	51
2.2.2.2	CALCulate:EVALuation Subsystem .....	53
2.2.2.3	CALCulate:LIM subsystem.....	55
2.2.2.4	Programming Example for Limit Lines.....	62
2.2.2.5	CALCulate:MARker subsystem.....	63
2.2.2.6	CALCulate:SNOise Subsystem.....	66
2.2.2.7	Other CALCulate commands.....	68
2.2.3	CONFigure Subsystem.....	69
2.2.4	DISPlay Subsystem.....	70
2.2.5	FETCh Subsystem.....	74
2.2.6	FORMat subsystem.....	75
2.2.7	INITiate subsystem.....	75
2.2.8	INPut Subsystem.....	77
2.2.9	INSTrument subsystem.....	78
2.2.10	MMEMory subsystem.....	78
2.2.11	SENSE Subsystem.....	79
2.2.12	STATus Subsystem.....	87
2.2.13	Status Reporting System.....	91
2.2.13.1	STATus:OPERation Register.....	92
2.2.13.2	STATus:QUEStionable Register.....	93
2.2.13.3	STATus:QUEStionable:LIMit Register.....	94
2.2.13.4	STATus:QUEStionable:PNOise Register.....	94
2.2.13.5	STATus:QUEStionable:POWER Register.....	95
2.2.14	TRACe subsystem.....	96
2.2.15	Other Commands Referenced in this Document.....	96



## 2.2.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

### Individual Description

The individual description contains the complete notation of the command. An example for each command, the \*RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEMOD	analog demodulation (option R&S FSV-K7)
BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)
IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (option R&S FSV-K7S)
SPECM	Spectrogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)
WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)



The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

### Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

### Special Characters

	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.
--	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1...4>:]AVERage<1...4>:TYPE VIDEo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.
----	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

{}	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.
----	---------------------------------------------------------------------------------------------------------------

### Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<...>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

#### <Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

**<numeric\_value> <num>**

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- **MAXimum**: This keyword sets the parameter to the largest possible value.
- **MINimum**: This keyword sets the parameter to the smallest possible value.
- **DEFault**: This keyword is used to reset the parameter to its default value.
- **UP**: This keyword increments the parameter value.
- **DOWN**: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

**<arbitrary block program data>**

This keyword is provided for commands the parameters of which consist of a binary data block.

**2.2.2 CALCulate subsystem**

2.2.2.1	CALCulate:DELTamarker subsystem.....	51
2.2.2.2	CALCulate:EVALuation Subsystem .....	53
2.2.2.3	CALCulate:LIM subsystem.....	55
2.2.2.4	Programming Example for Limit Lines.....	62
2.2.2.5	CALCulate:MARker subsystem.....	63
2.2.2.6	CALCulate:SNOise Subsystem.....	66
2.2.2.7	Other CALCulate commands.....	68

**2.2.2.1 CALCulate:DELTamarker subsystem**

CALCulate<n>:DELTamarker<m>:AOFF.....	52
CALCulate<n>:DELTamarker<m>[:STATE].....	52
CALCulate<n>:DELTamarker<m>:TRACe.....	52
CALCulate<n>:DELTamarker<m>:X.....	52
CALCulate<n>:DELTamarker<m>:Y.....	53

---

**CALCulate<n>:DELTamarker<m>:AOFF**

This command turns all active delta markers off.

**Suffix:**

<n>                      Selects the measurement window.  
<m>                      Selects the marker.

**Example:**              `CALC:DELT:AOff`  
Switches off all delta markers.

---

**CALCulate<n>:DELTamarker<m>[:STATe] <State>**

This command turns delta markers on and off.

If the corresponding marker was a normal marker, it is turned into a delta marker.

No suffix at DELTmarker turns on delta marker 1.

**Suffix:**

<n>                      Selects the measurement window.  
<m>                      Selects the marker.

**Parameters:**

<State>                ON | OFF  
\*RST:                OFF

**Example:**              `CALC:DELT1 ON`  
Switches marker 1 to delta marker mode.

**Manual operation:**    See "[Marker 1/2/3/4](#)" on page 36  
See "[Marker Norm/Delta](#)" on page 36

---

**CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>**

This command selects the trace a delta marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

**Suffix:**

<n>                      Selects the measurement window.  
<m>                      Selects the marker.

**Parameters:**

<TraceNumber>        **1 ... 6**  
Trace number the marker is positioned on.

**Example:**              `CALC:DELT3:TRAC 2`  
Assigns delta marker 3 to trace 2.

---

**CALCulate<n>:DELTamarker<m>:X <Position>**

This command positions a delta marker on a particular coordinate on the x-axis.

The position is an absolute value.

**Suffix:**

<n> Selects the measurement window.

<m> Selects the marker.

**Parameters:**

<Position> 0 to maximum frequency or sweep time

**Example:**

CALC:DELT:X?

Outputs the absolute frequency/time of delta marker 1.

**Manual operation:** See "[Marker 1/2/3/4](#)" on page 36

### CALCulate<n>:DELTamarker<m>:Y

This command queries the measured value of the selected delta marker in the specified window, or defines its position on the y-axis. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

The query result is output in dBc/Hz.

**Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

**Example:**

INIT:CONT OFF

Switches to single sweep mode.

INIT;\*WAI

Starts a sweep and waits for its end.

CALC:DELT2 ON

Switches on delta marker 2.

CALC:DELT2:Y?

Outputs measurement value of delta marker 2.

**Mode:** PHN

**Manual operation:** See "[Marker 1/2/3/4](#)" on page 36

#### 2.2.2.2 CALCulate:EVALuation Subsystem

CALCulate<n>:EVALuation[:STATe].....	54
CALCulate<n>:EVALuation:START.....	54
CALCulate<n>:EVALuation:STOP.....	54

**CALCulate<n>:EVALuation[:STATe] <State>**

This command specifies whether residual noise values are calculated over the entire trace or within a specified frequency range.

**Suffix:**

<n> 1...4  
window

**Parameters:**

<State> ON (1) | OFF (0)

**ON (1)**

The residual noise values are calculated over the range specified by [CALCulate<n>:EVALuation:START](#) on page 54 and [CALCulate<n>:EVALuation:STOP](#) on page 54

**OFF (0)**

The results are calculated over the entire trace.

\*RST: 0

**Example:**

CALC:EVAL 0

Specifies that residual noise is calculated over the entire trace.

**Mode:**

PHN

**Manual operation:** See "[Residual Calculations Use Meas Settings](#)" on page 19

**CALCulate<n>:EVALuation:START <Frequency>**

This command specifies the start frequency for residual noise calculation when [CALCulate<n>:EVALuation\[:STATe\]](#) on page 54 is switched OFF.

**Suffix:**

<n> 1...4  
window

**Parameters:**

<Frequency> Range: 1 Hz to 3 GHz  
\*RST: 1 kHz

**Example:**

CALC:EVAL:START 1MHZ

Specifies that residual noise is calculated starting from 1 MHz

**Mode:**

PHN

**Manual operation:** See "[Eval From](#)" on page 19

**CALCulate<n>:EVALuation:STOP <Frequency>**

This command specifies the stop frequency for residual noise calculation when [CALCulate<n>:EVALuation\[:STATe\]](#) on page 54 is switched ON. This command has no effect if [CALCulate<n>:EVALuation\[:STATe\]](#) on page 54 is switched OFF.

**Suffix:**

<n> 1...4  
window

**Parameters:**

<Frequency> Range: 3 Hz to 10 GHz  
\*RST: 1 MHz

**Example:**

CALC:EVAL:STOP 1 MHZ  
Specifies that residual noise is calculated up to 1 MHz.

**Mode:** PHN

**Manual operation:** See "To" on page 19

**2.2.2.3 CALCulate:LIM subsystem**

The CALCulate:LIMit subsystem consists of commands for the limit lines and the corresponding limit checks. The limit lines can be defined as upper or lower limit lines. The number of X- and Y-values must be identical.

Up to 8 limit lines can be defined at the same time (LIMIT1 to LIMIT8) for each window. Each limit line can be assigned a name. An explanatory comment can also be assigned. For details see [Chapter 2.1.13, "Working with Limit Lines"](#), on page 38.

A short programming example for limit lines is provided in [Chapter 2.2.2.4, "Programming Example for Limit Lines"](#), on page 62.

CALCulate<n>:LIMit<k>:CLEar[:IMMediate].....	55
CALCulate<n>:LIMit<k>:COMMeNt.....	56
CALCulate<n>:LIMit<k>:CONTRol[:DATA].....	56
CALCulate<n>:LIMit<k>:CONTRol:SHIFt.....	57
CALCulate<n>:LIMit<k>:COPIY.....	57
CALCulate<n>:LIMit<k>:DELeTe.....	57
CALCulate<n>:LIMit<k>:FAIL?.....	58
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	58
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	59
CALCulate<n>:LIMit<k>:LOWer:STATe.....	59
CALCulate<n>:LIMit<k>:NAME.....	60
CALCulate<n>:LIMit<k>:STATe.....	60
CALCulate<n>:LIMit<k>:TRACe.....	60
CALCulate<n>:LIMit<k>:UPPer[:DATA].....	61
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	61
CALCulate<n>:LIMit<k>:UPPer:STATe.....	61

**CALCulate<n>:LIMit<k>:CLEar[:IMMediate]**

This command deletes the result of the current limit check (stored in the STATus:QUEStionable:LIMit event register) for the selected limit line.

**Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> 1...8  
limit line

**Example:** CALC:LIM:CLE  
Deletes the result of the limit check.

**Mode:** PHN

#### CALCulate<n>:LIMit<k>:COMMent <Comment>

This command defines a comment for the selected limit line in all windows.

##### Suffix:

<n> irrelevant

<k> Selects the limit line.

##### Parameters:

<Comment> String containing the comment. The maximum number of characters the string may contain is 40.

**Example:** CALC:LIM5:COMM 'Upper limit for spectrum'  
Defines the comment for limit line 5.

#### CALCulate<n>:LIMit<k>:CONTrol[:DATA] <LimitLinePoints>

This command defines the horizontal definition points of a lower limit line.

##### Suffix:

<n> Selects the measurement window.

<k> 1...8  
Selects the limit line.

##### Parameters:

<LimitLinePoints> Variable number of x-axis values.  
Note that the number of horizontal values has to be the same as the number of vertical values set with [CALCulate<n>:LIMit<k>:LOWer\[:DATA\]](#) or [CALCulate<n>:LIMit<k>:UPPer\[:DATA\]](#). If not, the R&S FSV/FSVA either adds missing values or ignores surplus values.

\*RST: - (CALC:LIM is set to OFF)

**Example:** CALC:LIM2:CONT 1 MHz,30 MHz,100 MHz,300 MHz,1 GHz  
Defines 5 reference values for the x-axis of limit line 2.  
CALC:LIM2:CONT?  
Outputs the reference values for the x-axis of limit line 2 separated by a comma.



**CALCulate<n>:LIMit<k>:CONTrol:SHIFt <XValue>**

This command moves a limit line by the indicated value in x direction. The line is shifted by modifying the individual x values.

**Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> 1...8  
limit line

**Parameters:**

<XValue> **<numeric\_value>**  
\*RST: - (CALC:LIM is set to OFF)

**Example:**

CALC:LIM2:CONT:SHIF 50 kHz  
Shifts all reference values of limit line 2 by 50 kHz.

**Mode:** PHN

**CALCulate<n>:LIMit<k>:COPY <Line>**

This command copies a limit line.

**Suffix:**

<n> irrelevant

<k> Selects the limit line.

**Parameters:**

<Line> **1 to 8**  
number of the new limit line

**<name>**  
String containing the name of the limit line.

**Example:**

CALC:LIM1:COPY 2  
Copies limit line 1 to line 2.  
CALC:LIM1:COPY 'FM2'  
Copies limit line 1 to a new line named FM2.

**CALCulate<n>:LIMit<k>:DELete**

This command deletes a limit line.

**Suffix:**

<n> irrelevant

<k> Selects the limit line.

**Example:**

CALC:LIM1:DEL  
Deletes limit line 1.

**Usage:** Event

**Manual operation:** See "Delete" on page 38

---

### CALCulate<n>:LIMit<k>:FAIL?

This command queries the result of a limit check.

Note that for SEM measurements, the limit line suffix <k> is irrelevant, as only one specific SEM limit line is checked for the currently relevant power class.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

**Suffix:**

<n> irrelevant

<k> limit line

**Return values:**

<Result>      **0**  
                   PASS  
                   **1**  
                   FAIL

**Example:**

INIT; \*WAI

Starts a new sweep and waits for its end.

CALC:LIM3:FAIL?

Queries the result of the check for limit line 3.

**Usage:**

Query only

---

### CALCulate<n>:LIMit<k>:LOWer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of a lower limit line.

If the measured values are smaller than the LOWer limit line, the limit check is violated.

**Suffix:**

<n> irrelevant

<k> 1...8  
 Selects the limit line.

**Parameters:**

<LimitLinePoints> Variable number of x-axis values.  
 Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:LIMit<k>:CONTrol[:DATA]`. If not, the R&S FSV/FSV either adds missing values or ignores surplus values.

\*RST: (LIMit:STATe is set to OFF)

**Example:** `CALC:LIM2:LOW -30,-40,-10,-40,-30`  
 Defines 5 lower limit values for limit line 2 in the preset unit.  
`CALC:LIM2:LOW?`  
 Outputs the lower limit values of limit line 2 separated by a comma.

#### **CALCulate<n>:LIMit<k>:LOWer:SHIFt <YValue>**

This command moves a limit line by the indicated value in y direction. The line is shifted by modifying the individual y values.

##### **Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<k> 1...8  
 limit line

##### **Parameters:**

<YValue> **<numeric\_value>**  
 \*RST: - (CALC:LIM is set to OFF)

**Example:** `CALC:LIM2:LOW:SHIF 20 dB`  
 Shifts all Y-values of limit line 2 by 20 dB.

**Mode:** PHN

#### **CALCulate<n>:LIMit<k>:LOWer:STATe <State>**

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with `CALCulate<n>:LIMit<k>:NAME`.

The limit check is activated separately with `CALCulate<n>:LIMit<k>:STATe`. The result of the limit check can be queried with `CALCulate<n>:LIMit<k>:FAIL?`.

##### **Suffix:**

<n> irrelevant

<k> 1...8  
 Selects the limit line.

##### **Parameters:**

<State> ON | OFF  
 \*RST: OFF

**Example:** `CALC:LIM4:LOW:STAT ON`  
 Switches on limit line 4 (lower limit).

**CALCulate<n>:LIMit<k>:NAME <Name>**

This command selects a limit line that already exists or defines a name for a new limit line.

**Suffix:**

<n> irrelevant  
 <k> 1...8 (NF: 1...6)  
 Selects the limit line.

**Parameters:**

<Name> String containing the limit line name.  
 \*RST: REM1 to REM8 for lines 1 to 8

**Example:**

CALC:LIM1:NAME 'FM1'  
 Assigns the name FM1 to limit line 1.

**Manual operation:** See "Name" on page 37

**CALCulate<n>:LIMit<k>:STAtE <State>**

This command turns the limit check on and off.

To query the limit check result, use `CALCulate<n>:LIMit<k>:FAIL?`.

**Suffix:**

<n> irrelevant  
 <k> Selects the limit line.

**Parameters:**

<State> ON | OFF  
 \*RST: OFF

**Example:**

CALC:LIM:STAT ON  
 Switches on the limit check for limit line 1.

**CALCulate<n>:LIMit<k>:TRACe <Number>**

This command assigns a limit line to the selected trace.

**Suffix:**

<n> irrelevant  
 <k> 1...8  
 limit line

**Parameters:**

<Number> 1...6  
 Trace number  
 \*RST: 1

**Example:**

CALC:LIM1:TRAC 2  
 Assigns the limit line 1 to trace 2.

**Mode:** PHN

---

**CALCulate<n>:LIMit<k>:UPPer[:DATA] <LimitLinePoints>**

This command defines the vertical definition points of an upper limit line.  
If the measured values exceed the UPPer limit line, the limit is violated.

**Suffix:**

<n> irrelevant  
<k> 1...8  
Selects the limit line.

**Parameters:**

<LimitLinePoints> Variable number of x-axis values.  
Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:LIMit<k>:CONTRol[:DATA]`. If not, the R&S FSV/FSV either adds missing values or ignores surplus values.  
\*RST: (LIMit:STATe is set to OFF)

**Example:**

```
CALC:LIM2:UPP -10,0,0,-10,-5
```

Defines 5 upper limit values for limit line 2 in the preset unit.

```
CALC:LIM2:UPP?
```

Outputs the upper limit values for limit line 2 separated by a comma.

---

**CALCulate<n>:LIMit<k>:UPPer:SHIFt <YValue>**

This command moves a limit line by the indicated value in y direction. The line is shifted by modifying the individual y values.

**Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.  
<k> 1...8  
limit line

**Parameters:**

<YValue> <numeric\_value>  
\*RST: - (CALC:LIM is set to OFF)

**Example:**

```
CALC:LIM2:UPP:SHIF 20 dB
```

Shifts all Y-values of limit line 2 by 20 dB.

**Mode:** PHN

---

**CALCulate<n>:LIMit<k>:UPPer:STATe <State>**

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with `CALCulate<n>:LIMit<k>:NAME`.

The limit check is activated separately with `CALCulate<n>:LIMit<k>:STATe`. The result of the limit check can be queried with `CALCulate<n>:LIMit<k>:FAIL?`.

**Suffix:**

<n>                    irrelevant  
 <k>                    1...8  
                       Selects the limit line.

**Parameters:**

<State>                ON | OFF  
 \*RST:                 OFF

**Example:**

`CALC:LIM4:UPP:STAT ON`  
 Switches on limit line 4 (upper limit).

### 2.2.2.4 Programming Example for Limit Lines

The following example describes a simple limit line scenario via remote control.

**Programming task:**

Definition and use of a new limit line 5 for a trace in the Noise Figure window with the following features:

- upper limit line
- 5 reference values:
  - 126 MHz/-40 dB
  - 127 MHz/-40 dB
  - 128 MHz/-20 dB
  - 129 MHz/-40 dB
  - 130 MHz/-40 dB

**Definition of the line:**

Defining the name:

`CALC:LIM5:NAME 'TEST1'`

Entering the comment:

`CALC:LIM5:COMM 'Upper limit line'`

Associated trace in screen A:

`CALC:LIM5:TRAC 2`

Defining the X-axis values:

`CALC:LIM5:CONT 126MHZ, 127MHZ, 128MHZ, 129MHZ, 130MHZ`

Defining the y values:

```
CALC:LIM5:UPP -40, -40, -30, -40, -40
```

### Switching on and evaluating the line

Switching on the line

```
CALC:LIM5:UPP:STAT ON
```

Switching on the limit

```
CALC:LIM5:STAT ON
```

Starting a new measurement with synchronization:

```
INIT;*WAI
```

Querying the limit check result:

```
CALC:LIM5:FAIL?
```

### 2.2.2.5 CALCulate:MARKer subsystem

CALCulate<n>:MARKer<m>:AOFF.....	63
CALCulate<n>:MARKer<m>:FUNCTION:ZOOM.....	63
CALCulate<n>:MARKer<m>[:STATE].....	64
CALCulate<n>:MARKer<m>:TRACe.....	64
CALCulate<n>:MARKer<m>:X.....	65
CALCulate<n>:MARKer<m>:Y.....	65

---

#### CALCulate<n>:MARKer<m>:AOFF

This command all markers off, including delta markers and marker measurement functions.

##### Suffix:

<n>	Selects the measurement window.
<m>	depends on mode irrelevant

##### Example:

```
CALC:MARK:AOFF
```

Switches off all markers.

##### Usage:

Event

**Manual operation:** See "All Marker Off" on page 36

---

#### CALCulate<n>:MARKer<m>:FUNCTION:ZOOM <Range>

This command defines the range to be zoomed around marker 1. Marker 1 is activated first, if necessary.

The subsequent frequency sweep is stopped at the marker position and the frequency of the signal is counted. This frequency becomes the new center frequency, and the zoomed span is set.

Note that you should perform a complete measurement with synchronization to the end of the measurement. This is only possible for single sweeps.

**Suffix:**

<n> Selects the measurement window.

<m> Selects the marker.

**Parameters:**

<Range> <numeric\_value>

**Example:**

```
INIT:CONT OFF
Switches to single sweep mode
CALC:MARK:FUNC:ZOOM 1kHz;*WAI
Activates zooming and waits for its end.
```

**Manual operation:** See "[Marker Zoom \(span > 0\)](#)" on page 36

**CALCulate<n>:MARKer<m>[:STATe] <State>**

This command turns markers on and off.

If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

**Suffix:**

<n> Selects the measurement window.

<m> depends on mode  
Selects the marker.

**Parameters:**

<State> ON | OFF  
\*RST: OFF

**Example:**

```
CALC:MARK3 ON
Switches on marker 3 or switches to marker mode.
```

**Manual operation:** See "[Marker 1/2/3/4](#)" on page 36  
See "[Marker Norm/Delta](#)" on page 36

**CALCulate<n>:MARKer<m>:TRACe <Trace>**

This command selects the trace a marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

If necessary, the corresponding marker is switched on prior to the assignment.

**Suffix:**

<n> Selects the measurement window.

<m> depends on mode  
Selects the marker.



**Parameters:**

<Trace>                    **1 ... 6**  
Trace number the marker is positioned on.

**Example:**

`CALC:MARK3:TRAC 2`  
Assigns marker 3 to trace 2.

**Manual operation:** See "[Marker to Trace](#)" on page 37

**CALCulate<n>:MARKer<m>:X <Position>**

This command positions a marker on a particular coordinate on the x-axis.

**Suffix:**

<n>                         Selects the measurement window.

<m>                         Selects the marker.

**Parameters:**

<Position>                Numeric value that defines the marker position on the x-axis.  
The unit is either Hz (frequency domain) or s (time domain) or dB (statistics).  
Range:                    The range depends on the current x-axis range.

**Example:**

`CALC:MARK2:X 1.7MHz`  
Positions marker 2 to frequency 1.7 MHz.

**Manual operation:** See "[Marker 1/2/3/4](#)" on page 36

**CALCulate<n>:MARKer<m>:Y <YValue>**

This command queries the measured value of the selected marker in the window specified by the suffix <n>, or defines its y-value. The corresponding marker is activated before or switched to marker mode, if necessary.

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed after the change of a parameter and before the query of the Y value. This is only possible in single sweep mode.

The y-value is defined in dBc/Hz.

**Suffix:**

<n>                         window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m>                         marker number

**Parameters:**

<YValue>                 numeric value

**Return values:**

<Result>                 The measured value of the selected marker is returned.

**Example:**           INIT:CONT OFF  
                           Switches to single sweep mode.  
                           CALC:MARK2 ON  
                           Switches marker 2.  
                           INIT;\*WAI  
                           Starts a sweep and waits for the end.  
                           CALC:MARK2:Y?  
                           Outputs the measured value of marker 2.

**Mode:**               PHN

**Manual operation:** See "Marker 1/2/3/4" on page 36

### 2.2.2.6 CALCulate:SNOise Subsystem

The CALCulate:SNOise subsystem allows spot noise measurement points to be set, and results returned.

Note that for all spot noise commands the suffix for the CALCulate command must be 1.

CALCulate<n>:SNOise<m>:AOFF.....	66
CALCulate<n>:SNOise<m>:STATe.....	66
CALCulate<n>:SNOise<m>:X.....	67
CALCulate<n>:SNOise<m>:Y?.....	67

---

#### CALCulate<n>:SNOise<m>:AOFF

Switches off all active spot noise markers in the specified measurement window.

**Suffix:**

<n>                   1  
                           window

<m>                   1...4  
                           spot noise marker

**Example:**           CALC1:SNO:AOFF  
                           Switches off all spot noise markers in the screen A window.

**Mode:**               PHN

**Manual operation:** See "Enable" on page 20

---

#### CALCulate<n>:SNOise<m>:STATe <State>

Switches on or off the currently selected spot noise marker in the selected measurement window. If no indication is made, marker 1 is selected automatically.

**Suffix:**

<n>                   1  
                           window

<m> 1...4  
spot noise marker

**Parameters:**

<State> ON | OFF  
\*RST: 1

**Example:**

CALC1:SNO1:STATE ON  
Switches the screen A marker ON.

**Mode:** PHN

**Manual operation:** See "Enable" on page 20

**CALCulate<n>:SNOise<m>:X <Frequency>**

Positions the selected slot noise marker to the indicated frequency

**Suffix:**

<n> 1  
window

<m> 1...4  
spot noise marker

**Parameters:**

<Frequency> <numeric value>

**Example:**

CALC1:SNO:X 2MHz  
Positions spot noise marker 1 in screen A to time 2 MHz.

**Mode:** PHN

**Manual operation:** See "Offset Freq 1,2,3,4" on page 20

**CALCulate<n>:SNOise<m>:Y?**

Returns the measured spot noise marker result in the selected measurement window. The units for this command are dBc/Hz.

**Suffix:**

<n> 1  
window

<m> 1...4  
spot noise marker

**Return values:**

<Result> <numeric value>

**Example:**

CALC1:SNO:Y?  
Outputs the measured value of spot noise marker 1 in screen A.

**Usage:** Query only

**Mode:** PHN

### 2.2.2.7 Other CALCulate commands

CALCulate<n>:MATH[:EXpression][:DEFine].....	68
CALCulate<n>:MATH:STATe.....	68

---

#### CALCulate<n>:MATH[:EXpression][:DEFine] <Expression>

This command defines the mathematical expression for relating traces to trace1.

##### Suffix:

<n> irrelevant

##### Parameters:

<Expression> (TRACe1-TRACe2) | (TRACe1-TRACe3) | (TRACe1-TRACe4) |  
(TRACe1-TRACe5) | (TRACe1-TRACe6)

##### (TRACe1-TRACe2)

Subtracts trace 2 from trace 1.

##### (TRACe1-TRACe3)

Subtracts trace 3 from trace 1.

##### (TRACe1-TRACe4)

Subtracts trace 4 from trace 1.

##### (TRACe1-TRACe5)

Subtracts trace 5 from trace 1.

##### (TRACe1-TRACe6)

Subtracts trace 6 from trace 1.

##### Example:

CALC1:MATH (TRACe1 - TRACe2)

Selects the subtraction of trace 2 from trace 1.

##### Manual operation:

See "T1-T3->T1" on page 34

See "T2-T3->T2" on page 34

---

#### CALCulate<n>:MATH:STATe <State>

This command switches the mathematical relation of traces on or off.

##### Suffix:

<n> irrelevant

##### Parameters:

<State> ON | OFF  
\*RST: OFF

##### Example:

CALC:MATH:STAT ON

Switches on the trace mathematics.

##### Manual operation:

See "T1-T3->T1" on page 34

See "T2-T3->T2" on page 34

See "Trace Math Off" on page 34

### 2.2.3 CONFigure Subsystem

The `CONFigure` subsystem contains commands for configuring complex measurement tasks. The `CONFigure` subsystem is closely linked to the functions of the `FETCH` subsystem, where the measurement results of the measurements are queried.

<code>CONFigure:POWer:AUTO</code> .....	69
<code>CONFigure:POWer:EXPEcted:RF</code> .....	69
<code>CONFigure:REFMeas ONCE</code> .....	69

---

#### `CONFigure:POWer:AUTO` <State>

Switches on or off automatic power level detection. When switched on, power level detection is performed at the start of each measurement sweep.

##### Parameters:

<State>                    ON | OFF  
                               \*RST:        1

**Example:**                `CONF:POW:AUTO 1`  
 The FSV-K40 option detects the input power level automatically

**Mode:**                    PHN

---

#### `CONFigure:POWer:EXPEcted:RF` <InputLevel>

Specifies the input power level of the source signal as supplied to the Analyzer RF input.

##### Parameters:

<InputLevel>              <numeric value>  
                               \*RST:        0

**Example:**                `CONF:POW:EXP:RF 9`  
 The FSV-K40 option assumes an input signal strength of 9 dBm

**Mode:**                    PHN

**Manual operation:**    See "[Ref Meas](#)" on page 29

---

#### `CONFigure:REFMeas ONCE`

Configures and initiates a reference measurement.

**Example:**                `CONF:REFM ONCE`  
 A reference measurement is started.

**Mode:**                    PHN

## 2.2.4 DISPlay Subsystem

The DISPLay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display.

DISPlay[:WINDow<n>]:TRACe<t>[:STATe].....	70
DISPlay[:WINDow<n>]:TRACe<t>:MODE.....	70
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:APERture.....	71
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe].....	71
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:TYPE.....	72
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO.....	72
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel.....	73
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet.....	73

---

### DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace. The other measurements are not aborted but continue running in the background.

#### Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

#### Parameters:

<State> ON | OFF

\*RST: ON for TRACe1, OFF for TRACe2 to 6

**Example:** DISP:TRAC3 ON

**Manual operation:** See "Blank" on page 33

---

### DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]`.

The number of measurements for AVERAge, MAXHold and MINHold is defined with the `[SENSe:]AVERAge<n>:COUNT` or `[SENSe:]SWEep:COUNT` commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

#### Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

**Parameters:**

<Mode> WRITE | VIEW | AVERage | MAXHold | MINHold | BLANK

\*RST: WRITe for TRACe1, STATe OFF for  
TRACe2/3/4/5/6

For details on trace modes refer to [Chapter 2.1.18, "Trace Mode Overview"](#), on page 44.

**Example:**

INIT:CONT OFF

Switching to single sweep mode.

SWE:COUN 16

Sets the number of measurements to 16.

DISP:TRAC3:MODE MAXH

Switches on the calculation of the maximum peak for trace 3.

INIT;\*WAI

Starts the measurement and waits for the end of the 16 sweeps.

**Manual operation:**

See ["Clear Write"](#) on page 32

See ["Max Hold"](#) on page 32

See ["Min Hold"](#) on page 32

See ["Average"](#) on page 32

See ["View"](#) on page 33

**DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:APERture <Value>**

Specifies the aperture of the window to be used when trace smoothing is performed.

A single aperture applies to all traces which require smoothing.

**Suffix:**

<n> irrelevant

<t> irrelevant

**Parameters:**

<Value> <numeric value>

\*RST: 0

**Example:**

DISP:TRAC1:SMO:APER 1

Sets the smoothing window for trace 1 to 1 %

**Usage:**

SCPI confirmed

**Mode:**

PHN

**Manual operation:**

See ["Trace Settings"](#) on page 17

See ["Smoothing"](#) on page 18

**DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe] <State>**

Specifies whether smoothing of a particular trace is carried out.

**Suffix:**

<n> irrelevant

<t> 1...3  
trace

**Parameters:**

<State> ON | OFF  
\*RST: OFF

**Example:** DISP:TRAC1:SMO 1  
Specifies that smoothing of trace 1 is to be performed

**Usage:** SCPI confirmed

**Mode:** PHN

**Manual operation:** See "Smoothing" on page 33

**DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:TYPE <Type>**

Specifies whether linear or logarithmic smoothing is to be used when trace smoothing is performed.

**Suffix:**

<n> irrelevant

<t> 1...3  
trace

**Parameters:**

<Type> LINear | LOGarithmic  
\*RST: LIN

**Example:** DISP:TRAC1:SMO:TYPE LIN  
Sets the smoothing type for trace 1

**Usage:** SCPI confirmed

**Mode:** PHN

**Manual operation:** See "Smoothing Type" on page 18

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO <Mode>**

This command turns automatic scaling of the y-axis on and off.

If on, the R&S FSVA/FSV determines the ideal scale of the y-axis for the current measurement results.

**Suffix:**

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.



<t> only 1  
trace

**Parameters:**

<Mode> **ON**  
Automatic scaling is on.  
**OFF**  
Automatic scaling is off.  
**ONCE**  
Automatic scaling is performed once.  
\*RST: OFF

**Example:**

DISP:WIND2:TRAC:Y:SCAL:AUTO ONCE  
Activates automatic scaling of the Y-axis for the active trace

**Mode:**

CDMA, EVDO, OFDM, OFDMA/WiBro, PHN

**Manual operation:**

See "Autoscale Once" on page 17  
See "Autoscale Y Axis" on page 29  
See "Autoscale Once" on page 30

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>**

This command defines the reference level.

With the reference level offset  $\neq 0$ , the value range of the reference level is modified by the offset.

**Suffix:**

<n> irrelevant.

<t> irrelevant

**Parameters:**

<ReferenceLevel> The unit is variable.  
Range: see datasheet  
\*RST: -10dBm

**Example:**

DISP:TRAC:Y:RLEV -60dBm

**Manual operation:**

See "Y Axis Top" on page 17  
See "Y Axis Top" on page 30

**DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>**

This command defines a reference level offset.

**Suffix:**

<n> irrelevant.

<t> irrelevant

**Parameters:**

<Value>                    Range:        -200 to 200  
                                  \*RST:        0  
                                  Default unit: dB

**Example:**                    DISP:TRAC:Y:RLEV:OFFS -10dB

**Manual operation:**    See "Trace Offset" on page 18

## 2.2.5 FETCh Subsystem

The FETCh subsystem contains commands for reading out results of complex measurement tasks. This subsystem is closely linked to the CONFigure and SENSE subsystems.

FETCh:PNOise:RFM?.....	74
FETCh:PNOise:RPM?.....	74
FETCh:PNOise:RMS?.....	74

---

### FETCh:PNOise:RFM?

Returns the measured Residual FM result for the specified trace.

**Example:**                    FETC:PNO1:RFM?  
                                  Returns the Residual FM result for Trace1

**Usage:**                      Query only

**Mode:**                      PHN

---

### FETCh:PNOise:RPM?

Returns the measured Residual PM result for the specified trace.

**Example:**                    FETC:PNO2:RPM?  
                                  Returns the Residual PM result for Trace2

**Usage:**                      Query only

**Mode:**                      PHN

---

### FETCh:PNOise:RMS?

Returns the measured Residual RMS result for the specified trace.

**Example:**                    FETC:PNO3:RMS?  
                                  Returns the Residual RMS result for Trace3

**Usage:**                      Query only

**Mode:**                      PHN

## 2.2.6 FORMat subsystem

FORMat[:DATA].....	75
FORMat:DEXPort:DSEParator.....	75

---

### FORMat[:DATA] <Format>

This command selects the data format for the data transmitted from the R&S FSVA/FSV to the controlling computer. It is used for the transmission of trace data. The data format of trace data received by the instrument is automatically recognized, regardless of the format which is programmed.

#### Parameters:

<Format>	<b>ASCIi</b> ASCII data are transmitted in plain text, separated by commas.
	<b>REAL</b> REAL data are transmitted as 32-bit IEEE 754 floating-point numbers in the "definite length block format".
	*RST: ASCII

**Example:**           FORM REAL, 32  
                          FORM ASC

---

### FORMat:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

#### Parameters:

<Separator>	POINT   COMMA
	*RST: (factory setting is POINT; *RST does not affect setting)

**Example:**           FORM:DEXP:DSEP POIN  
                          Sets the decimal point as separator.

**Manual operation:** See "ASCII Trace Export" on page 33  
                          See "Decim Sep" on page 34

## 2.2.7 INITiate subsystem

INITiate<n>:CONTInuous.....	75
INITiate<n>[:IMMediate].....	76
INITiate<n>:DISPlay.....	76

---

### INITiate<n>:CONTInuous <State>

This command determines whether the trigger system is continuously initiated (continuous) or performs single measurements (single).

The sweep is started immediately.

**Suffix:**

<n> irrelevant

**Parameters:**

<State> ON | OFF

\*RST: ON

**Example:**

INIT:CONT OFF

Switches the sequence to single sweep.

INIT:CONT ON

Switches the sequence to continuous sweep.

**Mode:** all

**Manual operation:** See ["Continuous Sweep"](#) on page 30  
See ["Single Sweep"](#) on page 31

### INITiate<n>[:IMMediate]

The command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, you can synchronize to the end of the measurement with \*OPC, \*OPC? or \*WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

**Suffix:**

<n> irrelevant

**Example:**

INIT:CONT OFF

Switches to single sweep mode.

DISP:WIND:TRAC:MODE AVER

Switches on trace averaging.

SWE:COUN 20

Setting the sweep counter to 20 sweeps.

INIT;\*WAI

Starts the measurement and waits for the end of the 20 sweeps.

**Mode:** all

### INITiate<n>:DISPlay <State>

This command configures the behaviour of the display during a single sweep.

<b>Suffix:</b>	
<n>	irrelevant
<b>Parameters:</b>	
<State>	ON   OFF
	<b>ON</b>
	The display is switched on during the measurement
	<b>OFF</b>
	The display is switched off during the measurement
<b>Mode:</b>	PHN

## 2.2.8 INPut Subsystem

The INPut subsystem controls the input characteristics of the RF inputs of the instrument.

INPut:GAIN:STATe .....	77
INPut:PRESelection[:STATe].....	77

---

### INPut:GAIN:STATe <State>

This command turns the preamplifier on and off. (For the exact amplification value, see the data sheet).

With option R&S FSV-B22, the preamplifier only has an effect below 7 GHz.

With option R&S FSV-B24, the amplifier applies to the entire frequency range.

This command is not available when using R&S Digital I/Q Interface (R&S FSV-B17).

<b>Parameters:</b>	
<State>	ON   OFF
*RST:	OFF

**Example:** INP:GAIN:STAT ON  
Turns the preamplifier on.

**Manual operation:** See "Preamplifier (Preselect)" on page 20  
See "Preamplifier" on page 20

---

### INPut:PRESelection[:STATe] <State>

Switches the preselection on or off.

<b>Parameters:</b>	
<State>	ON   OFF
*RST:	OFF

**Example:** INP:PRE:STAT ON  
- preselection is switched on.

**Mode:** PHN

**Manual operation:** See "PreSelector" on page 20

The command is only available with the preselector option B2.

## 2.2.9 INSTRument subsystem

The INSTRument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

<a href="#">INSTRument[:SElect]</a> .....	78
<a href="#">INSTRument:NSElect</a> .....	78

---

### **INSTRument[:SElect]** <Mode>

This command switches between the measurement modes by means of text parameters.

**Parameters:**

<Mode>	<b>PNOise</b>
	Phase Noise Mode (R&S FSV-K40 option)

---

### **INSTRument:NSElect** <Mode>

This command switches between the measurement modes by means of numbers.

**Parameters:**

<Mode>	<b>20</b>
	Phase Noise Mode (R&S FSV-K40 option)

## 2.2.10 MMEMory subsystem

<a href="#">MMEMory:STORe&lt;n&gt;:TRACe</a> .....	78
----------------------------------------------------	----

---

### **MMEMory:STORe<n>:TRACe** <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [Chapter 2.1.19, "ASCII File Export Format"](#), on page 45

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEParator` command (see [FORMat:DEXPort:DSEParator](#) on page 75).

**Suffix:**

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
-----	---------------------------------------------------------------------------------------------------------

**Parameters:**

<Trace>	1 to 3
	Selected a trace.

<FileName> DOS file name  
The file name includes indication of the path and the drive name.  
Indication of the path complies with DOS conventions.

**Example:** MMEM:STOR:TRAC 3, 'TEST.ASC'  
Stores trace 3 in the file TEST.ASC.

**Manual operation:** See "ASCII Trace Export" on page 33

## 2.2.11 SENSE Subsystem

The SENSE command is used to set and get the values of parameters in the remote instrument. The get variant of the SENSE command differs from set in that it takes no parameter values (unless otherwise stated) but is followed by the character '?' and returns the parameter's value in the same format as it is set.

e.g SENS:FREQ 10GHZ – sets the frequency to 10 GHz

SENS:FREQ? – response 10GHZ – returns the current frequency

[SENSe:]ADJust:ALL.....	79
[SENSe:]ADJust:FREQuency.....	80
[SENSe:]ADJust:LEVel.....	80
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	80
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	80
[SENSe:]FREQuency:CENTer.....	81
[SENSe:]FREQuency:START.....	81
[SENSe:]FREQuency:STOP.....	81
[SENSe:]FREQuency:TRACk.....	81
[SENSe:]FREQuency:VERify[:STATe].....	82
[SENSe:]FREQuency:VERify:TOLerance.....	82
[SENSe:]FREQuency:VERify:TOLerance:RELative.....	83
[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution].....	83
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	83
[SENSe:]LIST:RANGe<1..20>:SWEep:COUNT.....	84
[SENSe:]POWer:RLEVel.....	84
[SENSe:]POWer:RLEVel:VERify[:STATe].....	85
[SENSe:]POWer:RLEVel:VERify:TOLerance.....	85
[SENSe:]POWer:TRACk.....	85
[SENSe:]SWEep:COUNT.....	86
[SENSe:]SWEep:FORWard.....	86
[SENSe:]SWEep:MODE.....	86
[SENSe:]SWEep:POINts?.....	87

---

### [SENSe:]ADJust:ALL

This command determines the ideal frequency and level configuration for the current measurement.

**Example:** ADJ:ALL

**Manual operation:** See "Auto All" on page 35

---

**[SENSe:]ADJ:FREquency**

This command defines the center frequency and the reference level automatically by determining the highest level in the frequency span.

**Example:** ADJ:FREQ

**Manual operation:** See "Auto Freq" on page 35

---

**[SENSe:]ADJ:LEVel**

This command automatically sets the optimal reference level for the current measurement.

**Example:** ADJ:LEV

**Manual operation:** See "Auto Level" on page 35

---

**[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio <Ratio>**

This command specifies the RBW value to be used for each sub span as a ratio of the start frequency of the sub span. A value of 10%, for example, specifies that the RBW will be set to 10% of the start frequency value. If the required RBW is not valid, the nearest RBW value is used.

**Parameters:**

<Ratio> percentage of the start frequency  
\*RST: 10 PCT

**Example:** BAND:RAT 1 PCT  
Sets the RBW ratio to 1% of the start frequency

**Mode:** PHN

---

**[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE <FilterType>**

This command defines the filter type for the resolution bandwidth.

**Parameters:**

<FilterType> **NORMAL**  
Gaussian filter  
**FFT**  
FFT filter  
\*RST: NORMAL

**Example:** BAND:TYPE FFT

**Mode:** PHN

---



**[SENSe:]FREQUENCY:CENTer** <Frequency>

This command defines the center frequency (frequency domain) or measuring frequency (time domain).

**Parameters:**

<Frequency>            Range:        0 to f<sub>max</sub>  
                               \*RST:        f<sub>max</sub>/2  
                               Default unit: Hz  
                               f<sub>max</sub> is specified in the data sheet. min span is 10 Hz

**Example:**                `FREQ:CENT 100 MHz`

**Manual operation:**    See "[Frequency](#)" on page 15  
                               See "[Frequency](#)" on page 29

**[SENSe:]FREQUENCY:STARt** <Frequency>

This command specifies the start frequency for a phase noise measurement.

**Parameters:**

<Frequency>            \*RST:        1 kHz

**Example:**                `FREQ:STAR 20kHz`

**Mode:**                    PHN

**Manual operation:**    See "[X Axis Start](#)" on page 17  
                               See "[From](#)" on page 23  
                               See "[X Axis Start](#)" on page 29

**[SENSe:]FREQUENCY:STOP** <Frequency>

This command specifies the stop frequency for a phase noise measurement.

**Parameters:**

<Frequency>            \*RST:        1 MHz

**Example:**                `FREQ:STOP 2 MHz`

**Mode:**                    PHN

**Manual operation:**    See "[X Axis Stop](#)" on page 17  
                               See "[To](#)" on page 23  
                               See "[X Axis Stop](#)" on page 29

**[SENSe:]FREQUENCY:TRACk** <State>

Switches the automatic frequency control on and off.

**Parameters:**

<State>                    ON | OFF  
                               \*RST:        ON

<b>Example:</b>	<code>SENS:FREQ:TRACK ON</code> Sets the automatic frequency control to ON.
<b>Usage:</b>	SCPI confirmed
<b>Mode:</b>	PHN
<b>Manual operation:</b>	See " <a href="#">AFC SettingsTrack Frequency</a> " on page 16 See " <a href="#">Track Freq On/Off</a> " on page 29

#### **[SENSe:]FREQuency:VERify[:STATe] <State>**

Specifies whether frequency and level verification are to be performed before a phase noise measurement.

This command is synonymous with `[SENSe:]POWer:RLEVel:VERify[:STATe]` on page 85.

<b>Parameters:</b>	
<State>	ON   OFF
	*RST: ON

<b>Example:</b>	<code>SENS:FREQ:VER ON</code> Specifies that frequency and level verification is to be performed
<b>Usage:</b>	SCPI confirmed
<b>Mode:</b>	PHN
<b>Manual operation:</b>	See " <a href="#">Verify Freq and Level</a> " on page 15 See " <a href="#">Verify On/Off</a> " on page 28

#### **[SENSe:]FREQuency:VERify:TOLerance <FreqTolerance>**

Specifies the absolute frequency tolerance for the verification of the signal. If the signal frequency varies from the specified center frequency by a value greater than the tolerance then the verification fails.

The setting for this parameter only has an effect if the `[SENSe:]FREQuency:VERify[:STATe]` on page 82 or `[SENSe:]POWer:RLEVel:VERify[:STATe]` on page 85 command is set to ON.

The tolerance used during the measurement is the highest of the absolute and the relative tolerance values.

<b>Parameters:</b>	
<FreqTolerance>	<numeric value>
	*RST: 1 PCT

<b>Example:</b>	<code>SENS:FREQ:VER:TOL 1KHZ</code> Sets the absolute frequency tolerance for the verification measurement to 1 kHz
<b>Usage:</b>	SCPI confirmed
<b>Mode:</b>	PHN

**Manual operation:** See "Frequency Tolerance" on page 16

---

**[SENSe:]FREQuency:VERify:TOLerance:RELative** <FreqTolerance>

Specifies the relative frequency tolerance for the verification of the signal. If the signal frequency varies from the specified center frequency by a value greater than the tolerance then the verification fails.

The setting for this parameter only has an effect if the [SENSe:]FREQuency:VERify[:STATe] on page 82 or [SENSe:]POWer:RLEVel:VERify[:STATe] on page 85 command is set to ON.

The tolerance used during the measurement is the highest of the absolute and the relative tolerance values.

**Parameters:**

<FreqTolerance>      <numeric value> from 0 to 100  
                                  \*RST:      1 PCT

**Example:**                SENS:FREQ:VER:TOL:REL 10  
 Sets the relative frequency tolerance for the verification measurement to 10 %

**Usage:**                    SCPI confirmed

**Mode:**                    PHN

**Manual operation:** See "Frequency Tolerance" on page 16

---

**[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution]** <Value>

This command sets the RBW value for the specified range.

**Suffix:**

<range>                    1...20  
                                  range

**Parameters:**

<Value>                    Refer to the data sheet.  
                                  \*RST:      depends on sub-band

**Example:**                LIST:RANG2:BAND:RES 5000  
 Sets the RBW for range 2 to 5 kHz.

**Mode:**                    PHN

---

**[SENSe:]LIST:RANGe<range>:FILTer:TYPE** <Type>

This command sets the filter type for the specified range (sub-band).

**Suffix:**  
 <range> 1...20  
 range (sub-band)

**Parameters:**  
 <Type> **NORMAL**  
 Gaussian filters  
**FFT**  
 FFT filter  
 \*RST: NORM  
 The available bandwidths of the filters are specified in the data sheet.

**Example:** LIST:RANG1:FILT:TYPE FFT  
 Sets the FFT filter type for range 1.

**Mode:** PHN

**[SENSe:]LIST:RANGe<1..20>:SWEep:COUNT <Value>**

Selects the sweep count for the specified sub-band:

**Parameters:**  
 <Value> <numeric value>  
 \*RST: sub-band dependent

**Example:** SENS:LIST:RANG2:SWE:COUNT 1  
 Sets the sweep count to 1

**Usage:** SCPI confirmed

**Mode:** PHN

**[SENSe:]POWer:RLEVel <Power>**

This command specifies the expected power.

**Parameters:**  
 <Power> **numeric value in dB**  
 Range: -100 to 30  
 \*RST: 10 dB

**Example:** SENS:POW:RLEV 0 DB  
 Sets the expected power level to 0 dB.

**Usage:** SCPI confirmed

**Mode:** PHN

**Manual operation:** See "Level" on page 15  
 See "Level" on page 30

**[SENSe:]POWer:RLEVel:VERify[:STATe] <State>**

Specifies whether frequency and level verification are to be performed before a phase noise measurement.

This command is synonymous with [\[SENSe:\]FREQuency:VERify\[:STATe\]](#) on page 82.

**Parameters:**

<State> ON | OFF  
\*RST: ON

**Example:**

SENS:POW:RLEV:VER 1

Specifies that frequency and level verification is to be performed

**Usage:**

SCPI confirmed

**Mode:**

PHN

**[SENSe:]POWer:RLEVel:VERify:TOLerance <PowerTolerance>**

Specifies the power tolerance for the verification of the signal. If the signal level varies from the specified level by a value greater than the tolerance then the verification fails.

The setting for this parameter only has an effect if the [\[SENSe:\]FREQuency:VERify\[:STATe\]](#) on page 82 or [\[SENSe:\]POWer:RLEVel:VERify\[:STATe\]](#) on page 85 command is set to ON.

**Parameters:**

<PowerTolerance> <numeric value>  
\*RST: 10 dB

**Example:**

SENS:POW:RLEV:TOLerance 5DB

Sets the level tolerance for the verification measurement to 1 dB

**Usage:**

SCPI confirmed

**Mode:**

PHN

**Manual operation:**

See "[Level Tolerance](#)" on page 16

See "[Y Axis Range](#)" on page 17

See "[Y Axis Range](#)" on page 30

**[SENSe:]POWer:TRACK <State>**

Switches the automatic level control on and off.

**Parameters:**

<State> ON | OFF  
\*RST: ON

**Example:**

SENS:POW:TRACK ON

Sets the automatic level control to ON.

**Usage:**

SCPI confirmed

**Mode:** PHN

**Manual operation:** See ["Track Level"](#) on page 16  
See ["Track Level On/Off"](#) on page 28

#### [SENSe:]SWEep:COUNT <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

##### Parameters:

<NumberSweeps> 0 to 32767  
\*RST: 0 (GSM: 200, PHN:1)

##### Example:

```
SWE:COUN 64
Sets the number of sweeps to 64.
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
```

**Manual operation:** See ["Sweep Count"](#) on page 31

#### [SENSe:]SWEep:FORWARD <State>

Specifies the sweep direction. When switched on the sweep direction is from the start frequency to the stop frequency. When switched off the sweep direction is reversed

##### Parameters:

<State> ON | OFF  
\*RST: OFF

##### Example:

```
SENS:SWEep:FORWARD 1
The sweep direction is set to sweep from start to stop frequency
```

**Usage:** SCPI confirmed

**Mode:** PHN

**Manual operation:** See ["Sweep Forward"](#) on page 15

#### [SENSe:]SWEep:MODE <Mode>

This remote control command specifies the general sweep mode for the measurement. The sweep mode is used to set the RBW, Average and FFT settings for each sub-sweep to specific values. When the sweep mode is set to MANUAL then the sub-sweep settings may be specified

##### Parameters:

<Mode> FAST | NORMAL | AVERAGED | MANUAL

**FAST**

Not averaged. The measurement is very fast, as the average column is set to 1 for all sub-bands.

**NORMAL**

Normal averaged. The measurement is slower than the "Fast" mode, but the sub-bands are averaged more.

**AVERaged**

Highly averaged. The measurement is very slow, with high average in each sub-band for more accurate results.

**MANual**

The "RBW", "Average" and "FFT" columns in the "Carrier Frequency Offset Table", as well as the "Preset Settings", can be set by the user (see [\[SENSe:\]LIST:RANGe<range>:BANDwidth\[:RESolution\]](#) on page 83, [\[SENSe:\]SWEep:COUNT](#) on page 86, and [\[SENSe:\]LIST:RANGe<range>:FILTer:TYPE](#) on page 83).

\*RST:       MANual

**Example:**

SENS:SWEep:MODE FAST

'Sets the sweep mode such that each sub-sweep is executed as fast as possible.

**Mode:**

PHN

**[SENSe:]SWEep:POINts? <NumberPoints>**

This command queries the number of points measured for trace 1.

**Parameters:**

<NumberPoints>

**Example:**

SWE:POIN 251

**Usage:**

Query only

**Mode:**

PHN

## 2.2.12 STATus Subsystem

The STATus subsystem contains the commands for the status reporting registers specific to R&S FSV-K40 (see [Chapter 2.2.13, "Status Reporting System"](#), on page 91).

\*RST does not influence the status registers.

<a href="#">STATus:QUESTionable:CONDition</a> .....	88
<a href="#">STATus:QUESTionable[:EVENT]?</a> .....	88
<a href="#">STATus:QUESTionable:PNOise:CONDition?</a> .....	88
<a href="#">STATus:QUESTionable:PNOise:ENABLE</a> .....	89
<a href="#">STATus:QUESTionable:PNOise:PTRansition</a> .....	89
<a href="#">STATus:QUESTionable:PNOise:NTRansition</a> .....	89
<a href="#">STATus:QUESTionable:PNOise[:EVENT]?</a> .....	90
<a href="#">STATus:QUESTionable:LIMit[:EVENT]</a> .....	90

STATus:QUESTionable:POWer[:EVENT]?.....	90
STATus:QUESTionable:LIMit:CONDition.....	90
STATus:QUESTionable:POWer:CONDition?.....	90
STATus:QUESTionable:LIMit:ENABLE.....	90
STATus:QUESTionable:POWer:ENABLE?.....	90
STATus:QUESTionable:LIMit:NTRansition.....	91
STATus:QUESTionable:POWer:NTRansition?.....	91
STATus:QUESTionable:LIMit:PTRansition.....	91
STATus:QUESTionable:POWer:PTRansition?.....	91

---

### STATus:QUESTionable:CONDition

This command queries the CONDition part of the "STATus:QUESTionable" register. This part contains the sum bit of the next lower register. This register part can only be read, but not written into or cleared. Readout does not delete the contents of the CONDition part.

**Example:**                 STAT:QUES:COND?

**Mode:**                    all

---

### STATus:QUESTionable[:EVENT]?

This command queries the contents of the EVENT part of the STATus:QUESTionable register. The EVENT part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it.

**Example:**                 STAT:QUES?

**Usage:**                   Query only

**Mode:**                    all

---

### STATus:QUESTionable:PNOise:CONDition?

Queries the contents of the CONDition section of the STATus:QUESTionable:PNOise register. Readout does not delete the contents of the CONDition section.

**Example:**                 STAT:QUES:PNO:COND?

**Usage:**                   Query only  
SCPI confirmed

**Mode:**                    PHN



**STATus:QUESTIONable:PNOise:ENABLE** <BitDefinition>

Sets the bits of the ENABLE section of the `STATus:QUESTIONable:PNOise[:EVENT]` on page 90. The ENABLE register selectively enables the individual events of the associated EVENT section for the summary bit.

**Parameters:**

<BitDefinition>      Range:      0 to 65535  
                              \*RST:      65535

**Example:**

`STAT:QUES:PNO:ENAB 65535`  
 All events bits are represented in the PNOise summary bit.

**Mode:**                    PHN

**STATus:QUESTIONable:PNOise:PTRansition** <BitDefinition>

Determines what bits in the `STATus:QUESTIONable:PNOise Condition` register sets the corresponding bit in the `STATus:QUESTIONable:PNOise Event` register when that bit has a positive transition (0 to 1). The variable <number> is the sum of the decimal values of the bits that are to be enabled.

**Parameters:**

<BitDefinition>      Range:      0 to 65535  
                              \*RST:      65535

**Example:**

`STAT:QUES:PNO:PTR 65535`  
 All condition bits are summarised in the Event register when a positive transition occurs.

**Mode:**                    PHN

**STATus:QUESTIONable:PNOise:NTRansition** <BitDefinition>

Determines which bits in the `STATus:QUESTIONable:PNOise Condition` sets the corresponding bit in the `STATus:QUESTIONable:PNOise Event` register when that bit has a negative transition (1 to 0). The variable <number> is the sum of the decimal values of the bits that are to be enabled.

**Parameters:**

<BitDefinition>      Range:      0 to 65535  
                              \*RST:      0

**Example:**

`STAT:QUES:PNO:NTR 65535`  
 All condition bits are summarised in the Event register when a positive transition occurs.

**Mode:**                    PHN

**STATus:QUESTIONable:PNOise[:EVENT]?**

This command queries the contents of the EVENT section of the STATus:QUESTIONable:PNOise register. Readout deletes the contents of the EVENT section. Which events can occur is described in [Chapter 2.2.13, "Status Reporting System"](#), on page 91.

**Usage:** Query only

**Mode:** PHN

**STATus:QUESTIONable:LIMit[:EVENT]****STATus:QUESTIONable:POWer[:EVENT]?**

The EVENT part indicates whether an event has occurred since the last reading. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it.

Possible events are described in:

[Chapter 2.2.13.3, "STATus:QUESTIONable:LIMit Register"](#), on page 94

[Chapter 2.2.13.5, "STATus:QUESTIONable:POWer Register"](#), on page 95

**Usage:** Query only  
SCPI confirmed

**Mode:** PHN

**STATus:QUESTIONable:LIMit:CONDition****STATus:QUESTIONable:POWer:CONDition?**

Contains the current status of the instrument. This register part can only be read, but not written into or cleared. Readout does not delete the contents of the CONDition section.

**Usage:** Query only  
SCPI confirmed

**Mode:** PHN

**STATus:QUESTIONable:LIMit:ENABLE****STATus:QUESTIONable:POWer:ENABLE? <Filter>**

Determines whether the EVENT bit of the associated status register contributes to the sum bit of the STATus:QUESTIONable register. Each bit of the EVENT part is "ANDed" with the associated ENABLE bit. The results of all logical operations of this part are passed on to the event sum bit via an "OR" function.

**Parameters:**

<Filter> The sum of the decimal values of the event bits that are to be enabled for the summary bit.

Range: 0 to 65535

**Usage:** Query only  
SCPI confirmed

**Mode:** PHN

**STATus:QUESTionable:LIMit:NTRansition**  
**STATus:QUESTionable:POWer:NTRansition? <Mode>**

This bit acts as a transition filter. When a bit of the `CONDition` part of the associated status register for the result type is changed from 1 to 0, the `NTR` bit decides whether the `EVENT` bit is set to 1.

**Usage:** Query only  
SCPI confirmed

**Mode:** PHN

**STATus:QUESTionable:LIMit:PTRansition**  
**STATus:QUESTionable:POWer:PTRansition?**

This bit acts as a transition filter. When a bit of the `CONDition` part of the associated status register for the result type is changed from 0 to 1, the `PTR` bit decides whether the `EVENT` bit is set to 1.

**Parameters:**

**<Filter>** The sum of the decimal values of the event bits that are to be enabled.

Range: 0 to 65535

**Example:** `STAT:QUES:LIM:PTR 65535`  
All condition bits will be summarized in the Event register when a positive transition occurs.

**Usage:** Query only  
SCPI confirmed


**Mode:** PHN

### 2.2.13 Status Reporting System

In addition to the registers provided by the base system, the following registers are used or modified in the Phase Noise Measurements option (R&S FSV-K40):

- `STATus:OPERation`  
Although this register is provided by the base system, the Noise Figure Measurements option makes use of bits not used within the base system.
- `STATus:QUESTionable`  
Although this register is provided by the base system, the Noise Figure Measurements option makes use of bits not used within the base system.
- `STATus:QUESTionable:LIMit`
- `STATus:QUESTionable:PNOise`

- This register is provided by the R&S FSV-K40 option.
- `STATUS:QUESTIONABLE:POWER`  
 Although this register is provided by the base system, the Noise Figure Measurements option makes use of bits not used within the base system.

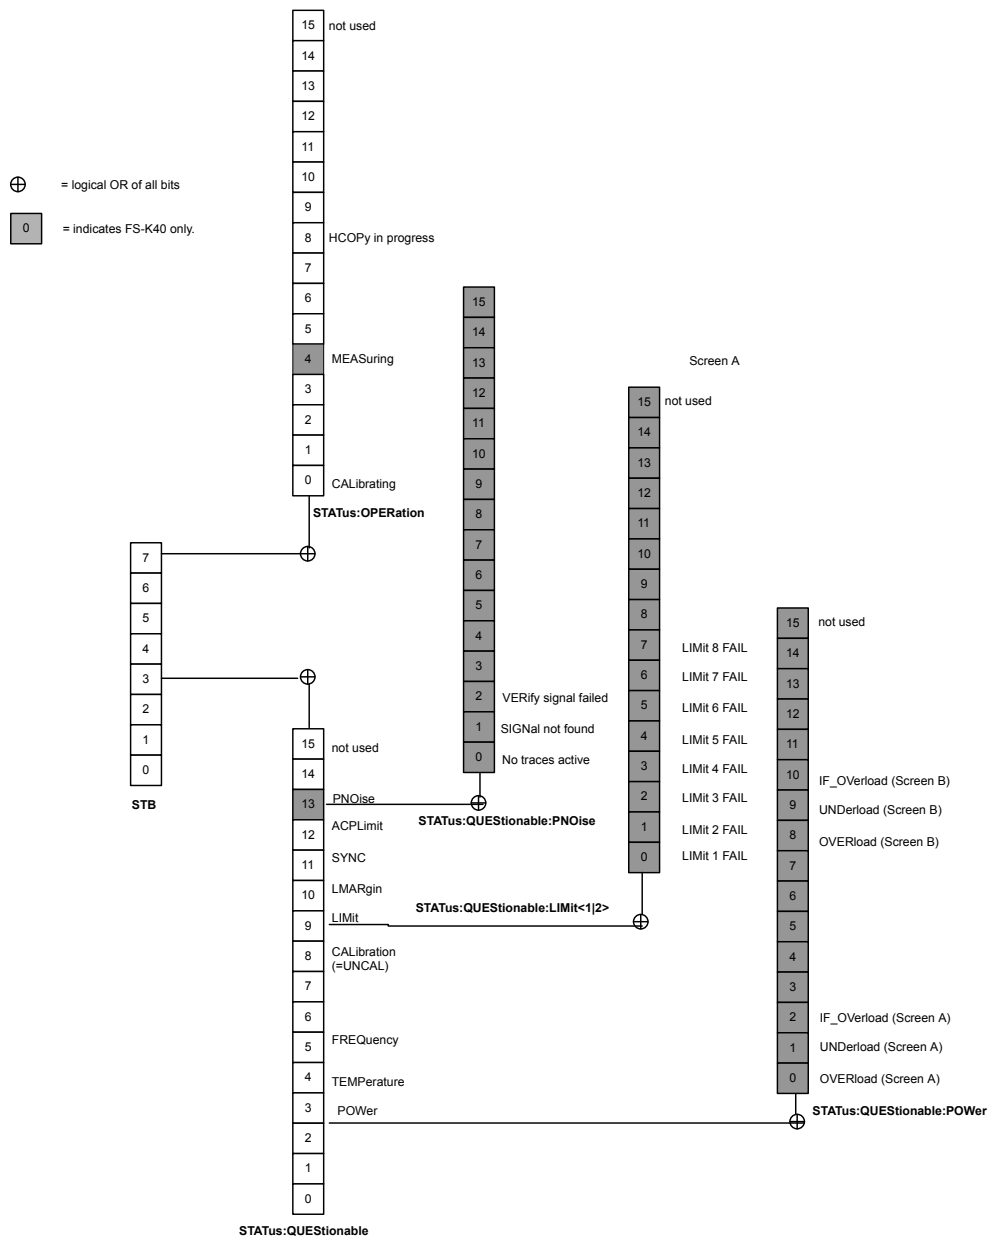

### 2.2.13.1 STATUS:OPERation Register

This register contains information on which actions the instrument is executing or which actions the instrument has executed since the last reading. It can be read using the commands `STATUS:OPERation:CONDition` or `STATUS:OPERation:EVENT`.

**Table 2-3: Meaning of the bits used in the STATus:OPERation register**

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1 - 3	Not used
4	MEASuring This bit is set when a measurement is in progress (R&S FSV-K40 specific)
5 - 7	Not used
8	HardCOpy in progress This bit is set while the instrument is printing a hardcopy.
9 - 14	Not used
15	This bit is always 0.

### 2.2.13.2 STATus:QUEStionable Register

This register contains information about indefinite states which may occur if the unit is operated without meeting the specifications. It can be read using the commands `STATus:QUEStionable:CONDition` or `STATus:QUEStionable[:EVENT]?`.

**Table 2-4: Meaning of the bits used in the STATus:QUEStionable register**

Bit No	Meaning
0 to 2	These bits are not used
3	POWer This bit is set if a questionable power occurs, see <a href="#">Chapter 2.2.13.5, "STATus:QUEStionable:POWer Register"</a> , on page 95
4	TEMPerature This bit is set if a questionable temperature occurs.
5	FREQuency The bit is set if a frequency is questionable
6 to 7	These bits are not used
8	CALibration The bit is set if a measurement is performed uncalibrated (= label "UNCAL")
9	LIMit (device-specific) This bit is set if a limit value is violated (for the Spectrum Mask measurement only), see <a href="#">Chapter 2.2.13.3, "STATus:QUEStionable:LIMit Register"</a> , on page 94
10	LMARgin (device-specific) These bits are not used within R&S FSV-K40
11	SYNC (device-dependent) These bits are not used within R&S FSV-K40
12	ACPLimit These bits are not used within R&S FSV-K40

Bit No	Meaning
13	PNoise This bit is set if a phase noise error occurs, see <a href="#">Chapter 2.2.13.4, "STATUS:QUESTIONable:PNOise Register"</a> , on page 94
14	Not used
15	This bit is always 0

### 2.2.13.3 STATUS:QUESTIONable:LIMit Register

This register contains information about the observance of limit lines. It can be read using the commands `STATUS:QUESTIONable:LIMit:CONDition?` and `STATUS:QUESTIONable:LIMit[:EVENT]?`.

Note that no limit lines are displayed in screen B and as such all bits in the LIMit2 register will always be set to 0.

*Table 2-5: Meaning of the bits used in the STATUS:QUESTIONable:LIMit register*

Bit No	Meaning
0	LIMit FAIL This bit is set if limit line 1 is violated
1	LIMit FAIL This bit is set if limit line 2 is violated
2	LIMit FAIL This bit is set if limit line 3 is violated
3	LIMit FAIL This bit is set if limit line 4 is violated
4	LIMit FAIL This bit is set if limit line 5 is violated
5	LIMit FAIL This bit is set if limit line 6 is violated
6	LIMit FAIL This bit is set if limit line 7 is violated
7	LIMit FAIL This bit is set if limit line 8 is violated
8 to 14	These bits are not used
15	This bit is always 0

### 2.2.13.4 STATUS:QUESTIONable:PNOise Register

The bits in the `STATUS:QUESTIONable:PNOise` register indicate events that occur during phase noise measurements. To query the status use the commands `STATUS:`

`QUESTionable:PNOise:CONDition?` on page 88 or `STATus:QUESTionable:PNOise[:EVENT]?` on page 90.

Bit No	Meaning
0	No traces are active This bit is set when all the traces are switch off.
1	"SIGNal not found" This bit is set if no valid signal is detected
2	"VERify signal failed" This bit is set if verification failed to detect a signal within the supplied tolerances.
3 to 14	These bits are not used
15	This bit is always 0

### 2.2.13.5 STATus:QUESTionable:POWer Register

This register contains all information about possible overloads of the unit. It can be read using the commands `STATus:QUESTionable:POWer:CONDition?` and `STATus:QUESTionable:POWer[:EVENT]?`.

**Table 2-6: Meaning of the bits used in the STATus:QUESTionable:POWer register**

Bit No.	Meaning
0	OVERload (Screen A) This bit is set if the RF input is overloaded. "OVLD" is displayed.
1	UNDerload (Screen A) This bit is set if the RF input is underloaded. "UNLD" is displayed.
2	IF_OVerload (Screen A) This bit is set if the IF path is overloaded. "IFOVL" is displayed.
3 to 7	Not used
8	OVERload (Screen B) This bit is set if the RF input is overloaded. "OVLD" is displayed.
9	UNDerload (Screen B) This bit is set if the RF input is underloaded. "UNLD" is displayed.
10	IF_OVerload (Screen B) This bit is set if the IF path is overloaded. "IFOVL" is displayed.
11 - 14	Not used
15	This bit is always 0.

## 2.2.14 TRACe subsystem

**TRACe<n>[:DATA]? <TraceNumber>**

This command returns the current phase noise trace results as a comma separated list.

**Suffix:**

<n> 1...4  
window; For applications that have only one measurement screen, the suffix is irrelevant.

**Parameters:**

<TraceNumber> TRACe1 | TRACe2 | TRACe3  
Trace name to be read out

**Example:**

TRAC1:DATA? TRACe1  
The measurement data for the selected trace is returned.

**Usage:**

Query only  
SCPI confirmed

**Mode:**

PHN

## 2.2.15 Other Commands Referenced in this Document

[\[SENSe:\]AVERAge<n>:COUNT](#)..... 96

**[SENSe:]AVERAge<n>:COUNT <NoMeasurements>**

This command defines the number of measurements which contribute to the average value.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the `[SENSe<source>:]SWEep:COUNT` command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

**Suffix:**

<n> Selects the measurement window.

**Parameters:**

<NoMeasurements> 0 to 32767  
\*RST: 0



**Example:**

```
SWE:CONT OFF
```

Switching to single sweep mode.

```
AVER:COUN 16
```

Sets the number of measurements to 16.

```
AVER:STAT ON
```

Switches on the calculation of average.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the 16 sweeps.

## List of Commands

[SENSe:]ADJust:ALL.....	79
[SENSe:]ADJust:FREQuency.....	80
[SENSe:]ADJust:LEVel.....	80
[SENSe:]AVERAge<n>:COUNT.....	96
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	80
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	80
[SENSe:]FREQuency:CENTer.....	81
[SENSe:]FREQuency:STARt.....	81
[SENSe:]FREQuency:STOP.....	81
[SENSe:]FREQuency:TRACk.....	81
[SENSe:]FREQuency:VERify:TOLerance.....	82
[SENSe:]FREQuency:VERify:TOLerance:RELative.....	83
[SENSe:]FREQuency:VERify[:STATe].....	82
[SENSe:]LIST:RANGe<1..20>:SWEep:COUNT.....	84
[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution].....	83
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	83
[SENSe:]POWer:RLEVel.....	84
[SENSe:]POWer:RLEVel:VERify:TOLerance.....	85
[SENSe:]POWer:RLEVel:VERify[:STATe].....	85
[SENSe:]POWer:TRACk.....	85
[SENSe:]SWEep:COUNT.....	86
[SENSe:]SWEep:FORWard.....	86
[SENSe:]SWEep:MODE.....	86
[SENSe:]SWEep:POINts?.....	87
CALCulate<n>:DELTaMarker<m>:AOFF.....	52
CALCulate<n>:DELTaMarker<m>:TRACe.....	52
CALCulate<n>:DELTaMarker<m>:X.....	52
CALCulate<n>:DELTaMarker<m>:Y.....	53
CALCulate<n>:DELTaMarker<m>[:STATe].....	52
CALCulate<n>:EVALUation:STARt.....	54
CALCulate<n>:EVALUation:STOP.....	54
CALCulate<n>:EVALUation[:STATe].....	54
CALCulate<n>:LIMit<k>:CLEar[:IMMediate].....	55
CALCulate<n>:LIMit<k>:COMMeNt.....	56
CALCulate<n>:LIMit<k>:CONTRol:SHIFt.....	57
CALCulate<n>:LIMit<k>:CONTRol[:DATA].....	56
CALCulate<n>:LIMit<k>:COpy.....	57
CALCulate<n>:LIMit<k>:DELeTe.....	57
CALCulate<n>:LIMit<k>:FAIL?.....	58
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	59
CALCulate<n>:LIMit<k>:LOWer:STATe.....	59
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	58
CALCulate<n>:LIMit<k>:NAME.....	60
CALCulate<n>:LIMit<k>:STATe.....	60
CALCulate<n>:LIMit<k>:TRACe.....	60
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	61
CALCulate<n>:LIMit<k>:UPPer:STATe.....	61

CALCulate<n>:LIMit<k>:UPPer[:DATA]	61
CALCulate<n>:MARKer<m>:AOFF	63
CALCulate<n>:MARKer<m>:FUNction:ZOOM	63
CALCulate<n>:MARKer<m>:TRACe	64
CALCulate<n>:MARKer<m>:X	65
CALCulate<n>:MARKer<m>:Y	65
CALCulate<n>:MARKer<m>[:STATe]	64
CALCulate<n>:MATH:STATe	68
CALCulate<n>:MATH[:EXPRession][:DEFine]	68
CALCulate<n>:SNOise<m>:AOFF	66
CALCulate<n>:SNOise<m>:STATe	66
CALCulate<n>:SNOise<m>:X	67
CALCulate<n>:SNOise<m>:Y?	67
CONFigure:POWer:AUTO	69
CONFigure:POWer:EXPEcted:RF	69
CONFigure:REFMeas ONCE	69
DISPlay[:WINDow<n>]:TRACe<t>:MODE	70
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:APERture	71
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:TYPE	72
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe]	71
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO	72
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel	73
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet	73
DISPlay[:WINDow<n>]:TRACe<t>[:STATe]	70
FETCH:PNOise:RFM?	74
FETCH:PNOise:RMS?	74
FETCH:PNOise:RPM?	74
FORMat:DEXPort:DSEParator	75
FORMat[:DATA]	75
INITiate<n>:CONTinuous	75
INITiate<n>:DISPlay	76
INITiate<n>[:IMMediate]	76
INPut:GAIN:STATe	77
INPut:PRESElection[:STATe]	77
INSTRument:NSElect	78
INSTRument[:SElect]	78
MMEMory:STORe<n>:TRACe	78
STATus:QUEStionable:CONDition	88
STATus:QUEStionable:LIMit:CONDition	90
STATus:QUEStionable:LIMit:ENABle	90
STATus:QUEStionable:LIMit:NTRansition	91
STATus:QUEStionable:LIMit:PTRansition	91
STATus:QUEStionable:LIMit[:EVENT]	90
STATus:QUEStionable:PNOise:CONDition?	88
STATus:QUEStionable:PNOise:ENABle	89
STATus:QUEStionable:PNOise:NTRansition	89
STATus:QUEStionable:PNOise:PTRansition	89
STATus:QUEStionable:PNOise[:EVENT]?	90
STATus:QUEStionable:POWer:CONDition?	90
STATus:QUEStionable:POWer:ENABle?	90

STATus:QUESTionable:POWer:NTRansition?.....	91
STATus:QUESTionable:POWer:PTRansition?.....	91
STATus:QUESTionable:POWer[:EVENT]?.....	90
STATus:QUESTionable[:EVENT]?.....	88
TRACe<n>[:DATA]?.....	96

# Index

## A

AFC Settings .....	16
Analyzer Settings .....	20
Preamplifier .....	20
Preamplifier (Preselect) .....	20
PreSelector .....	20
Application cards .....	6
Application notes .....	6
ASCII Trace export .....	45
Auto Peak detector .....	40
Auto Set menu .....	35
Autoscale Once .....	17
Average .....	23
Average detector .....	40
Average trace mode .....	32, 45

## B

Blank trace mode .....	33, 45
Brochures .....	6

## C

Carrier Frequency Offset Table .....	22
Characters	
Special .....	50
Clear Write trace mode .....	32, 44
Commands	
Description .....	49
Continuous sweep .....	30

## D

Data sheets .....	6
detector	
overview .....	40
Display settings .....	17

## E

Error Reporting .....	91
export format .....	45

## F

FFT .....	23
Filter type .....	80
Filter types	
Normal (3dB) .....	41
Filters	
Overview .....	42
Selecting .....	41
Types .....	41
Frequency .....	15
Tolerance .....	16

## G

Getting started .....	5
-----------------------	---

## I

IEC/IEEE bus	
Command description .....	49
Instrument security procedures .....	6

## K

Key	
ESC .....	55
MKR .....	35
RUN CONT .....	23
RUN SINGLE .....	23
SWEEP .....	30

## L

Level .....	15
Tolerance .....	16
Limit check .....	38
Limit lines	
Checking .....	38
Editor .....	39
Recalling .....	26
Saving .....	26
Lower-case (commands) .....	50

## M

Marker	
Zoom .....	36
Markers	
Set to trace .....	37
Max Hold trace mode .....	32, 44
Measurement	
Results .....	24
Running .....	23
Settings .....	20
Time .....	23
Menu	
Auto Set (Phase Noise) .....	35
Min Hold trace mode .....	32, 44

## N

Negative Peak detector .....	40
------------------------------	----

## O

Online help	
Working with .....	7
Overwrite mode .....	32, 44

## P

Positive Peak detector .....	40
------------------------------	----

## R

Range .....	23
RBW .....	23
Ratio .....	80

Recalling		T1-T3->T1	34
Limit lines	26	T2-T3->T2	34
Results	26	Trace 1 2 3 4 5 6 (remote control)	70
Settings	26	Trace Math (remote control)	68
Release notes	6	Trace Math Off	34
Residual Calculations	19	Value (remote control)	56, 57, 58, 59, 61
Eval From	19	Softkey	
To	19	Auto Freq	35
Use Meas Settings	19	Auto Level	35
Results		Autoscale Once	30
Recalling	26	Autoscale Y Axis	29
Saving	26	Average	32, 45
RMS		Blank	33, 45
VBW	41	Center (remote control)	81
RMS detector	40	Clear Write	32, 44
RUN CONT key	23	Cont Meas (remote control)	75
RUN SINGLE key	23	Continuous Sweep	30
<b>S</b>		Continuous Sweep (remote control)	75
Safety instructions	6	Decim Sep (remote control)	75
Sample detector	40	Delete	38
Saving		Display Settings	27
Limit lines	26	Edit	38
Results	26	Frequency	29
Settings	26	General Settings	27
SCPI		Insert	38
Conformity information	49	Level	30
Security procedures	6	Marker 1 to 4 (remote control)	53, 65
Service manual	5	Marker 1/2/3/4	36
Settings		Marker to Trace	37
Measurement	28	Marker to Trace (remote control)	64
Recalling	26	Marker Zoom	36
Saving	26	Max Hold	32, 44
Signal Settings	15	Meas Settings	28
Smoothing	18	Min Hold	32, 44
Type	18	New	37
softkey		Preamp On/Off (remote control)	77
All Marker Off	36	Preset Settings	29
ASCII Trace Export	33	Ref Level (remote control)	73
Auto All	35	ref meas	29
Cont Meas (remote control)	76	Residual Calc	27
Continue Single Sweep (remote control)	76	Save	38
Continuous Sweep (remote control)	76	Save (remote control)	78
Copy to (remote control)	57	Select 1 2 3 4 (remote control)	65
Decim Sep	34	Signal Settings	27
Delete (remote control)	57	Single Meas (remote control)	75
Edit (remote control)	56, 61	Single Sweep	31
Limit Line Select dialog box (remote control)	59, 61	Single Sweep (remote control)	75
Marker 1 (remote control)	52	Smoothing	71
Marker 1 to 4 (remote control)	52, 64, 65	Smoothing %	28
Marker 2 (remote control)	52	Smoothing%	71
Marker 3 (remote control)	52	Span Start	28
Marker 4 (remote control)	52	Span Stop	28
Marker Norm/Delta	36	Spot Noise	27
Marker Norm/Delta (remote control)	52	Start (remote control)	81
Marker to Trace (remote control)	52	Start Frequency (remote control)	81
Marker Zoom (remote control)	63	Stop (remote control)	81
Name (remote control)	60	Stop Frequency (remote control)	81
New (remote control)	56, 61	Subspan RBW	28
Ref Level Offset (remote control)	73	Sweep Count (remote control)	86
REFMEAS	69	Sweep List (remote control)	83
Select 1 2 3 4 (remote control)	64	Sweep Mode	28
Select Traces to check (remote control)	60	Sweep Points (remote control)	87
Single Meas (remote control)	76	SWEEPOUT	84
Single Sweep (remote control)	76	Trace Mode (remote control)	70
Sweep Count	31, 33	Trace Settings	27
		Track Freq On/Off	29
		Track Level On/Off	28

TRACKFREQON/OFF .....	81
TRACKLEVELON/OFF .....	85
Verify On/Off .....	28
VERIFYON/OFF .....	82
View .....	33, 45
X Axis Start .....	29
X Axis Stop .....	29
Y Axis Range .....	30
Y Axis Top .....	30
Span Settings .....	22
Special characters .....	50
Spot Noise	
Enable .....	20
Offset Freq1,2,3,4 .....	20
Settings .....	19
Start Frequency .....	23
Start Offset .....	22
Status registers	
STATus:OPERation .....	92
STATus:QUEStionable .....	93
STATus:QUEStionable:LIMit .....	94
STATus:QUEStionable:POWer .....	95
Stop Frequency .....	23
Stop Offset .....	22
sweep	
count .....	31, 33
Sweep	
Continuous .....	30
Single .....	31
Sweep Forward .....	15
Sweep Mode Settings .....	21
<b>T</b>	
Trace	
Clear Write .....	32, 44
Offset .....	18
Settings .....	18
Trace mode	
Average .....	32, 45
Blank .....	33, 45
Clear Write .....	32, 44
Max Hold .....	32, 44
Min Hold .....	32, 44
View .....	33, 45
Track Frequency .....	16
Track Level .....	16
<b>U</b>	
Upper-case (commands) .....	50
<b>V</b>	
VBW	
RMS detector .....	41
Verify Freq and Level .....	15
View trace mode .....	33, 45
<b>W</b>	
White papers .....	6
<b>X</b>	
X Axis Start .....	17
X Axis Stop .....	17
<b>Y</b>	
Y Axis Range .....	17
Y Axis Top .....	17
<b>Z</b>	
Zoom .....	36
Amplitude .....	33, 45